



PHILCO

MODELS L-1651, L-1652, & L-1653

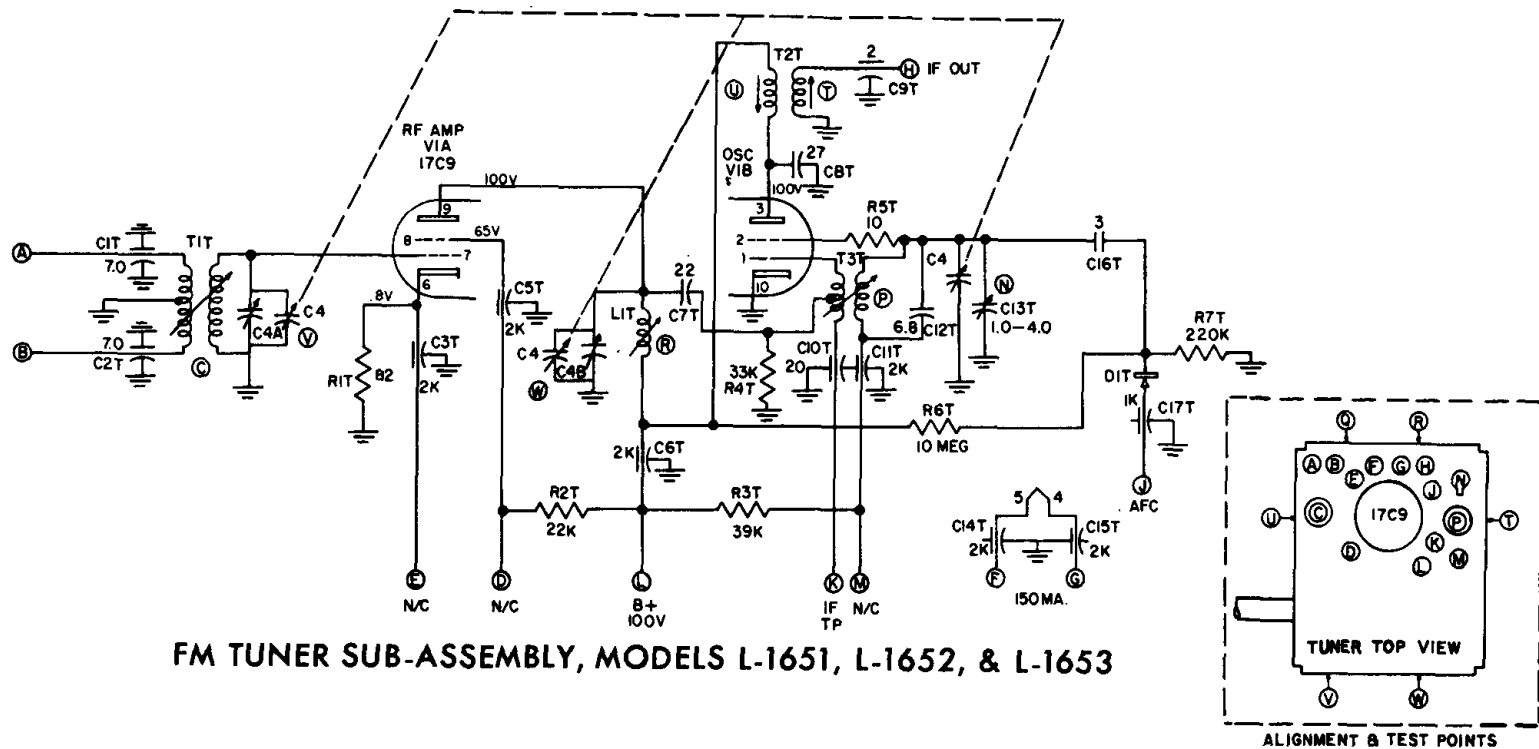


FM TUNER SUB-ASSY. REMOVAL - MODELS L-1651, L-1652 & L-1653

1. Remove 8 screws holding front faceplate to chassis.
2. Remove faceplate and large pulley connected to AM tuning gang. DO NOT REMOVE dial cord.
3. Remove connecting cord from FM and AM tuning gang pulleys only.
4. Unsolder 6 wires that connect tuner to chassis.
5. Remove 4 sheet metal screws holding front and back of tuner in chassis.
6. Remove tuner by forcing from chassis.

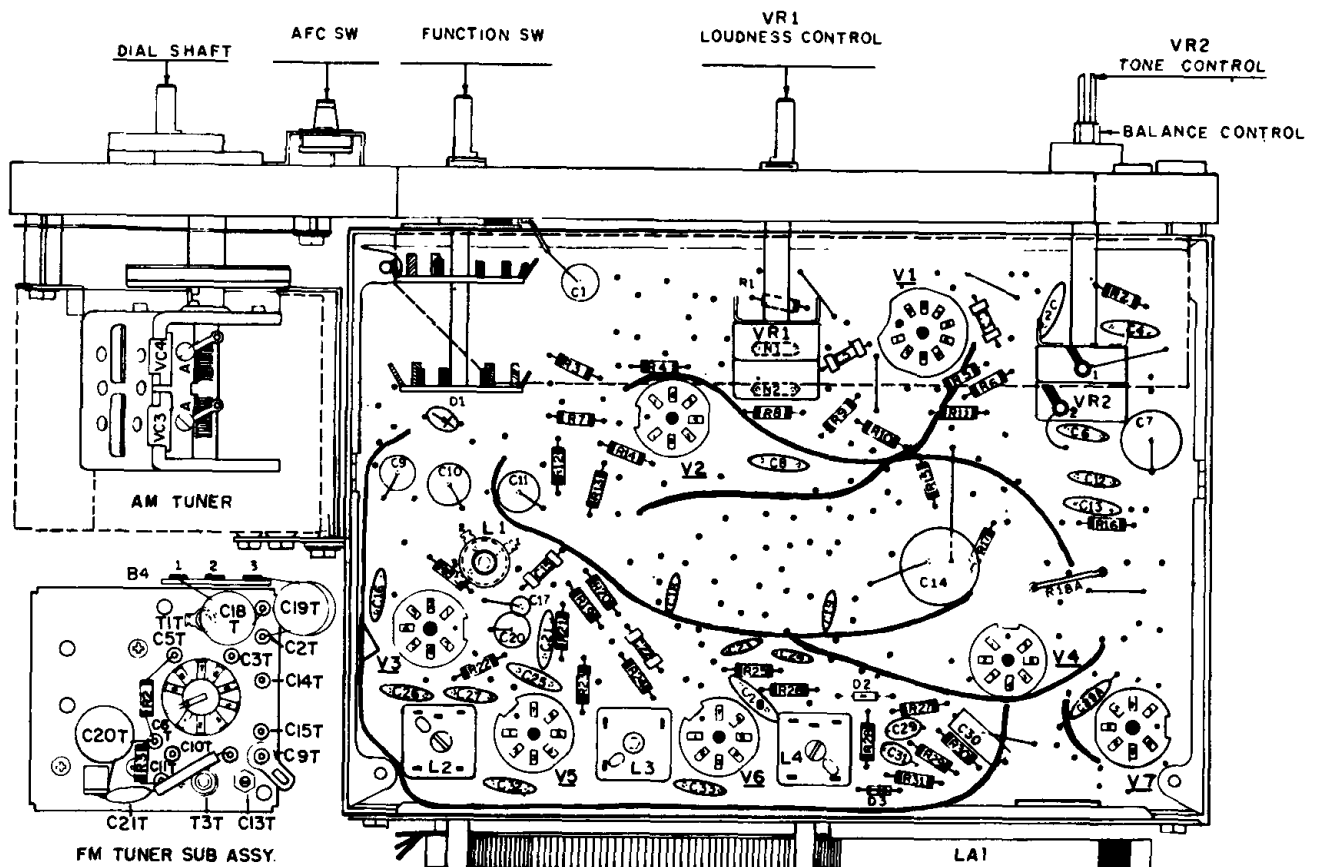


Top View Component Location Model L-1651

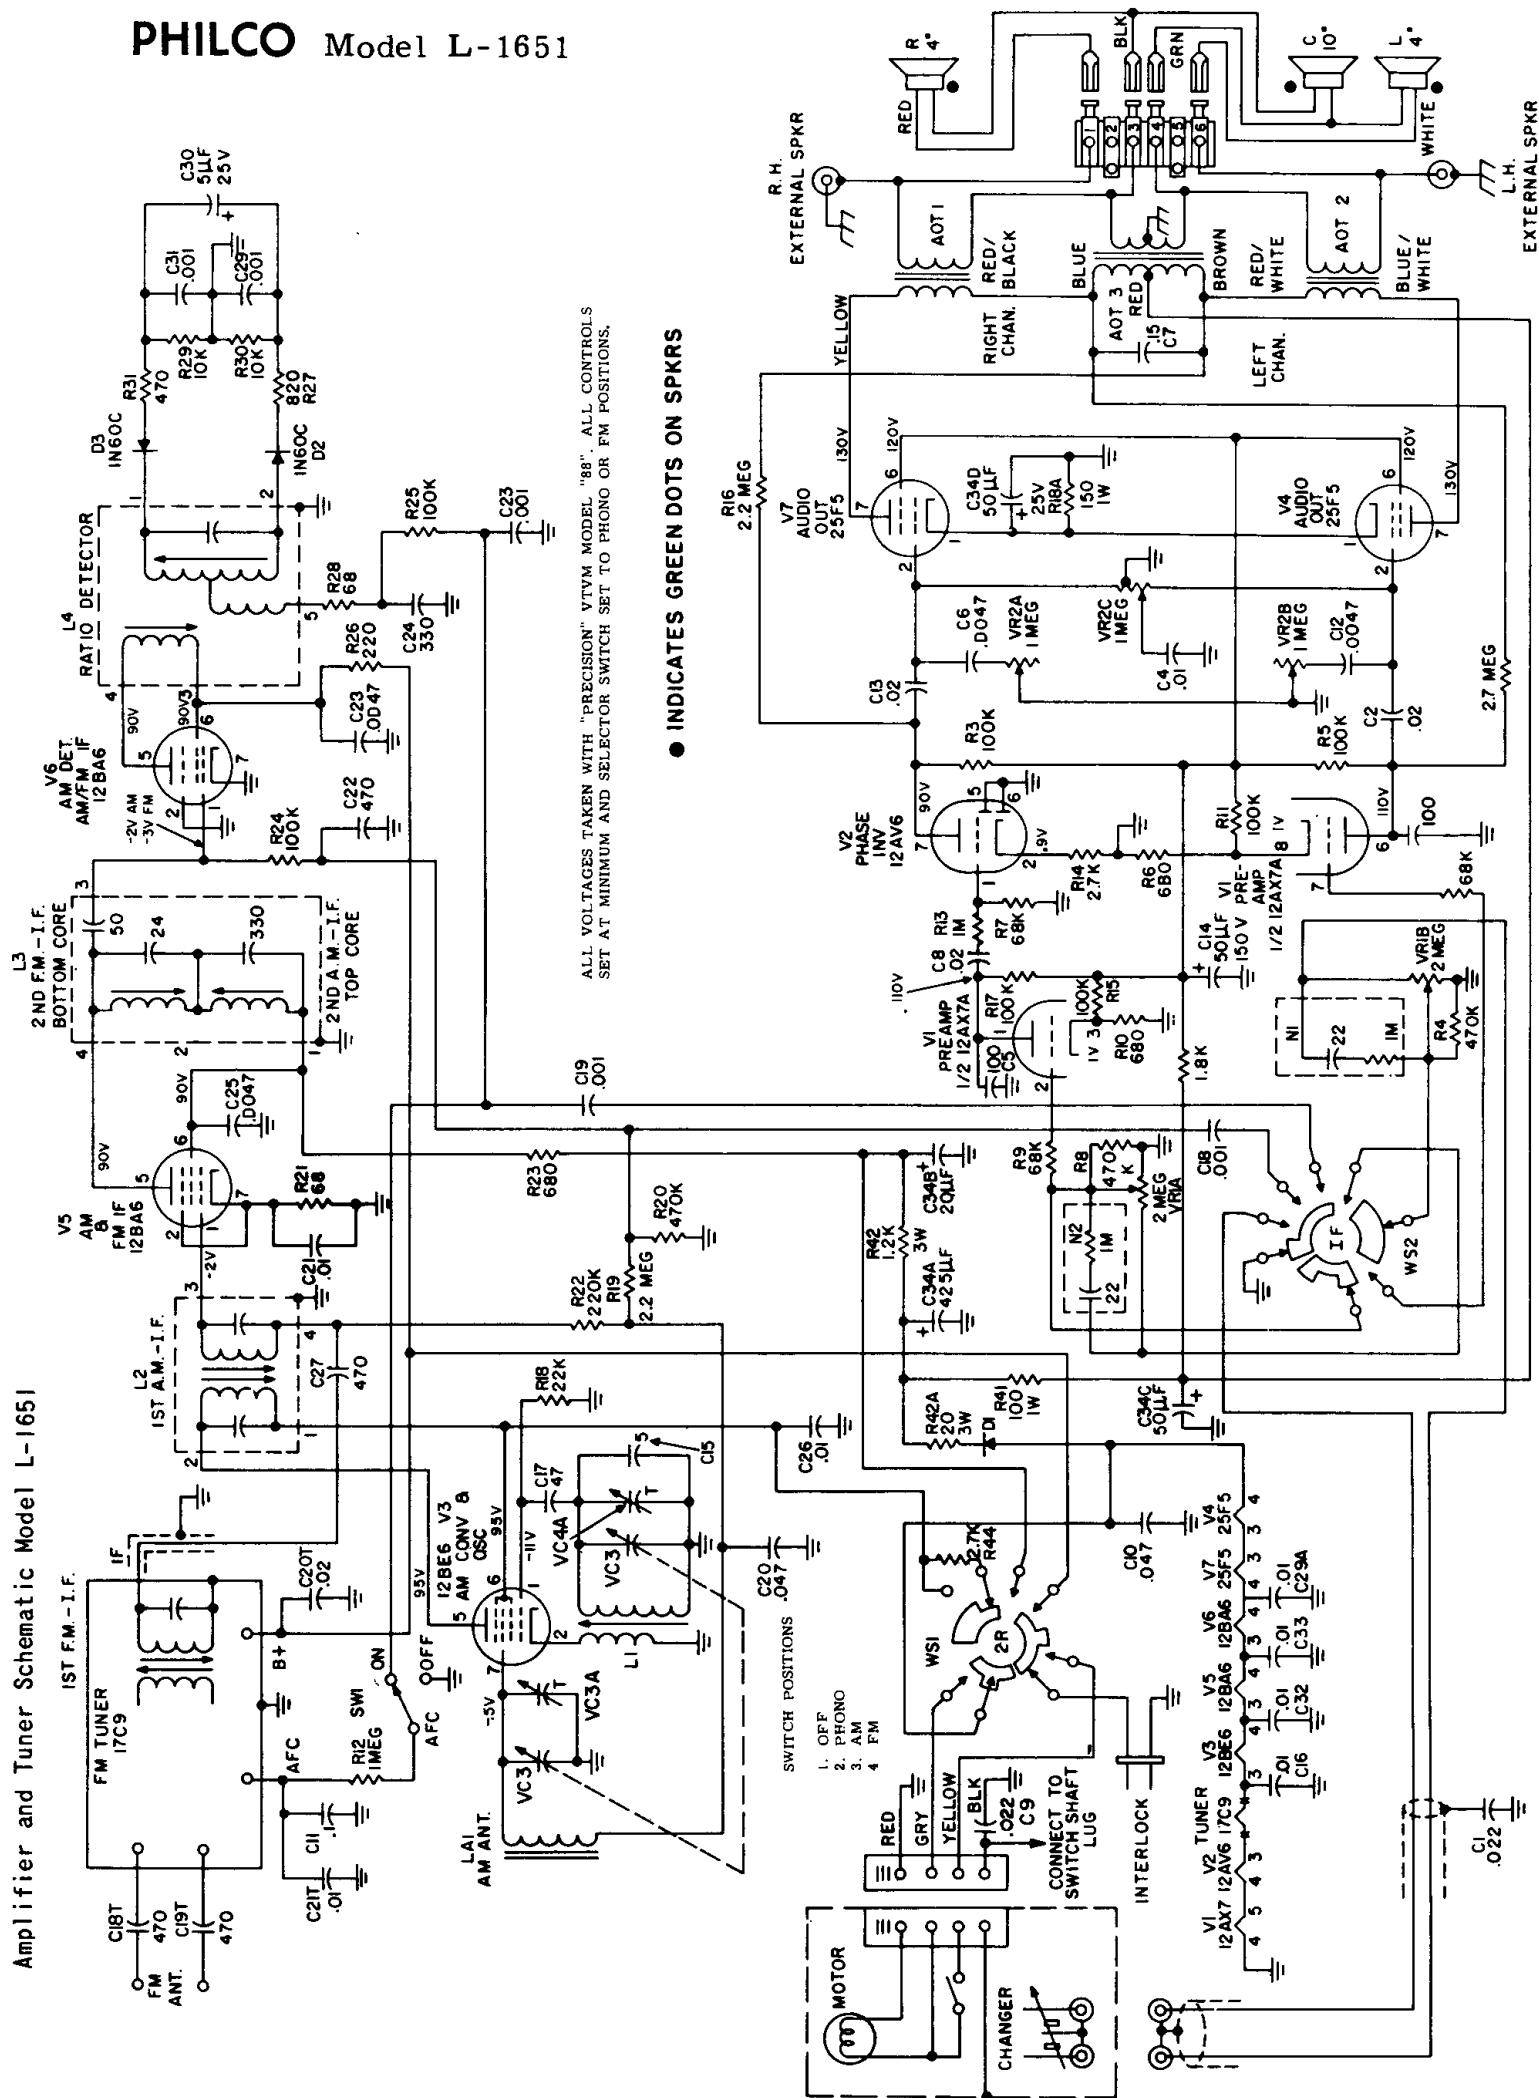

PHILCO MODELS L-1652 & L-1653

ALL VOLTAGES TAKEN WITH "PRECISION" VTVM MODEL "88". ALL CONTROLS SET AT MINIMUM AND SELECTOR SWITCH SET TO PHONO OR FM POSITIONS.

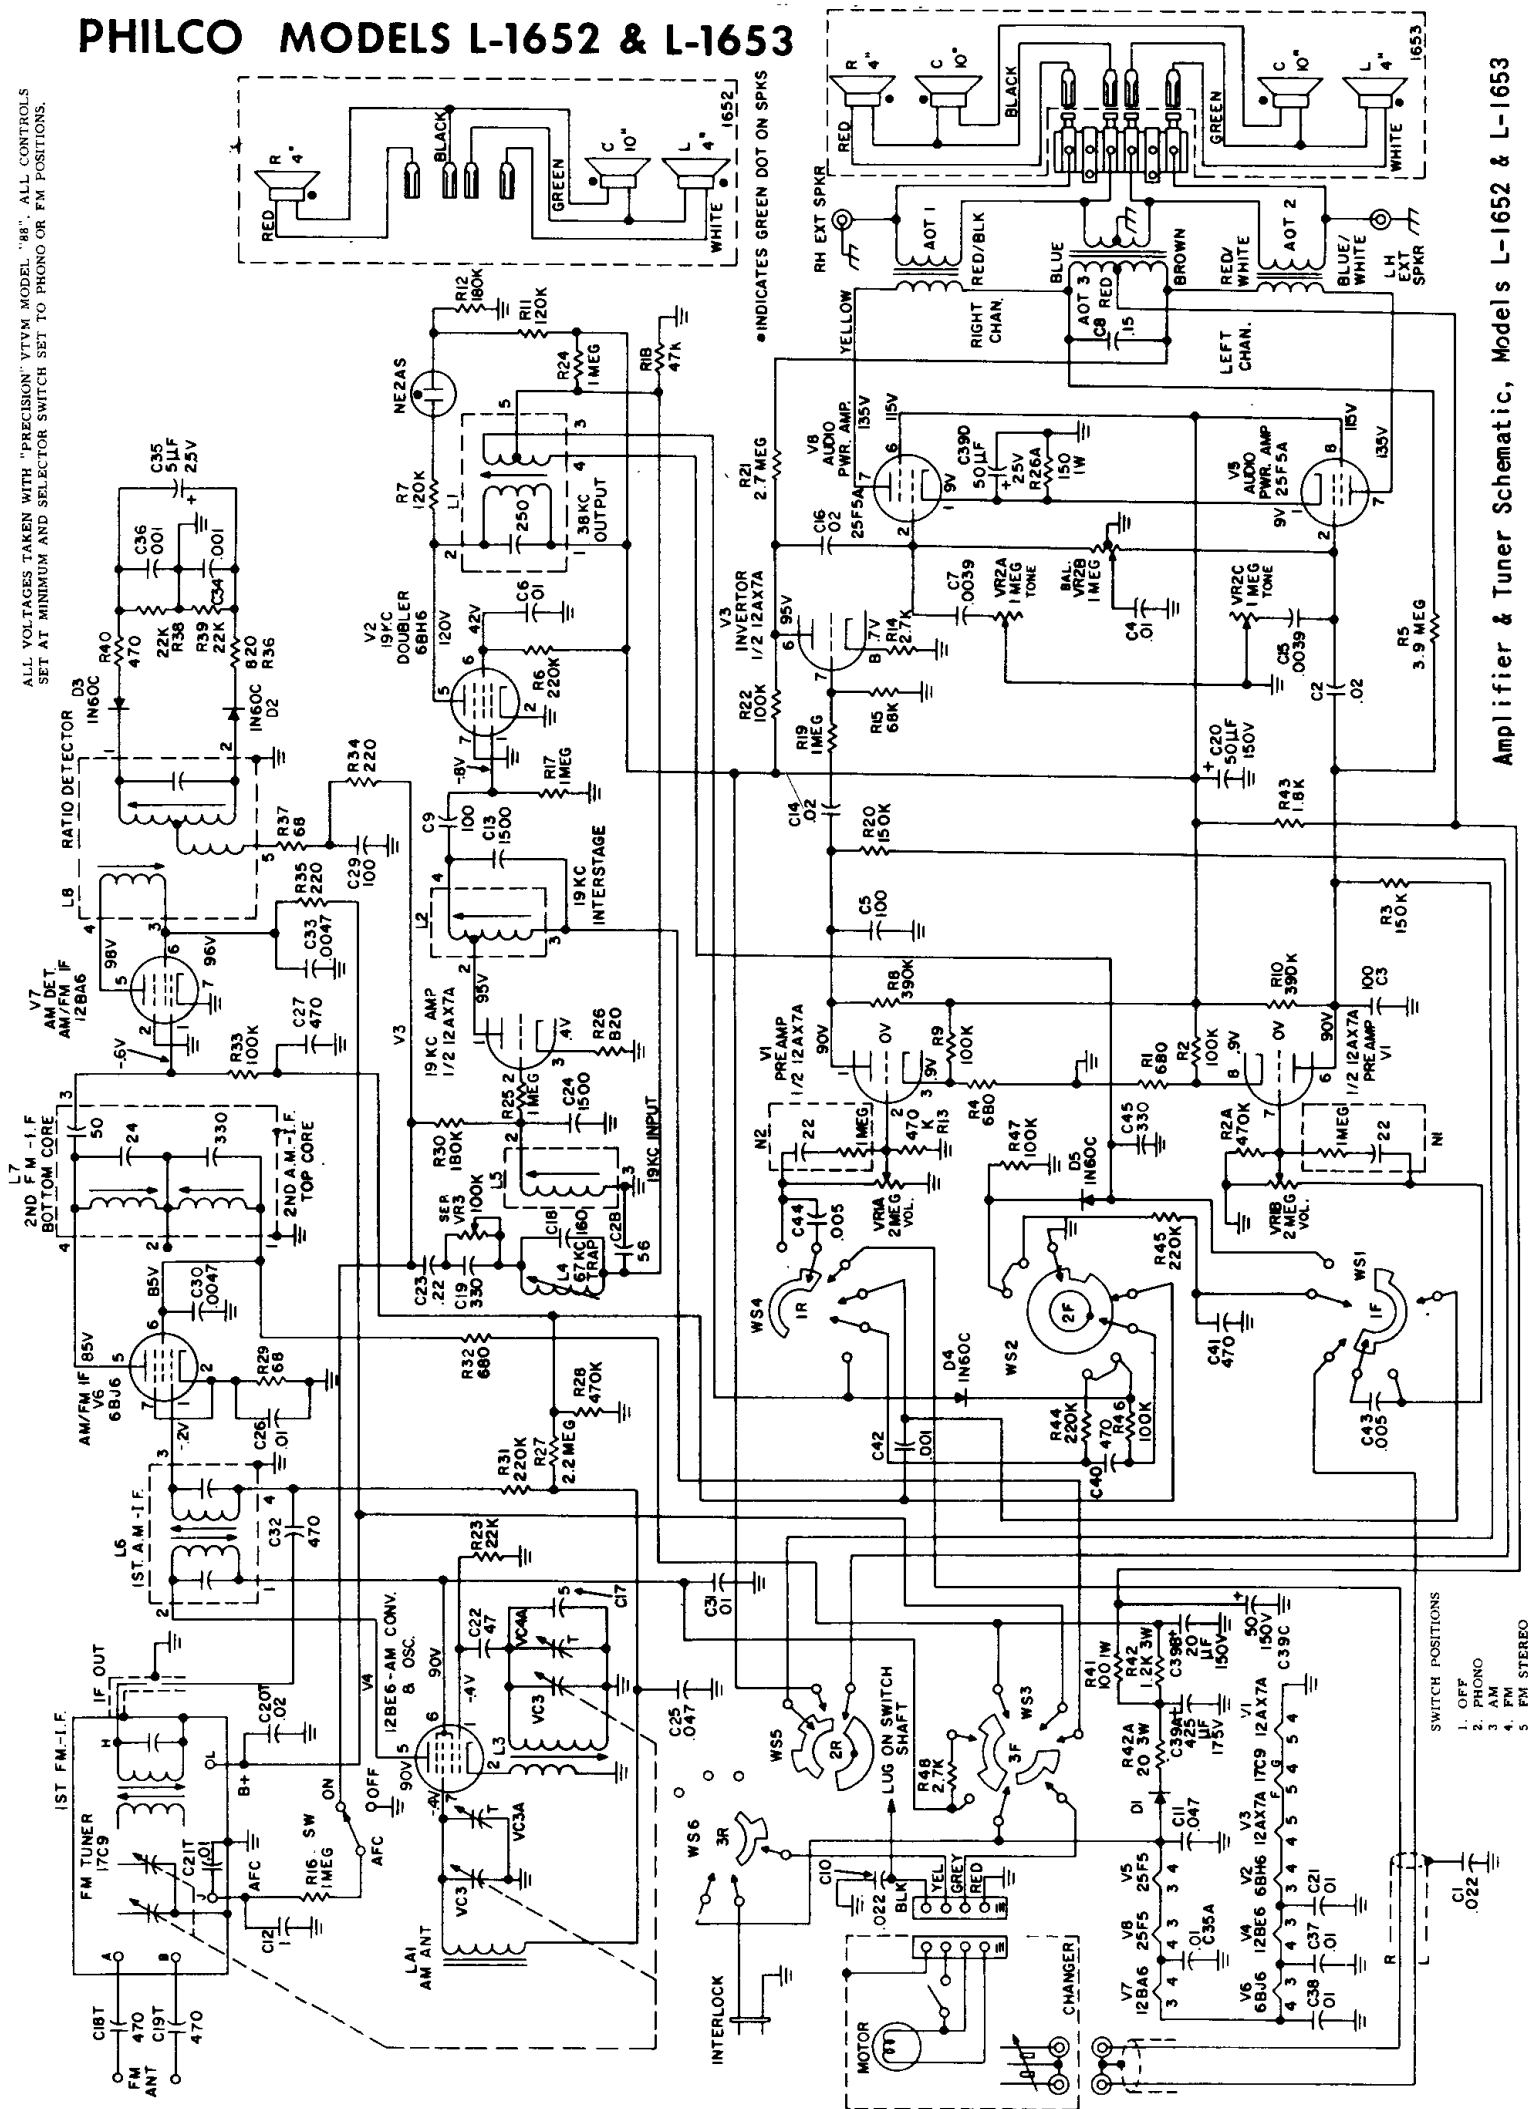

Amplifier & Tuner Schematic, Models L-1652 & L-1653