


RADIO WIRE TELEVISION MODEL J4

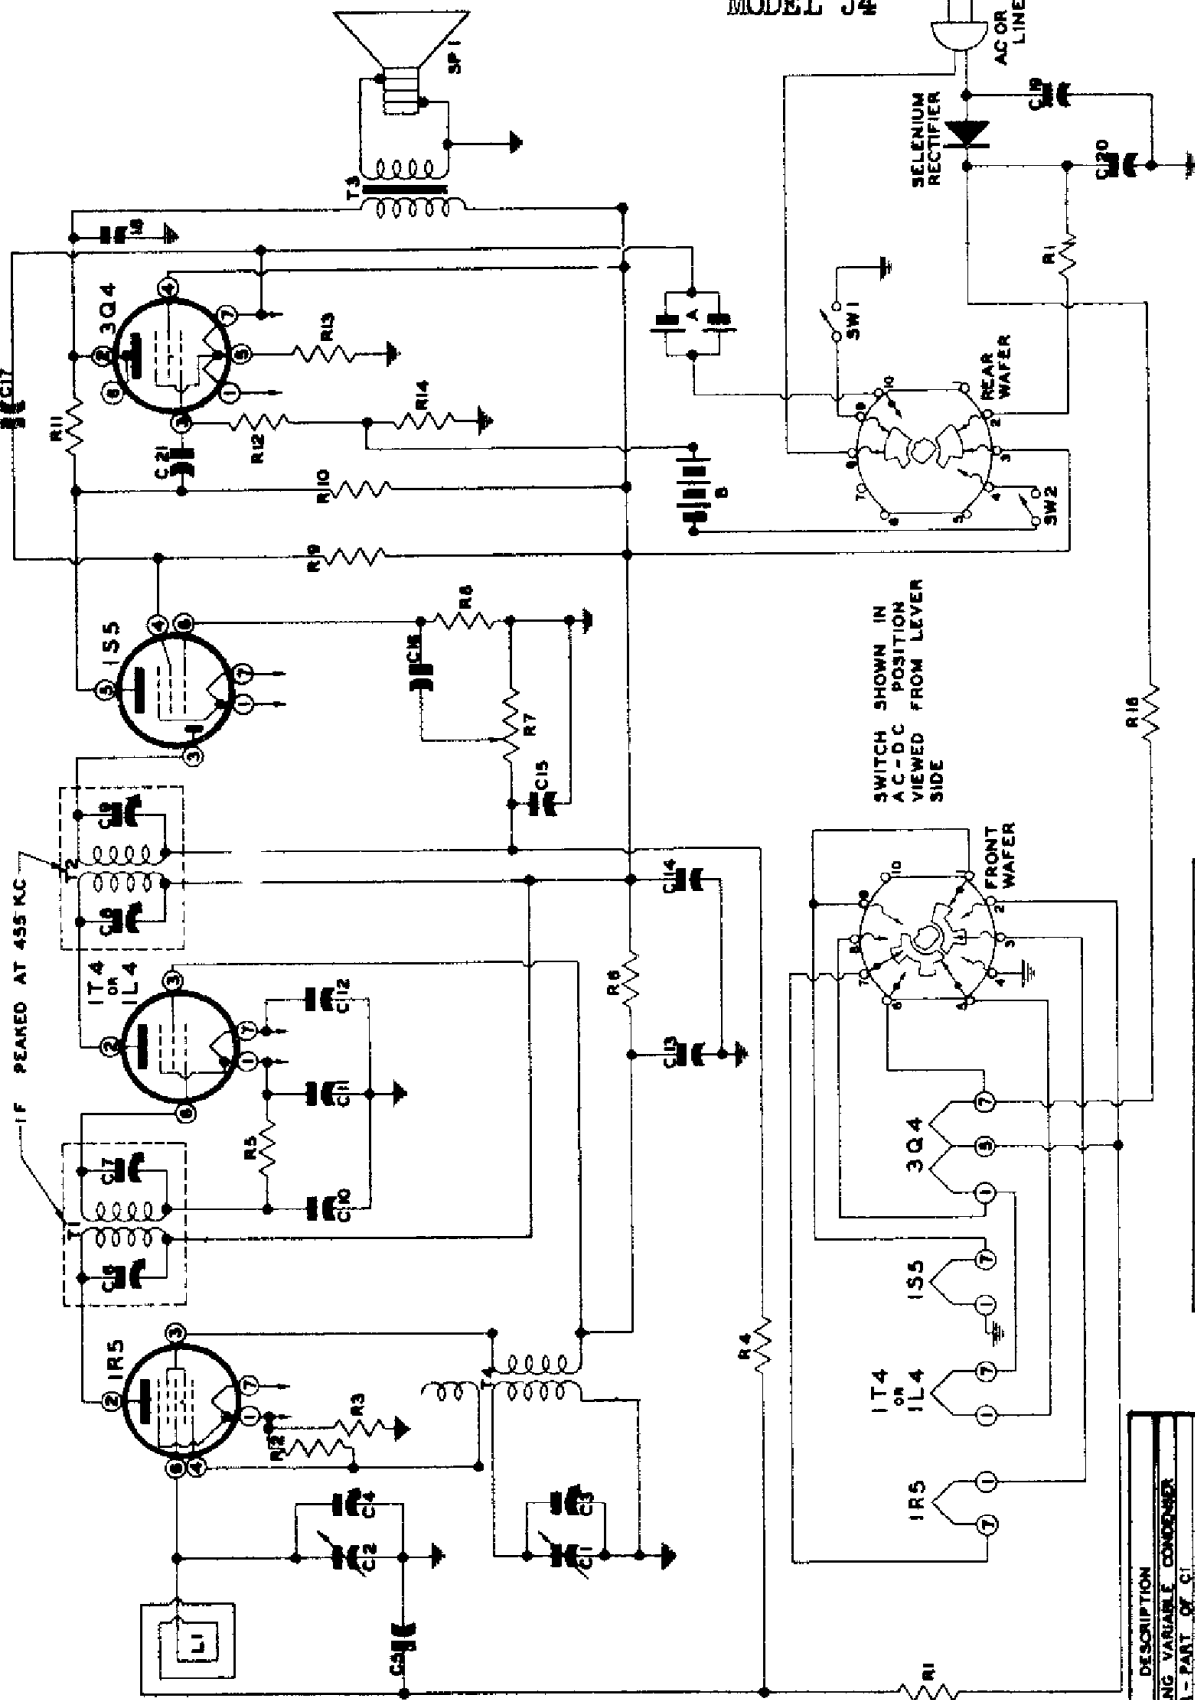

SW1, SW2 ON-OFF SWITCH ON VOLUME CONTROL
AC-DC SWITCH SHOWN IN POSITION VIEWED FROM LEVER SIDE

ITEM	DESCRIPTION
C1, C2	TWO GANG VARIABLE CONDENSER
C3	TRIMMER - PART OF C1
C4	TRIMMER - PART OF C2
C5	.05 MF 150 VOLTS
C6, C7	TRIMMERS - PART OF T1
C8, C9	TRIMMERS - PART OF T2
C10	.01 MF 150 VOLTS
C11	.01 MF 150 VOLTS
C12	200 MF 10 VOLTS - SECTION OF ELECT.
C13	.01 MF 150 VOLTS
C14	20 MF 150 VOLTS - SECTION OF ELECT.
C15	50 MMF MICA
C16	.002 MF 150 VOLTS
C17	.002 MF 150 VOLTS
C18	.004 MF 200 VOLTS
C19	.45 MF 450 VOLTS - SECTION OF ELECT.
C20	.45 MF 150 VOLTS - SECTION OF ELECT.
C21	.004 MF 150 VOLTS
L1	LOOP ANTENNA
SP1	3 P.M. SPEAKER

ITEM	DESCRIPTION
R1	10 MEG OHMS 1/4 WATT
R2	10000 OHMS 1/4 WATT
R3	500 OHMS 1/4 WATT
R4	4.7 MEG OHMS 1/4 WATT
R5	4.7 MEG OHMS 1/4 WATT
R6	10000 OHMS 1/4 WATT
R7	1 MEG OHMS 1/4 WATT
R8	4.7 MEG OHMS 1/4 WATT
R9	4.7 MEG OHMS 1/4 WATT
R10	1 MEG OHMS 1/4 WATT
R11	4.7 MEG OHMS 1/4 WATT
R12	4.7 MEG OHMS 1/4 WATT
R13	470 OHMS 1/4 WATT
R14	330 OHMS 1/4 WATT
R15	2700 OHMS 1/4 WATT
R16	2500 OHMS 10 WATTS
SW1, SW2	ON-OFF SWITCH ON VOLUME CONTROL
T1	FIRST IF TRANSFORMER
T2	SECOND IF TRANSFORMER
T3	OUTPUT TRANSFORMER
T4	OSCILLATOR COIL
A	TWO 1/2VOLT TYPE 10 CELLS
B	.67/2 VOLTS NO. 487 MINIMAX BATT