

Replacement Parts for Model 86

PART NAME		PART No.		
①	Volume Control	3076	Speaker Plug	2871-A
②	R. F. Transformer (Antenna Tuning)	3075-B	②⑦ Speaker Cone and Voice Coil	2898
③ - ④ - ⑤ - ⑥	Tuning Condenser (complete with drum and scale)	3001-B	②⑧ Speaker Field Coil	2896
⑦	Range Control	3133	Cable Spring	3012
⑧ - ⑨ - ⑩ - ⑪	Neutralizing Condenser	3025-A	Control Knob Tuning Condenser	3035-A
⑫ - ⑬ - ⑭ - ⑮	R. F. Transformer	3075-A	Control Knob (Volume and Range Control)	3036-A
⑯ - ⑰ - ⑱ - ⑲	By-Pass Condenser (.1 mfd. with Plate Resistor Winding)	3292-A	226 Tube Socket	3051-A
⑳	Compensating Condensers	3282-A	Condenser Drive Cable	3054-A
㉑	Grid Leak	3083	Knob Spring	3103
㉒	Grid Condenser	3082	Fibre Adjusting Wrench	3164
㉓	Audio Transformer	3241	280 Tube Socket	3169-A
㉔	By-Pass Condenser (.001 mfd.)	3081	171 Tube Socket	3170-A
㉕	Detector R. F. Choke	3256-A	Pilot Lamp Socket Assembly	3202-A
㉖	Phonograph Pick-Up Jack	3087	Jack Insulator Nut	3231
㉗	Push-Pull Input Transformer	3242	Terminal Panel Assembly	3236-A
㉘	Power-Toggle Switch	3253	Speaker Socket	3247-A
㉙	Primary Tap Switch	3116	227 Tube Socket, Spring Type	3263-A
㉚	Filament By-Pass Condenser (2 sections .5 mfd.)	3080	Jack Insulator	3272
㉛	6-Ohm Hum Adjuster	3096	A.C. Attachment Cord and Plug	L-943-A
㉜	Pilot Lamp	3105	Wiring Cable	L-1037
㉝	Power Transformer (60 cycle)	3271	Speaker Cable	L-1039
㉞	Filter Condenser Block (60 cycle)	3246	Socket Wrench for Speaker Mounting Bolts	3312
㉟	Filter Choke Coil	3269	<i>Note:—When ordering replacements for 25-cycle Receivers (Model 83) use the following part numbers instead of those given above. All other part numbers remain the same.</i>	
㊱	B-C Section Resistor	3232	③② Power Transformer (25 cycle)	3278
㊲	Push-Pull Output Transformer	2897	③③ Filter Condenser Block (25 cycle)	3279

Replacement Parts for Model 87

PART NAME		PART No.		
①	Volume Control	3076	③④ Detector Resistor	3542
②	R. F. Transformer (Antenna Tuning)	3075-B	③⑤ B-C Resistor	3399
③ - ④ - ⑤ - ⑥	Tuning Condenser (Complete with Drum and Scale)	3001-B	③⑥ Push-Pull Output Transformer	2848
⑦	Range Control	3133	③⑦ Speaker Cone and Voice Coil	2844-A
⑧ - ⑨ - ⑩ - ⑪	Neutralizing Condenser	3441-A	③⑧ Speaker Field Coil	2850
⑫ - ⑬ - ⑭ - ⑮	R. F. Transformer	3075-A	Speaker Plug	2871-A
⑯ - ⑰ - ⑱ - ⑲	By-Pass Condenser (.1 mfd. with Plate Resistor Winding)	3292-A	Cable Spring	3012
⑳	Compensating Condensers	3435-A	Control Knob Tuning Condenser	3301 -A
㉑	Grid Leak	3083	Control Knob (Volume and Range Control)	3300 -A
㉒	Grid Condenser	3082	Condenser Drive Cable	3484
㉓	Audio Transformer	3241	Knob Spring	3306
㉔	By-Pass Condenser (.001 mfd.)	3081	Fibre Adjusting Wrench	3164
㉕	Detector R. F. Choke	3256-A	4-Hole Tube Socket	3423-A
㉖	Push-Pull Input Transformer	3242	Pilot Lamp Socket Assembly	3202-A
㉗	Power Toggle Switch	3501	Terminal Panel Assembly	3236-A
㉘	Filament By-Pass Condenser (2 Sections .5 mfd.)	3080	Speaker Socket	3464-A
㉙	6-Ohm Hum Adjuster	3096	5-Hole Tube Socket	3442-A -A
㉚	Pilot Lamp	3463	A.C. Attachment Cord and Plug	L-943-A -A
㉛	Power Transformer	3400	Speaker Cable	L-1056-A -A
㉜	Filter Condenser Block	3401	Socket Wrench for Speaker Mounting Bolts	3312 -A
㉝	Filter Choke Coil (First)	3422	Tuning Scale	3398 -A
㉞	Filter Choke Coil (Second)	3472	Oscillator Kit	3540 -A
			Wood Switch Plug	3627 -A

