

No.	Description	Part No.
①	Antenna Choke .....	65-0102
②	Condenser (.01 Mfd.) .....	61-0014
③	Tuning Condenser .....	65-0047
④	Antenna Padder (on Tun. Cond.) .....	65-0023
⑤	Antenna Transformer .....	77-0545
⑥	Aerial Compensator .....	61-0101
⑦	Condenser (.05 Mfd.) .....	61-0101
⑧	Condenser (.05 Mfd.) .....	61-0101
⑨	Resistor (3,300 ohms) .....	33-233334
⑩	Condenser (.05 Mfd.) .....	61-0101
⑪	Resistor (68,000 ohms) .....	33-368154
⑫	Condenser (250 Mmfd.) .....	61-0033
⑬	Resistor (330 ohms) .....	33-193336
⑭	Resistor (100,000 ohms) .....	33-410154
⑮	Low Frequency Padder .....	63-0048
⑯	Oscillator Transformer .....	65-0052
⑰	Oscillator Padder (on Tun. Cond.) .....	61-0033
⑱	Condenser (250 Mmfd.) .....	61-0033
⑲	Condenser (30 Mmfd.) .....	60-030337
⑳	Resistor (68,000 ohms) .....	33-368333
㉑	Padder (Pri. 1st I. F. Trans.) .....	61-0101
㉒	First I. F. Transformer .....	65-0319
㉓	Padder (Sec. 1st I. F. Trans.) .....	61-0101
㉔	Condenser (.05 Mfd.) .....	61-0101
㉕	Resistor (680 ohms) .....	33-168336
㉖	Resistor (1,000,000 ohms) .....	33-510154
㉗	Padder (Pri. 2nd I. F. Trans.) .....	65-0320
㉘	Second I. F. Transformer .....	65-0320
㉙	Resistor (27,000 ohms) .....	33-327154
㉚	Padder (Sec. 2nd I. F. Trans.) .....	61-0103
㉛	Condenser (6,000 Mmfd.) .....	61-0103
㉜	Volume Control (350,000 ohms) .....	67-0632-1
㉝	Resistor (15,000 ohms) .....	33-315154
㉞	Condenser (.01 Mfd.) .....	61-0114
㉟	Flament Choke .....	32-1604
㊱	Resistor (4,700 ohms) .....	33-247354
㊲	Resistor (15,000,000 ohms) .....	33-615154
㊳	Resistor (320,000 ohms) .....	33-422354
㊴	Condenser (4,000 Mmfd.) .....	61-0129
㊵	Condenser (250 Mmfd.) .....	61-0033
㊶	Tune Control Switch .....	65-0111
㊷	Condenser (.01 Mfd.) .....	61-0100
㊸	Resistor (470,000 ohms) .....	33-447154
㊹	Filter Condenser (10-15-30 Mfd.) .....	61-0039
㊺	Resistor (220 ohms) .....	33-122498
㊻	Condenser (.01 Mfd.) .....	61-0124
㊼	Output Transformer .....	65-0317
㊽	Condenser (250 Mmfd.) .....	61-0033
㊾	Replacement Core (For 73-0045-2 Speaker) .....	91-0086
㊿	(For 73-0045-3 Speaker) .....	91-0126
1	(For 73-0047-2 Speaker) .....	91-0086
2	(For 73-0047-3 Speaker) .....	91-0126
3	Field Coil .....	Not Replaceable
4	Condenser (250 Mmfd.) .....	61-0033
5	On-Off Switch .....	85-0112
6	Condenser (.5 Mfd.) .....	61-0106
7	Condenser (250 Mmfd.) .....	61-0033
8	Condenser (250 Mmfd.) .....	61-0033
9	Vibrator .....	85-0025
10	Resistor (220 ohms) .....	33-122334
11	Vibrator Choke .....	65-0075
12	Condenser (.5 Mfd.) .....	61-0137
13	Power Transformer .....	65-0318
14	Condenser (3,000 Mmfd.) .....	61-0115
15	Resistor (1,000 ohms) .....	33-210434
16	Condenser (22,000 ohms) .....	33-324344
17	Condenser (25 Mfd.) .....	61-0125
18	Condenser (.05 Mfd.) .....	61-0111
19	Resistor (1,000 ohms) .....	33-210336
20	Interference Condenser .....	30-4007
21	Distributor Resistor .....	33-1196

