
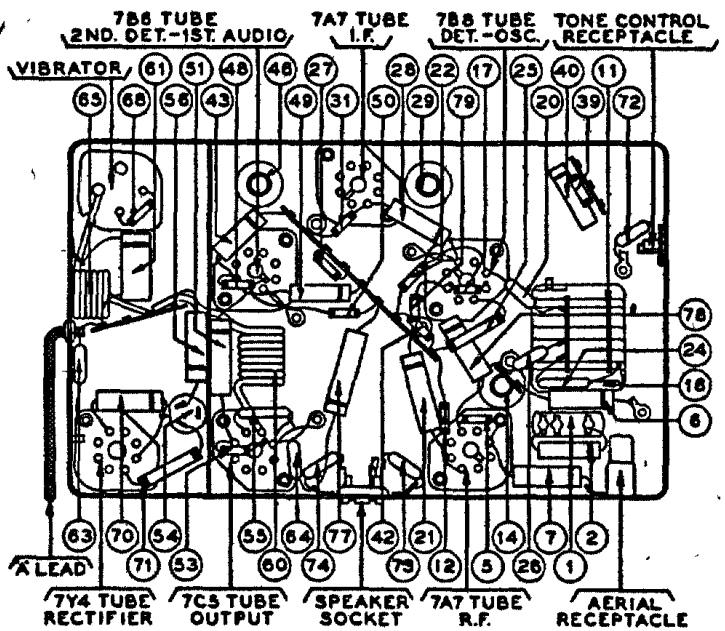
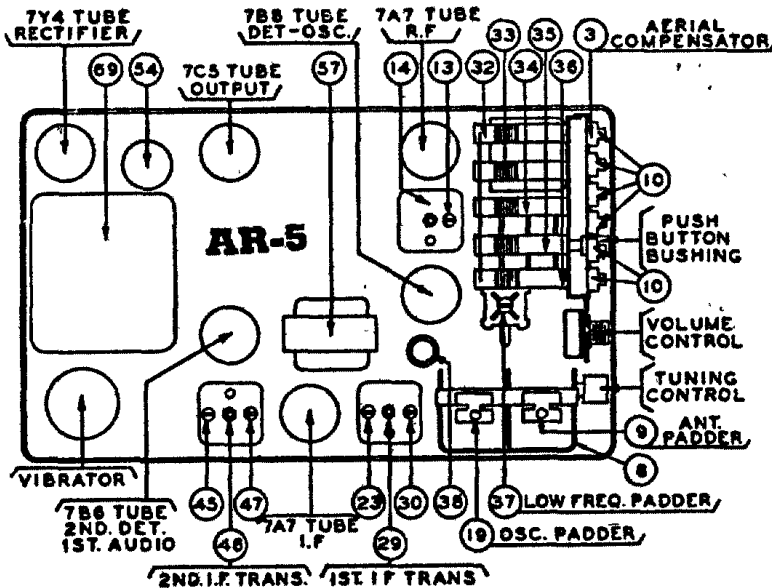


I.F. = 455KC

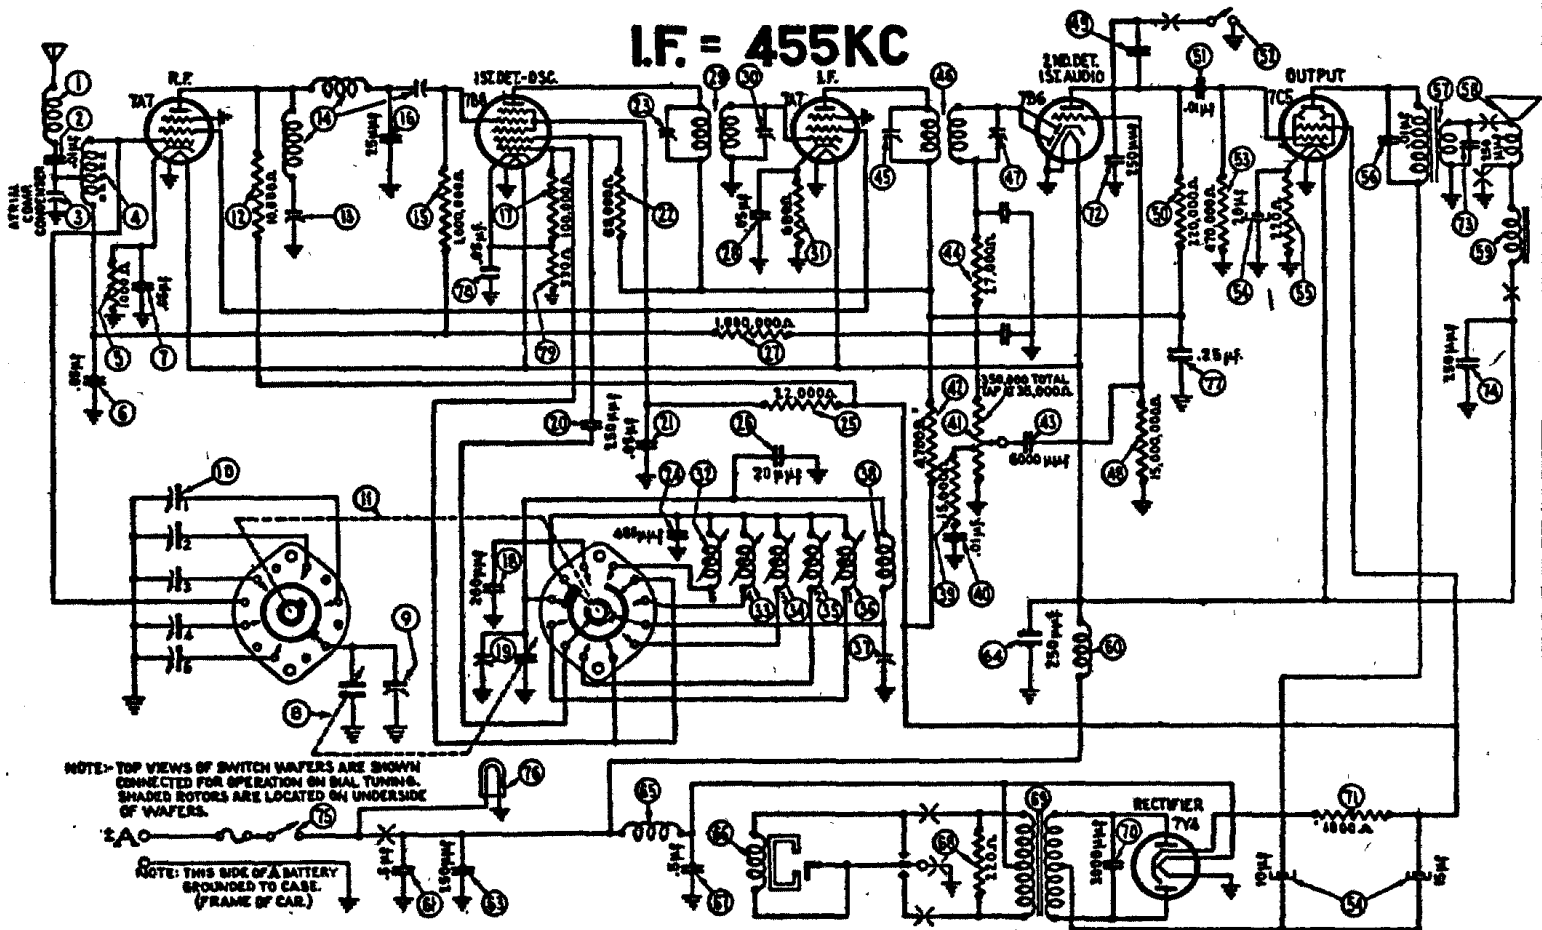

No.	Description	Part No.
1	Antenna Choke	85-0102
2	Condenser (.01 Mfd.)	81-0114
3	Aerial Compensator	Part of 3
4	Antenna Transformer	85-0323
5	Resistor (1,000 ohms)	33-210338
6	Condenser (.05 Mfd.)	81-0101
7	Condenser (.05 Mfd.)	81-0111
8	Tuning Condenser	83-0047
9	Antenna Padder (on Tun. Cond.)	77-0512
10	Antenna Padder Assembly	77-0506
11	Wafer Switch	77-0506
12	Resistor (10,000 ohms)	33-310334
13	I. F. Wave Trap Padder	85-0321
14	R. F. Transformer	85-0321
15	Resistor (1,000,000 ohms)	33-510154
16	Condenser (25 Mmfd.)	80-1087
17	Resistor (100,000 ohms)	33-410154
18	Silver Mica Condenser (280 Mmfd.)	81-0043
19	Oscillator Padder (on Tun. Cond.)	81-0033
20	Condenser (.05 Mfd.)	81-0101
21	Resistor (88,000 ohms)	33-368334
22	Padder (Pri. 1st I. F. Trans.)	81-0144
23	Silver Mica Condenser (485 Mmfd.)	81-0144
24	Resistor (22,000 ohms)	33-325434
25	Condenser (15 Mmfd.)	81-0039
26	Resistor (1,000,000 ohms)	33-510154
27	Condenser (.05 Mfd.)	81-0101
28	First I. F. Transformer	85-0319
29	Padder (Sec. 1st I. F. Trans.)	83-168336
30	Resistor (680 ohms)	85-0173
31	Oscillator Transformer (550 to 1065 KC)	85-0172
32	Oscillator Transformer (800 to 1185 KC)	85-0171
33	Oscillator Transformer (860 to 1240 KC)	85-0170
34	Oscillator Transformer (750 to 1410 KC)	85-0169
35	Oscillator Transformer (855 to 1580 KC)	85-0169
36	Low Frequency Padder	83-0048
37	Manual Oscillator Transformer	85-0052
38	Resistor (15,000 ohms)	83-315154
39	Condenser (.01 Mfd.)	81-0114
40	Volume Control (350,000 ohms)	87-0082-1
41	Resistor (47,000 ohms)	33-247334
42	Condenser (.05 Mmfd.)	81-0103
43	Resistor (27,000 ohms)	33-327154
44	Padder (Pri. 2nd I. F. Trans.)	85-0320
45	Second I. F. Transformer	85-0320

46	Padder (Sec. 2nd I. F. Trans.)	81-0086
47	Resistor (15,000,000 ohms)	33-615154
48	Condenser (4,000 Mmfd.)	81-0129
49	Resistor (220,000 ohms)	33-422334
50	Condenser (.01 Mfd.)	81-0100
51	Tone Control Switch	85-0111
52	Resistor (470,000 ohms)	33-447154
53	Filter Condenser (10-15-20 Mfd.)	81-0089
54	Resistor (220 ohms)	33-122438
55	Condenser (.01 Mfd.)	81-0124
56	Output Transformer	85-0317
57	Replacement Cone (For 73-0045-2 Speaker)	81-0086
58	Field Coil (For 73-0045-2 Speaker)	81-0086
59	Filament Choke	32-1604
60	Condenser (.5 Mfd.)	81-0106
61	Condenser (250 Mmfd.)	81-0033
62	Condenser (250 Mmfd.)	81-0033
63	Vibrator Choke	85-0075
64	Vibrator	83-0025
65	Condenser (.5 Mfd.)	81-0137
66	Resistor (220 ohms)	33-122334
67	Power Transformer	85-0318
68	Condenser (3,000 Mmfd.)	81-0113
69	Resistor (1,000 ohms)	33-210434
70	Condenser (250 Mmfd.)	81-0033
71	Condenser (250 Mmfd.)	81-0033
72	On-Off Switch	85-0112
73	Pilot Lamp	34-2064
74	Condenser (.25 Mfd.)	81-0125
75	Condenser (.05 Mfd.)	81-0101
76	Resistor (330 ohms)	33-133336
77	Hook Bolts (Radio Mtg.)	87-1340FA3
78	Nut (Radio Mtg.)	W98FA3
79	Tube Side Cover	818-1997
80	Wiring Side Cover	87-1345FC45
81	4 Prong Socket	27-8044