

No.	Description	Part No.	No.	Description	Part No.
①	Antenna Compensating Condenser	31-6248	④①	Resistor (250,000 ohms)	33-424344
②	Condenser (50 mmfd.)	30-1101	④②	Resistor (500,000 ohms)	33-449344
③	Antenna Transformer	32-2945	④③	Condenser (.01 mfd.)	30-4145
④	Tuning Condenser	31-2238	④④	Condensers (250 mmfd.)	30-1032
⑤	First Padder (on Tun. Cond.)		④⑤	Condensers (4,000 mmfd.)	30-4185
⑥	Condenser (.05 mfd.)	30-4444	④⑥	Condensers (.05 mfd.)	30-4454
⑦	R. F. Transformer	32-2946	④⑦	Resistor (10,000 ohms)	33-310344
⑧	Second Padder (on Tun. Cond.)		④⑧	Output Transformer	32-7956
⑨	Resistor (70,000 ohms)	33-370344	④⑨	Cone and Voice Coil	45-2608
⑩	Condenser (6000 mmfd.)	30-4467	④⑩	Field Coil Assembly	32-9263
⑪	Condenser (.05 mfd.)	30-4020	④⑪	Pilot Lamp	34-2040
⑫	Condenser (.25 mfd.)	30-4448	④⑫	Condenser (250 mmfd.)	30-1032
⑬	Third Padder (on Tun. Con.)		④⑬	Condenser (.25 mfd.)	30-4446
⑭	Oscillator Transformer	32-2947	④⑭	"A" Choke	32-1874
⑮	Condenser (110 mmfd.)	30-1031	④⑮	Condenser (250 mmfd.)	30-1032
⑯	Low Frequency Padder	31-6320	④⑯	Vibrator Choke	32-2911
⑰	Resistor (99,000 ohms)	33-399544	④⑰	Condenser (.5 mfd.)	30-4474
⑱	Resistor (70,000 ohms)	33-370344	④⑱	Vibrator	41-3170-3
⑲	Condenser (.05 mfd.)	30-4020	④⑲	Resistor (200 ohm)	33-120344
⑳	Resistor (25,000 ohms)	33-325344	④㉑	Resistor (150 ohms)	33-115344
㉑	Padder (Pri. 1st. I. F. Trans.)		④㉒	Power Transformer	32-7958
㉒	First I. F. Transformer	32-3013	④㉓	Condenser (7500 mmfd.)	30-4567
㉓	Padder (Sec. 2nd I. F. Trans.)		④㉔	Filter Choke	32-7959
㉔	Resistor (1,000,000 ohms)	33-510344	④㉕	Filter Condenser (4-4 mfd.)	30-2315
㉕	Padder (Pri. 2nd I. F. Trans.)		④㉖	Resistor (120 ohms)	33-112326
㉖	Second I. F. Transformer	32-3014	④㉗	Reception Control	42-5850
㉗	Padder (Sec. 2nd I. F. Trans.)		④㉘	Antenna Choke	32-1956
㉘	Condenser (110 mmfd.)	30-1031	④㉙	Complete Control	42-5840
㉙	Condenser (250 mmfd.)	30-1032	④㉚	Tuning Shaft	28-8871
㉚	Resistor (25,000 ohms)	33-325344	④㉛	Tuning and Volume Knob	27-4725
㉛	Resistor (330,000 ohms)	33-433344	④㉜	"Carline" Knob	27-4731
㉜	Condenser (.01 mfd.)	30-4479	④㉝	"Music" Knob	27-4732
㉝	Volume Control (1,000,000 ohms)		④㉞	"Speech" Knob	27-4733
	and "On-Off" Switch	33-5268	④㉟	Dial	27-5399
㉞	Resistor (1,000,000 ohms)	33-510344	⑤	Fuse	7227
㉟	Resistor (1,000 ohms)	33-210344	⑤	Fuse Insulator	27-7729
①	Resistor (600 ohms)	33-160331	⑤	Distributor Resistor	33-1196
②	Resistor (20,000 ohms)	33-320344	⑤	Interference Condenser	30-4007
③	Resistor (32,000 ohms)	33-332444	⑤	"T" Bolt	28-6161
④	Resistor (250,000 ohms)	33-424344	⑤	Washer	W-2606
⑤	Condenser (.1 mfd.)	30-4122	⑤	Nut	W518