


PHILCO RADIO & TELEVISION CORP

MODEL AR-55

PHILCO MODEL AR-55 I.F. = 455 KC

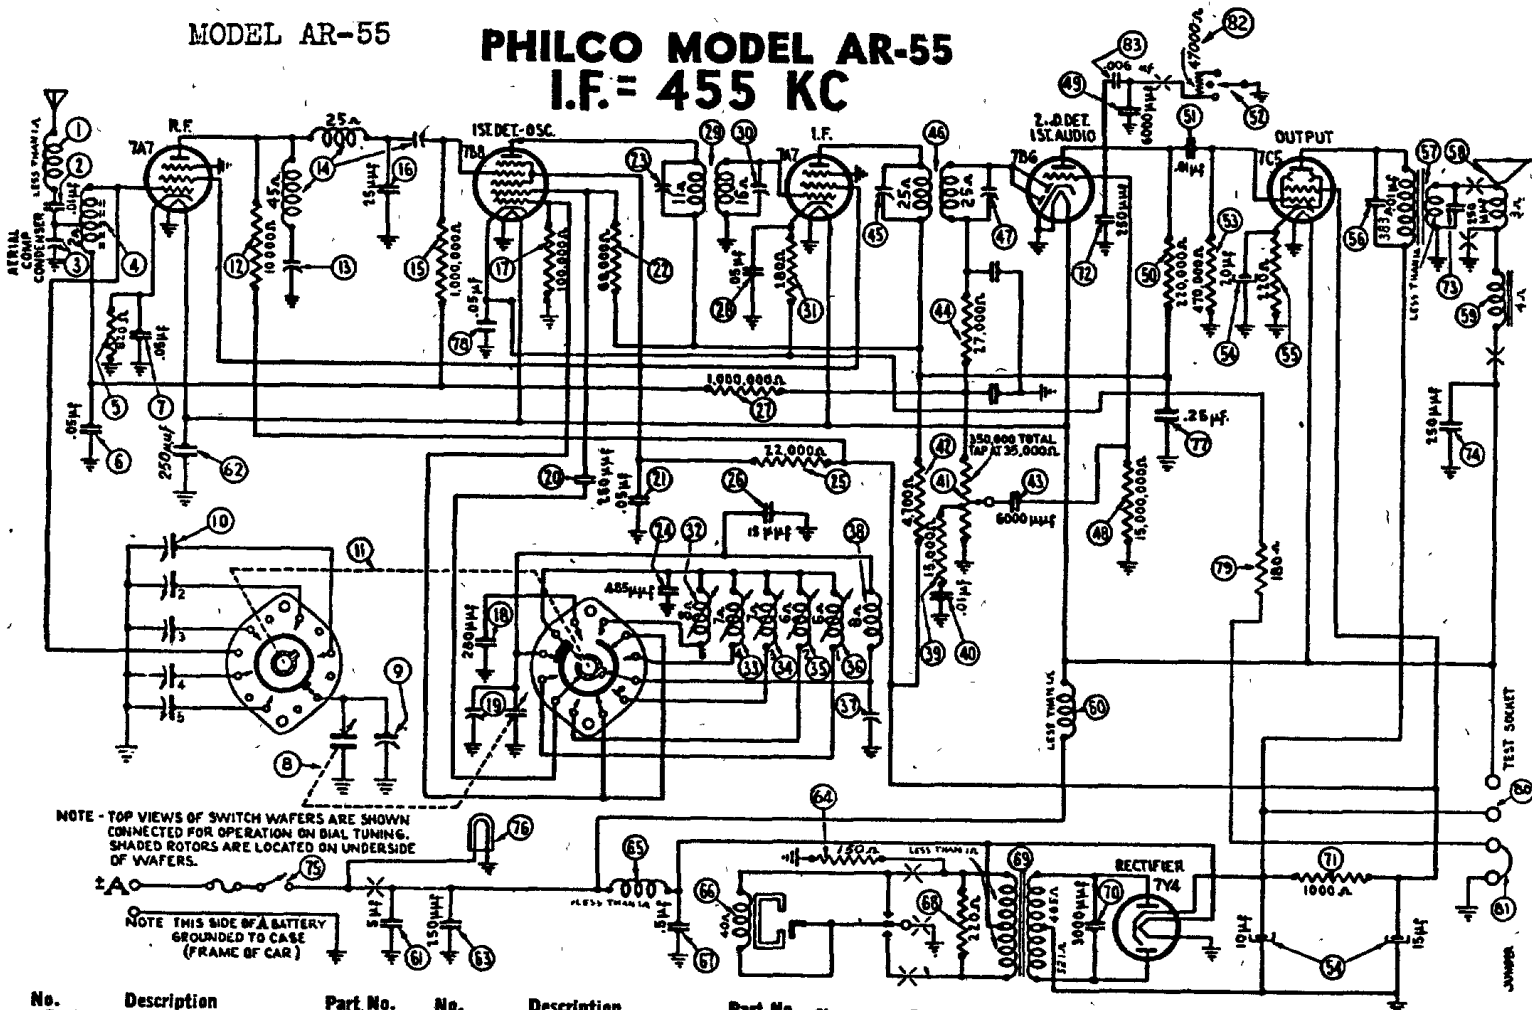

No.	Description	Part No.
1	Antenna Choke	65-0102
2	Condenser (.01 Mfd.)	61-0114
3	Aerial Compensator	Part of 4
4	Antenna Transformer	65-0323
5	Resistor (820 ohms)	33-182336
6	Condenser (.05 Mfd.)	61-0101
7	Condenser (.05 Mfd.)	61-0101
8	Tuning Condenser	63-0047
9	Antenna Padder (on Tun. Cond.)	
10	Antenna Padder Assembly (For Push Buttons)	77-0512
11	Wafer Switch	77-0508
12	Resistor (10,000 ohms)	33-310334
13	Wave Trap Padder	Part of 9
14	R. F. Transformer	65-0321
15	Resistor (1,000,000 ohms)	33-510154
16	Condenser (.05 Mfd.)	61-0101
17	Resistor (100,000 ohms)	33-410154
18	Condenser (280 Mmfd.)	61-0043
19	High Frequency Padder (on Tun. Cond.)	
20	Condenser (250 Mmfd.)	60-125157
21	Condenser (.05 Mfd.)	61-0101
22	Resistor (68,000 ohms)	33-368334
23	Padder (Pri. 1st I. F. Trans.)	
24	Condenser (485 Mmfd.)	61-0144
25	Resistor (22,000 ohms)	33-322434
26	Condenser (15 Mmfd.)	60-015327
27	Resistor (1,000,000 ohms)	33-510154
28	Condenser (.05 Mfd.)	61-0101
29	First I. F. Transformer	65-0319
30	Padder (Sec. 1st I. F. Trans.)	
31	Resistor (180 ohms)	33-118336
32	Oscillator Transformer (550-1065 KC)	65-0173
33	Oscillator Transformer (600-1185 KC)	65-0172
34	Oscillator Transformer (660-1240 KC)	65-0171
35	Oscillator Transformer (750-1410 KC)	65-0170
36	Oscillator Transformer (855-1580 KC)	65-0169
37	Low Frequency Padder	63-0048
38	Manual Oscillator Trans.	65-0420
39	Resistor (15,000 ohms)	33-315154
40	Condenser (.01 Mfd.)	61-0114
41	Volume Control (350,000 ohms)	67-0032
42	Resistor (4,700 ohms)	33-247334
43	Condenser (6,000 Mmfd.)	61-0155
44	Resistor (27,000 ohms)	33-327154
45	Padder (Pri. 2nd I. F. Trans.)	

No.	Description	Part No.
46	Second I. F. Transformer	65-0320
47	Padder (Sec. 2nd I. F. Trans.)	
48	Resistor (15,000,000 ohms)	33-615154
49	Condenser (6,000 Mmfd.)	61-0155
50	Resistor (220,000 ohms)	33-422334
51	Condenser (.01 Mfd.)	61-0120
52	Tone Control Switch Wafer	77-0783
53	Resistor (470,000 ohms)	33-447154
54	Filter Condenser (10-15-20 Mfd.)	61-0089
55	Resistor (220 ohms)	33-122436
56	Condenser (.01 Mfd.)	61-0124
57	Output Transformer	65-0408
58	Replacement Cone (For 73-0047-2 Speaker)	91-0086
59	Resistor (220 ohms)	91-0126
60	Condenser (250 Mmfd.)	60-125157
61	Resistor (250 Mmfd.)	60-125157
62	Resistor (150 ohms)	33-115334
63	Vibrator Choke	85-0075
64	Vibrator	83-0025
65	Condenser (.5 Mfd.)	61-0137
66	Resistor (220 ohms)	33-122334
67	Power Transformer	65-0318
68	Condenser (3,000 Mmfd.)	61-0115
69	Resistor (1,000 ohms)	33-210434
70	Condenser (250 Mmfd.)	60-125157
71	Condenser (250 Mmfd.)	60-125157
72	Condenser (250 Mmfd.)	60-125157
73	"On-Off" Switch	85-0112
74	Pilot Lamp	34-2039
75	Condenser (.25 Mfd.)	61-0125
76	Condenser (.05 Mfd.)	61-0101
77	Resistor (180 ohms)	33-118336
78	Test Socket	55-1118
79	Test Link	57-1121
80	Resistor (47,000 ohms)	33-347334
81	Condenser (6,000 Mmfd.)	61-0155
82	Receiver Housing	77-0694FC59
83	Control Assembly	85-0133
84	Dial	55-1194
85	Drive Cord	55-0935
86	Drive Cord Spring	57-1425FA3
87	Tuning Shaft	57-1385
88	Volume Shaft	57-1384
89	Push Button Shaft	57-1386
90	Pointer	57-1889FCP
91	Station Indicator Drum	77-0755
92	Tone Control Lead	95-0135

No.	Description	Part No.
93	Hook Bolt (Receiver Mtg.)	57-1340FA3
94	Lockwasher (Receiver Mtg.)	W1668FE7
95	Nut (Receiver Mtg.)	W98FA3
96	Cable Clamps	57-1429FA38
97	Interference Condenser	30-4007
98	Distributor Resistor	33-1196
99	Tube Slide Cover	318-2382
100	Wiring Slide Cover	57-1345FC59
101	Padder Cover	57-1348FC59
102	Speaker Socket	55-0443
103	Loktal Socket	55-1075
104	Vibrator Socket	27-6153
105	Screw & Core Assembly	57-1363
106	Coil Caps (Brass)	W-2032
107	Volume Control Nut	W684FA3
108	Tone Control Switch	
109	Shaft	57-1839FA3

The following parts are for the Dash Speaker:

No.	Description	Part No.
110	Speaker & Housing Complete	318-2393
111	Speaker Unit	73-0058
112	Stud (Speaker Mtg.)	57-0892
113	Washer (Speaker Mtg.)	2703FA3
114	Lockwasher (Speaker Mtg.)	W338
115	Nut (Speaker Mtg.)	W55FA3
116	Wood Spacer (Speaker Mtg.)	55-0642
117	The following parts are for the Instrument Board Speaker:	
118	Speaker	73-0047
119	"U" Bracket	57-0720FA3
120	Rubber Gasket & Screen	55-0958
121	Slide Brackets	57-1461
122	Cardboard Baffle	55-0957
123	Cardboard Spacers	55-0449
124	Nuts (Speaker Mtg.)	W124FA3
125	Screw (Speaker Mtg.)	W1582FA4
126	Lockwasher (Speaker Mtg.)	W291
127	Carriage Bolt	97-0061FA3
128	Carriage Bolt Nut	W98FA3
129	Bolt (Bracket Mtg.)	97-0120FA34

