


IF = 455KC

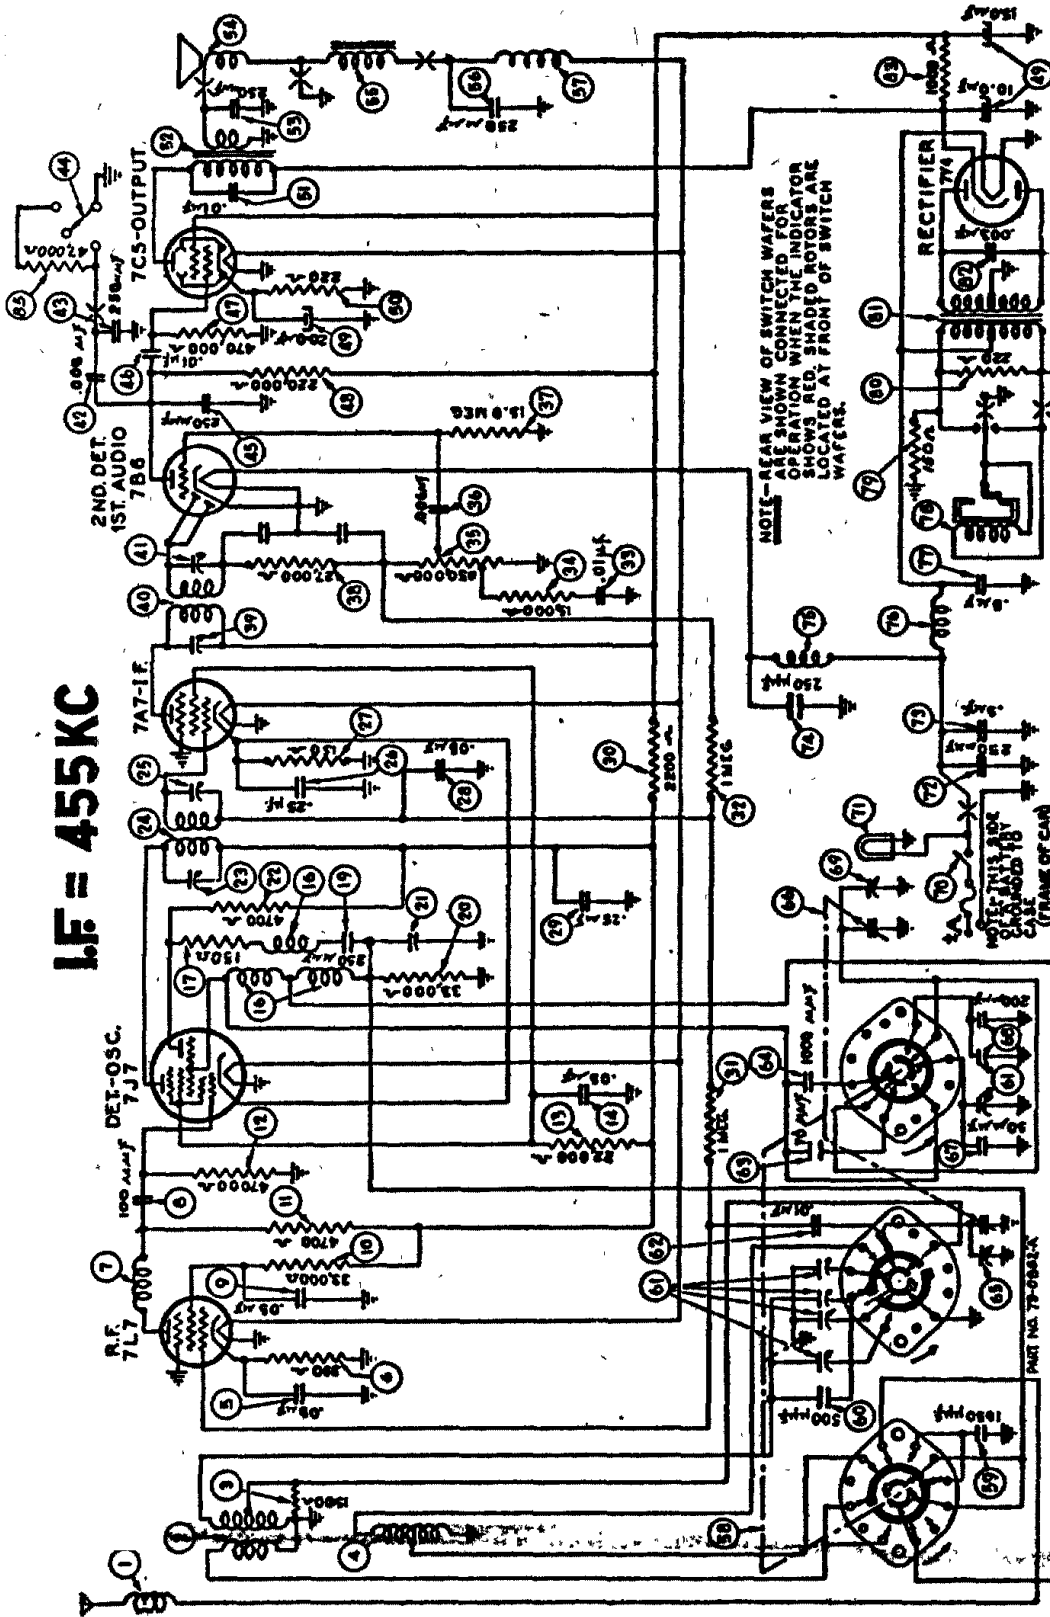

No.	Description	Part No.
1	Antenna Choke	65-0340
2	Short Wave Antenna	65-0341
3	Transformer	65-0342
4	Resistor (1,500 ohms)	33-213334
5	Transformer	65-0083
6	Condenser (.05 Mfd.)	61-0101
7	Resistor (390 ohms)	33-139136
8	Choke	65-0137
9	Condenser (100 Mfd.)	60-110137
10	Condenser (.05 Mfd.)	61-0111
11	Resistor (33,000 ohms)	33-333344
12	Resistor (17,000 ohms)	33-247334
13	Resistor (47,000 ohms)	33-347334
14	Resistor (22,000 ohms)	33-322334
15	Condenser (.05 Mfd.)	61-0101
16	Resistor (150 ohms)	33-053339
17	Condenser (250 Mfd.)	60-125137
18	Resistor (33,000 ohms)	33-333344
19	Low Frequency Padder	65-00148
20	Resistor (4,000 ohms)	33-247344
21	Padder (Pri. 1st I. F. Trans.)	65-0338
22	Padder (Sec. 1st I. F. Trans.)	61-0112
23	Resistor (150 ohms)	33-113336
24	Condenser (.05 Mfd.)	61-0101
25	Resistor (22,000 ohms)	33-222334
26	Resistor (1,000,000 ohms)	33-510134
27	Resistor	33-510134
28	Condenser (.01 Mfd.)	61-0114
29	Resistor (15,000 ohms)	33-313134
30	Volume Control	67-0039-3
31	Condenser (500 Mfd.)	61-0103
32	Resistor (13,000,000 ohms)	33-015134
33	Padder (Pri. 2nd I. F. Trans.)	65-0320
34	Padder (Sec. 2nd I. F. Trans.)	61-0135
35	Condenser (8000 Mfd.)	60-125137
36	Condenser (250 Mfd.)	60-125137
37	Tune Control Switch Wafer	60-125137
38	Condenser (250 Mfd.)	61-0130
39	Resistor (470,000 ohms)	33-447134

No.	Description	Part No.
40	Resistor (220,000 ohms)	33-222334
41	Filter Condenser	61-0080
42	Resistor (220 ohms)	33-132134
43	Condenser (.01 Mfd.)	61-0124
44	Output Transformer	65-0108
45	Condenser (250 Mfd.)	60-125137
46	Replacement Core	81-0088
47	Field Coil	81-0126
48	Field Coil	81-0088
49	Field Coil	81-0126
50	Condenser (250 Mfd.)	60-125137
51	"A" Choke	33-1644
52	Wafer Switch	77-0572
53	Mica Condenser (1650 Mfd.)	5577

54	Silver Mica Condenser (300 Mfd.)	61-0137
55	Condenser (250 Mfd.)	60-125137
56	"A" Choke	33-1644
57	Vibrator Choke	65-0075
58	Condenser (.5 Mfd.)	61-0106
59	Vibrator	83-0026
60	Resistor (150 ohms)	33-113334
61	Resistor (200 ohms)	33-122334
62	Power Transformer	65-0318
63	Condenser (3000 Mfd.)	61-0115
64	Resistor (1000 ohms)	33-210434
65	Condenser (250 Mfd.)	60-125137
66	Resistor (47,000 ohms)	33-347334
67	Receiver Housing	77-069335
68	Speaker Socket	55-0443
69	Lottal Socket	55-0571
70	Antenna Connector	57-0591

71	Type Slide Cover	57-1378FV35
72	Wiring Slide Cover	57-1343FV35
73	Padder Plate	57-1343FV35
74	Hook Bolt	65-0075
75	Nut (Radio Mfg.)	57-1340FV35
76	Lockwasher (Radio Mfg.)	W1668FV35
77	Cable Clamps	57-1429FV35
78	Interference Condenser	30-4007
79	(Generator)	30-4490
80	Spark Plug Suppressor	33-1015
81	Distributor Resistor	33-1196
82	Hood Grounding Screws	97-0125FV35
83	Control Assembly	85-0132
84	Copper Braid	57-1389FV35
85	(% wide, 24" long)	57-1389FV35
86	Drive Cord	57-1389FV35
87	Dial Background Plate	57-1389FV35
88	Volume Flexible Shaft	57-1384
89	Tuning Flexible Shaft	57-1385
90	Station Indicator Flexible Shaft	57-1386
91	Pointer	57-1389FV35
92	Tone Switch Shaft	57-1389FV35
93	Tone Switch Spring	57-1840
94	Dial	55-1196
95	Station Indicator Drum	77-0572
96	Slide & Pawl Assembly	77-0721

NOTE: REAR VIEW OF SWITCH WAFERS ARE SHOWN CONNECTED FOR OPERATION WHEN THE INDICATOR SHOWS RED. SHADED ROTORS ARE LOCATED AT FRONT OF SWITCH WAFERS.