
 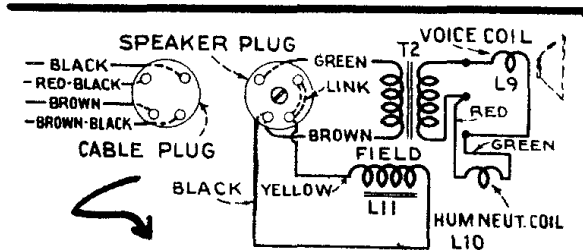


# RCA Victor 114



ON RADIO-PHOND.  
SWITCH. OPEN  
POSITION IS ON  
1 AND 2, CLOSED  
POSITION IS ON  
3 AND 4.