



MODEL M50

Chassis No. RC 357J

Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Adjustment Symbol	Circuit Adjusted
No Signal 550-750 kc	455 kc	.001 mfd.	6K7 Grid	L-10	2nd I.F. Trans.
No Signal 550-750 kc	455 kc	.001 mfd.	6A8 Grid	L-8, L-9	1st I.F. Trans.
1,400 kc	1,400 kc	.0001 mfd. †	Ant. Lead	C-3	Ant.
600 kc	600 kc	.0001 mfd. †	Ant. Lead	L-2	Ant.
1,400 kc	1,400 kc	.0001 mfd. †	Ant. Lead	C-3 *	Ant.

NOTE: No oscillator alignment adjustments are required in this receiver.

