



To Remove Cabinet Back
Insert a screwdriver under one hinge and pry the center of the hinge out of the opening in the cabinet while maintaining pressure on the back with the fingers and on the cabinet with the thumb.

SI ACTUATED BY LINE PLUG.

LINE ON BATTERY OPERATION "A" VOLTAGES ARE APPROX. 10% HIGH CORD "B" VOLTAGES ARE APPROX. 20% LOWER. (SEL. RECT. NOT US

NOTE 1-THE LEAD CONNECTING V2-4 AND V3-5 IS A COUPLING LINK TO PROVIDE CIRCUIT CAPACIT INDICATED BY DOTTED LINES.