
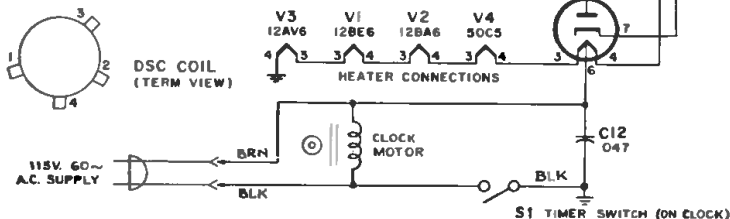


# RCA VICTOR

# MODEL 6-C-5 SERIES, 7-C-6 SERIES

## Chassis No. RC-1157A

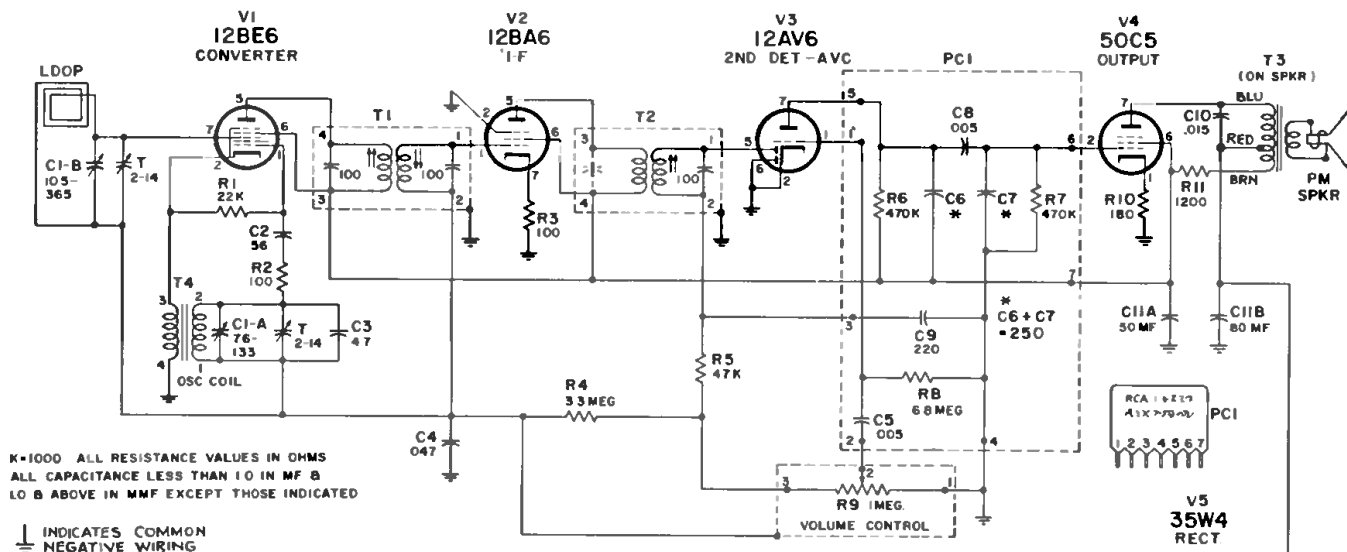

### TO REMOVE BACK COVER

1. Slip out of upper groove while pressing upward on top edge of cabinet.
2. Tilt outward to free interlock contacts, then lift from bottom grooves.

### REMOVAL OF CHASSIS

1. Pull off volume control and tuning knobs.
2. Remove back cover.
3. Remove one screw (near volume control) holding chassis to cabinet.

Step	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. output
1	12BA6 I-F grid through .01 mfd. capacitor	455 kc	Quiet-point 1,600 kc end of dial	T2 (top) 2nd I-F trans.
2	Stator of C1-B through .01 mfd.			T1 (top and bottom) 1st I-F trans.
3	Short wire placed near loop to radiate signal	1,620 kc	Max. clockwise	osc. trimmer C1-A
4		1,400 kc	1,400 kc signal	ant. trimmer C1-B
5		600 kc	600 kc signal	osc. coil T-4 (rock gang)
6		Repeat steps 3, 4, and 5		

