


RCA VICTOR

MODELS 1-F-1, 1-F-2 SERIES

Chassis No. RC-1201A

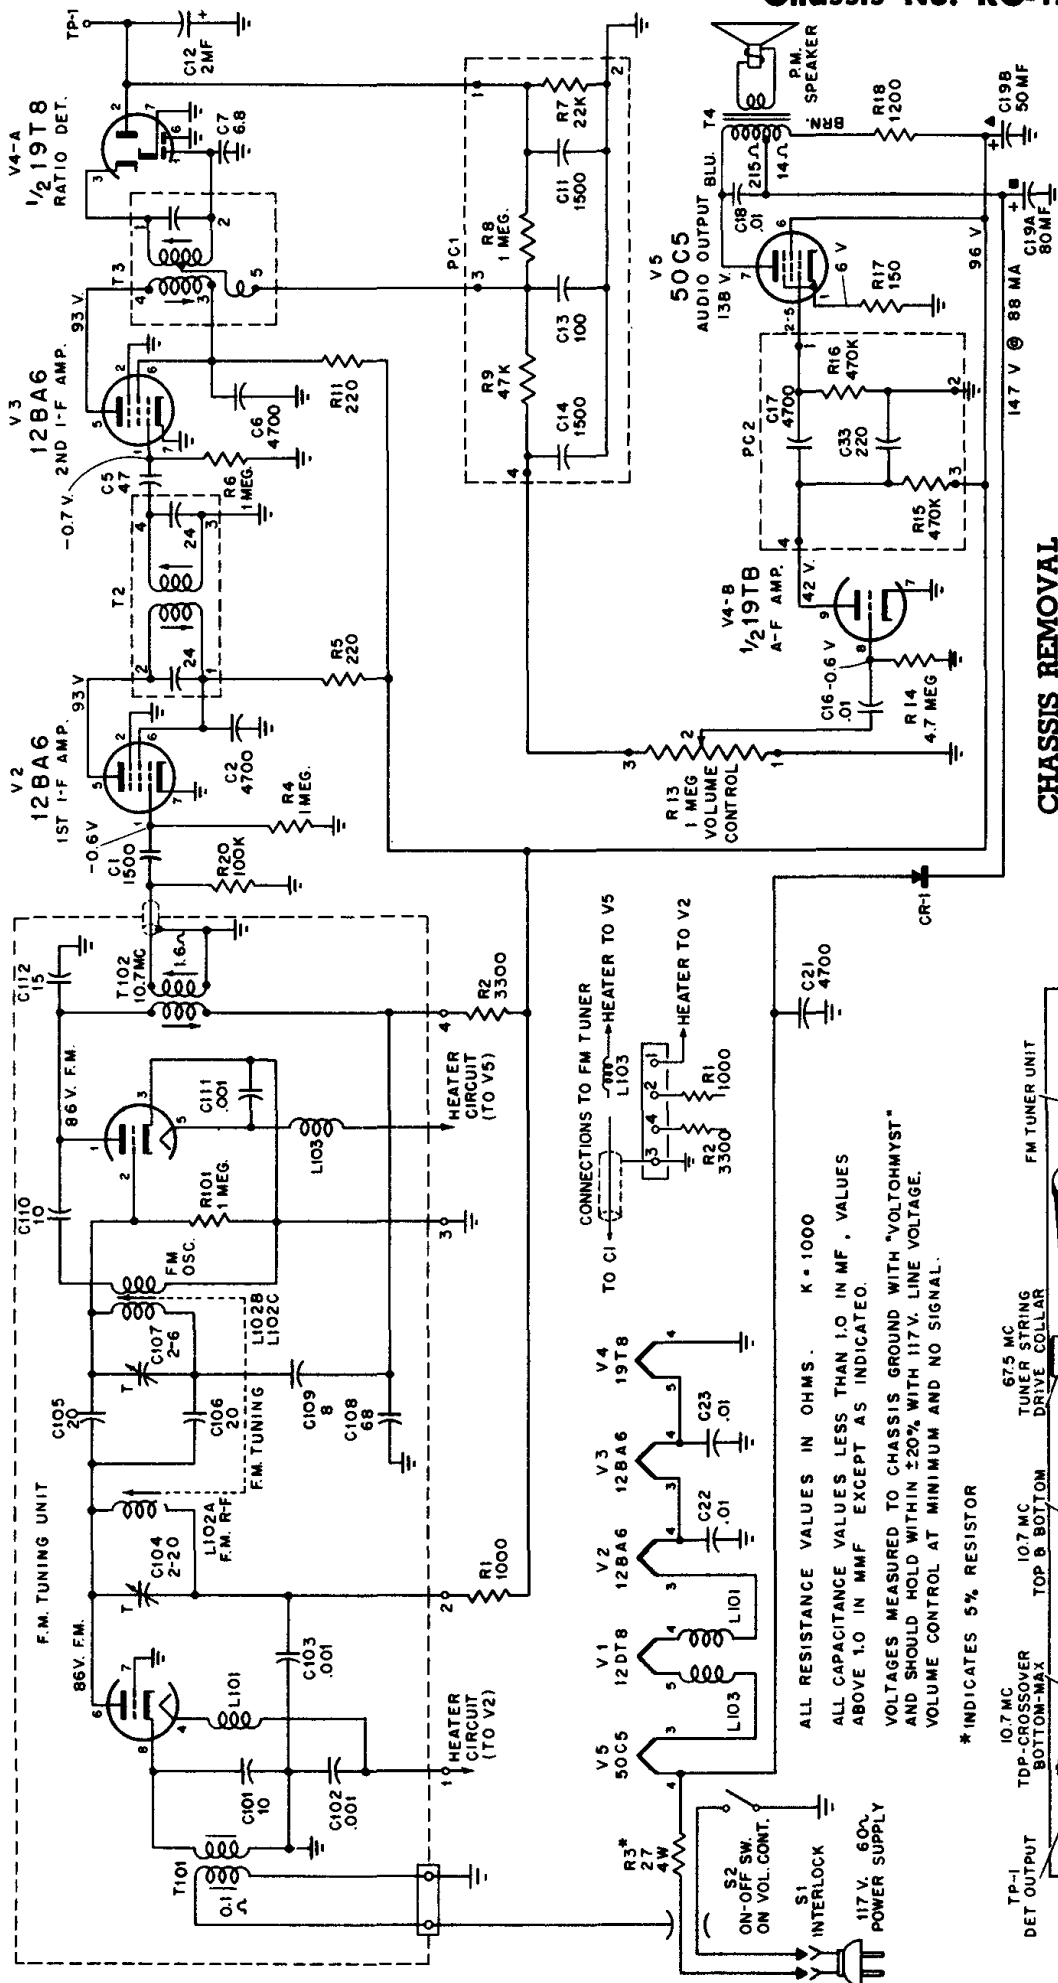

CHASSIS INSTALLATION

From back side of cabinet front—squeeze toward center, two lugs of plastic dial crystal—lay crystal and pointer aside.
Reinstall in reverse order of "Chassis Removal".

RCA Victor
Models 1-F-1, and
1-F-2 Series,
Chassis RC-1201A

CHASSIS REMOVAL

1. Remove two screws at bottom rear of cabinet and one screw at top center—this screw will remain with cabinet back.
2. Pull off volume control knob and remove hex nut holding volume control to cabinet front.
3. Unhook dial drive cord and remove from drum.
4. Bend three retaining lugs to permit removal of power line antenna from cabinet front.
5. Remove two screws holding speaker to cabinet front.
6. Remove two screws at rear apron of chassis.
7. Pull tuning drum shaft out of dial pointer.

