



RCA VICTOR

AC-DC Radio Receiver X-1, X-2 SERIES Chassis No. RC-1188


C-1 Series, Chassis RC-1188A, is almost identical except for clock timer with its switch circuit.

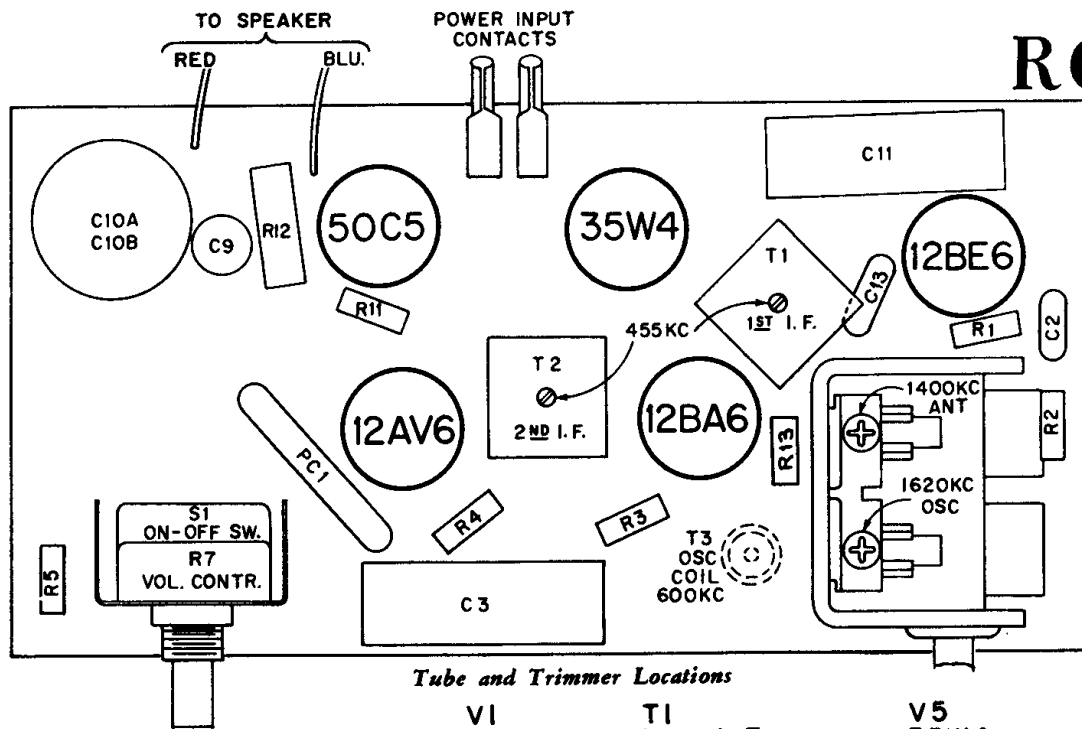

Tube and Trimmer Locations

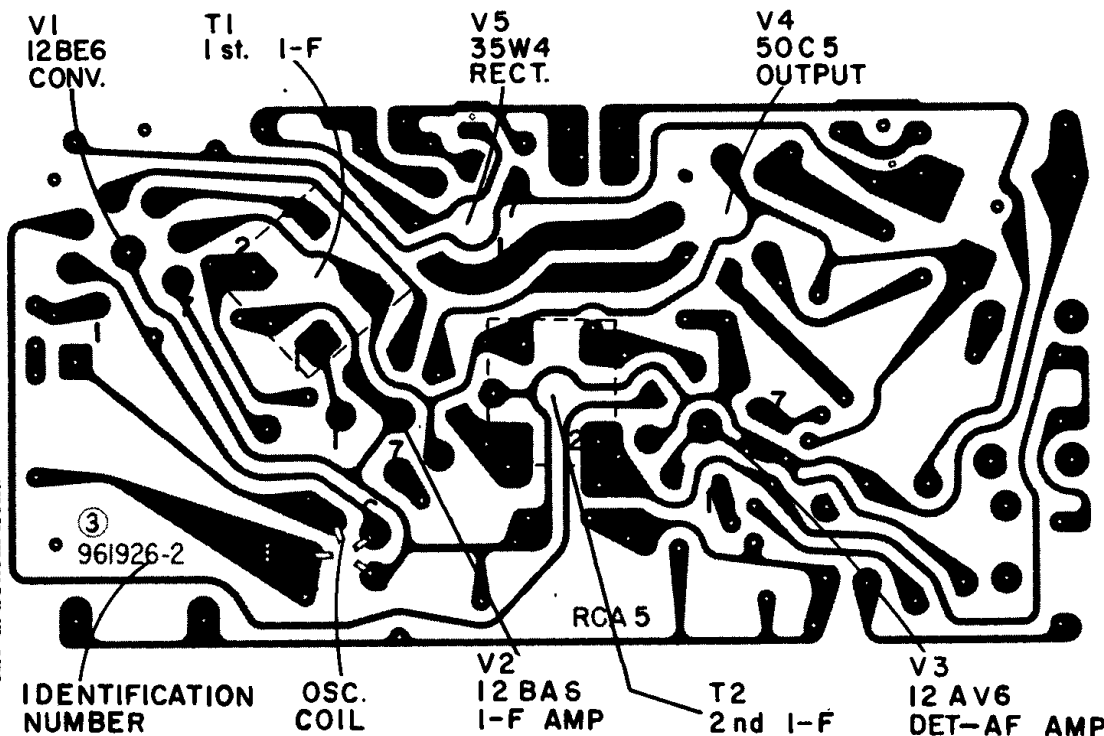

Chassis Wiring and Components — View from Wiring Side

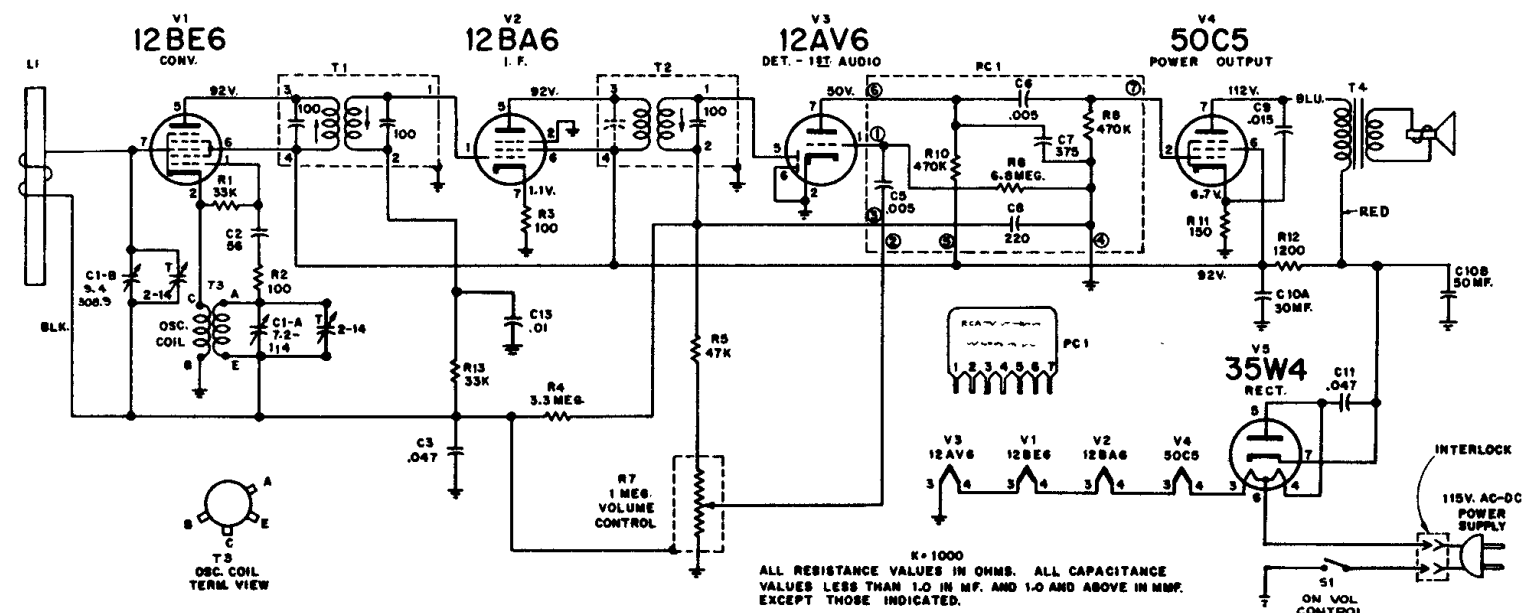

CHASSIS REMOVAL

1. Remove three cabinet holding screws; two at back of top lip and one at bottom front.
2. Grip cabinet with two hands allowing fingers to extend over edges of cabinet front.
3. Hold cabinet, front down, and shake in a vertical direction. Cabinet assembly will separate and the fingers will limit the separation.
4. The cabinet front and chassis assembly may now be separated completely.

CABINET REASSEMBLY

1. Place chassis front and chassis assembly on the cabinet back so that the ribs of the cabinet front rest on the bottom — inside of the cabinet back.
2. Push cabinet sections together firmly.
3. Insert three holding screws; two at back of top lip and one at bottom front.