

Chassis Nos. RC-1183, RC-1183A, RC-1183B

MODEL 1-BX-5 SERIES
MODEL 1-BX-6 SERIES
MODEL 1-BX-7 SERIES



With the back fully open, grip the cabinet with thumb pressing forward against case front and fingers pressing backward against case back. Insert a screwdriver under one hinge and pry the center of the hinge out of the opening in the cabinet while maintaining pressure on the back with the fingers and on the cabinet with the thumb. Repeat this procedure with the other hinge. Pull the back straight to the rear using both hands.

