


RCA Victor X-4 Series, Chassis RC-1191A, material on this page.
C-4 Series, Chassis RC-1191, is electrically the same except
for addition of timer-clock with switch and appliance outlet.

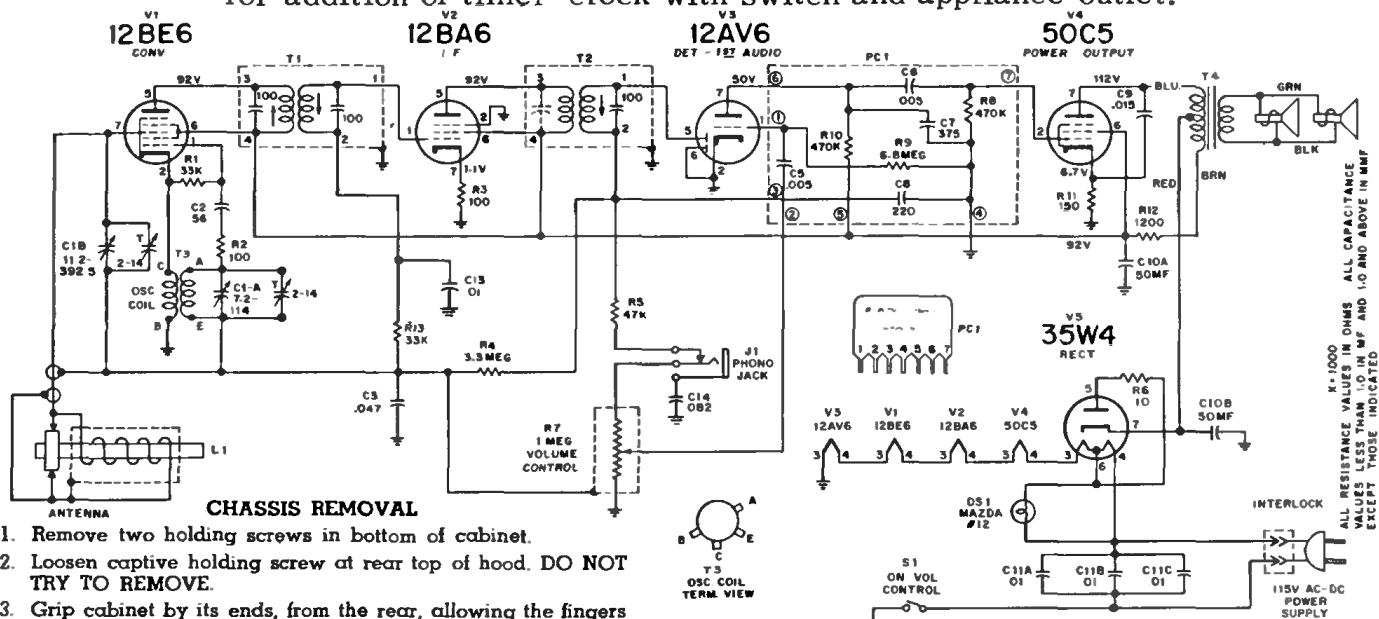

CHASSIS REMOVAL

1. Remove two holding screws in bottom of cabinet.
2. Loosen captive holding screw at rear top of hood. DO NOT TRY TO REMOVE.
3. Grip cabinet by its ends, from the rear, allowing the fingers to extend loosely over the front.
4. Hold cabinet front down and shake vertically until front separates from hood. Fingers will limit the separation.

