

# RCA VICTOR

## RGD 24 Series

### Chassis RC-1213P

Model RGD 24A—Light Blue

Model RGD 24N—Cream

Model RGD 24Y—Iceberg White

## TUBE AND CHASSIS ACCESSIBILITY

1. DO NOT ATTEMPT TO REMOVE THE KNOBS. The tuning and volume control knobs are held captive to the cabinet by retainers on their shafts.
2. Remove the back cover by lifting the protrusions on the bottom of the back cover, out of the slots in the base of the cabinet.
3. Unsolder speaker leads if necessary. Avoid putting a strain on the speaker leads.
4. Remove two chassis retainers (screws or clips), one at the volume control and one on the left end mounting.
5. Grasp tuning capacitor and volume control, and pull chassis out of knobs and mounting slots.

