


RCA VICTOR TAPE RECORDER

Model 1-YC-11
Amplifier Chassis No. RS-196
Tape Transport TCT-3A

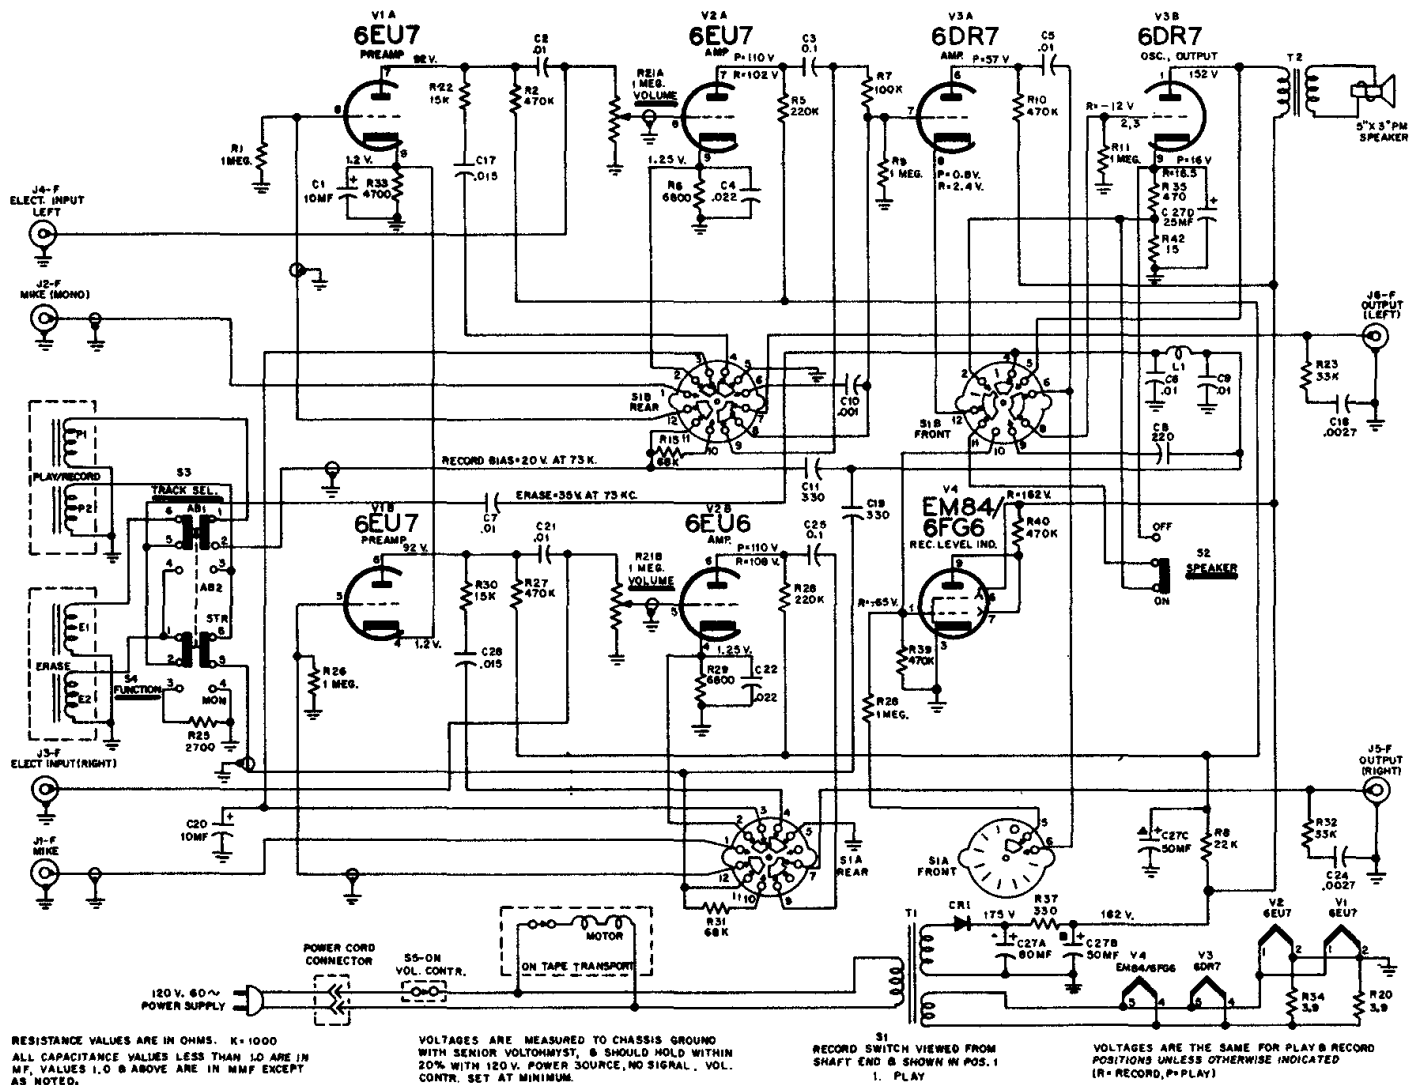

CHASSIS REMOVAL

The amplifier chassis is fastened to the tape transport and is removed with it. For normal servicing it will not be necessary to separate the chassis from the transport.

To remove chassis and transport:

1. Turn REWIND-STOP-PLAY knob to rewind position.
2. Pull off RECORD, REWIND-STOP-PLAY, SPEED CONTROL and VOLUME knobs. Note: To remove SPEED control knob, twist while gently pulling the knob. When the knob is replaced, push it on firmly until the knob seats with a click.
3. The control escutcheon is held in place by three spring clips (2 at the front and one at the back), and one screw. Remove

the screw and plastic washer from the center of the escutcheon and lift the escutcheon straight up and off.

4. Block the carrying handle in its extended position.
5. Remove the four (4) red screws at the corners of the tape transport.
6. Lift right side of motor board sufficiently to permit disconnecting the speaker.
7. Lift out motor board and chassis.

Note: Support the transport mechanism on blocks or a rack if it is to be operated while outside of the case.

8. To reassemble, reverse the foregoing procedure.

