
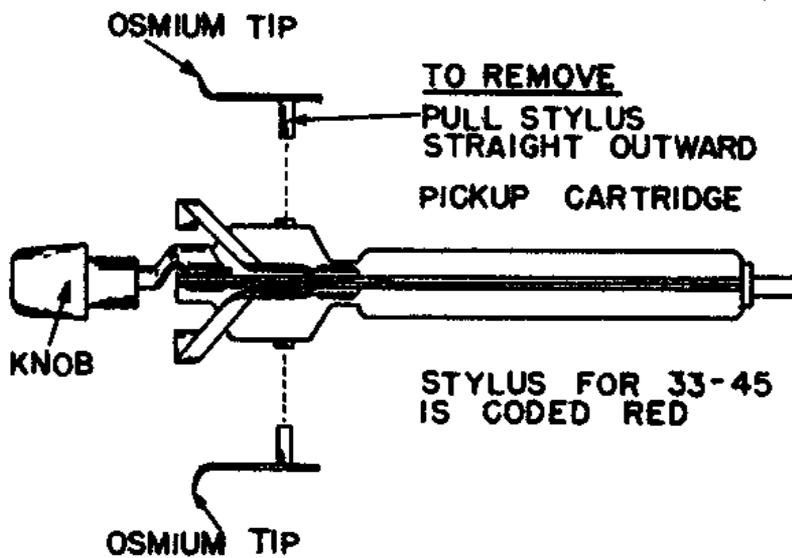


RCA VICTOR

6-EMP-2A, 6-EMP-2B

Chassis No. RS-153

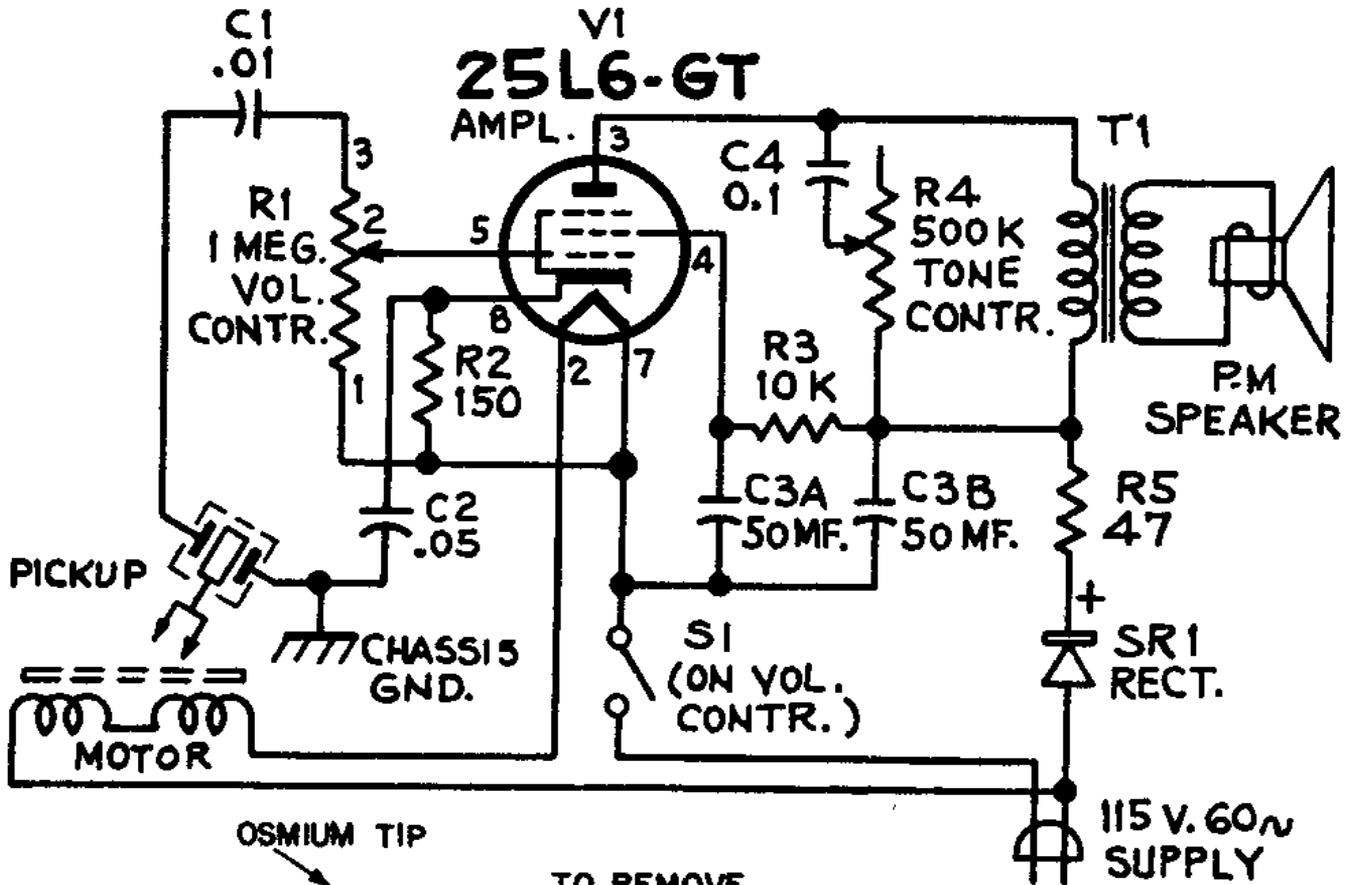

STYLUS REMOVAL

Each stylus is mounted on a short pin which fits into a socket on the pickup. To remove a stylus, pull straight outward away from pickup; it is held in place only by pressure fit.