




# RCA VICTOR

## Portable Record Player


# MODELS 7-EMP-1J, 7-EMP-1K

### Chassis No. RS-152C

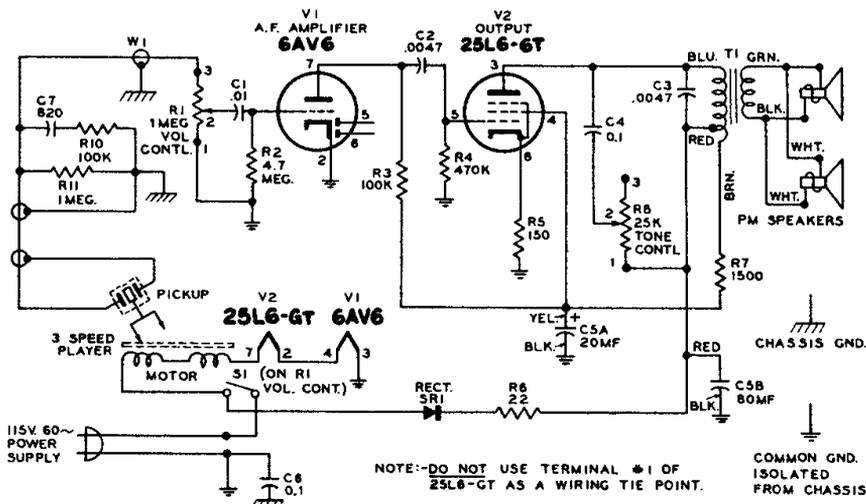

ALL RESISTANCE VALUES IN OHMS. K=1000

ALL CAPACITANCE VALUES LESS THAN 1 IN MF & ABOVE 1 IN MMF UNLESS OTHERWISE NOTED.

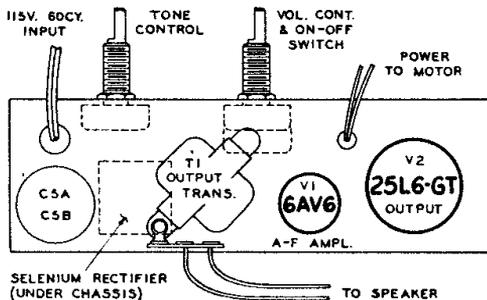

## STYLUS REMOVAL

Each stylus is mounted on a short pin which fits into a socket on the pickup. To remove a stylus, pull straight outward away from pickup; it is held in place only by pressure fit.

When replacing a stylus, be certain that the stylus coded with red paint points downward when "33-45" is visible on top of control lever. Likewise, the uncoded stylus should point downward when "78" is visible on top of control lever.

## OPERATION




Remove metal Needle Guard from the Tone Arm. Turn POWER-VOLUME knob clockwise about one-half turn. Allow brief warm-up.

Move SPEED CONTROL lever to "33," "45," or "78" position for correct Turntable Speed.



Place record over correct Spindle onto Turntable.

Turn NEEDLE SELECTOR to "33-45" before playing 33 1/3 or 45 r.p.m. records; to "78" before playing 78 r.p.m. records.

Set Tone Arm needle at start of record; adjust VOLUME and TONE as desired.

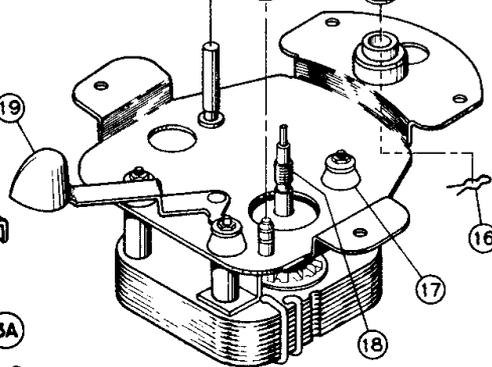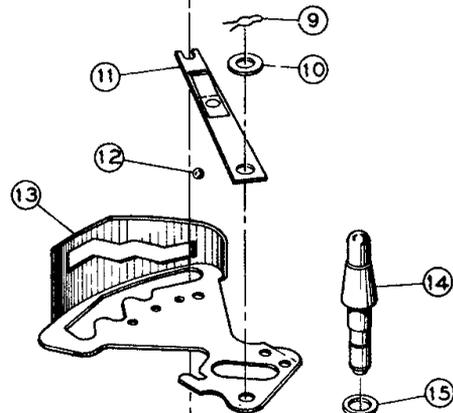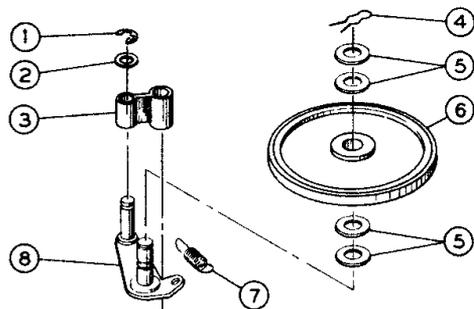

Motor Assembly

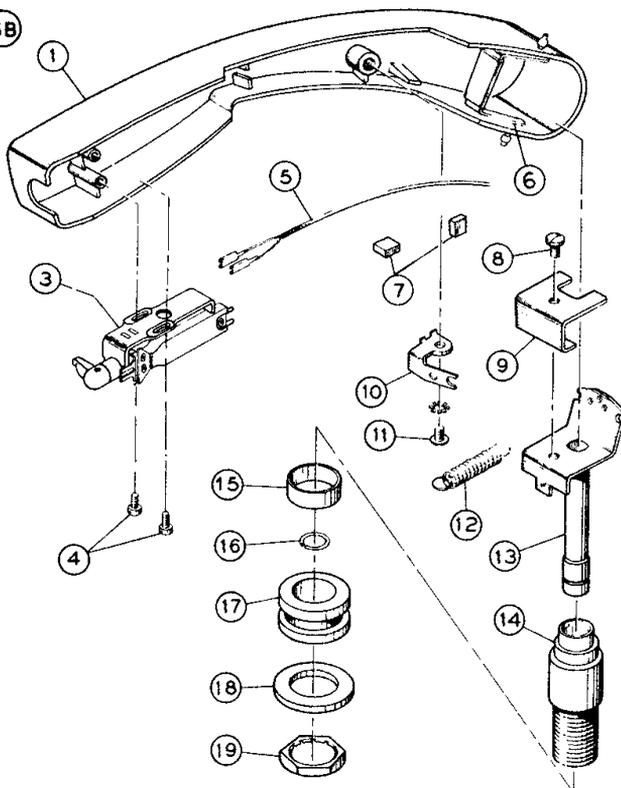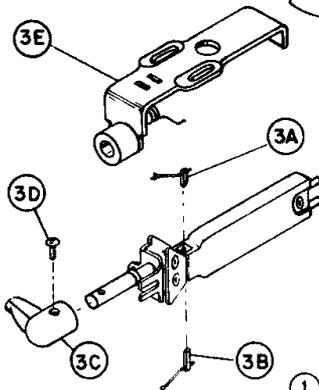

Pickup Arm Assembly