


RCA VICTOR

MODEL 7-HF-5

Chassis No. RS-158

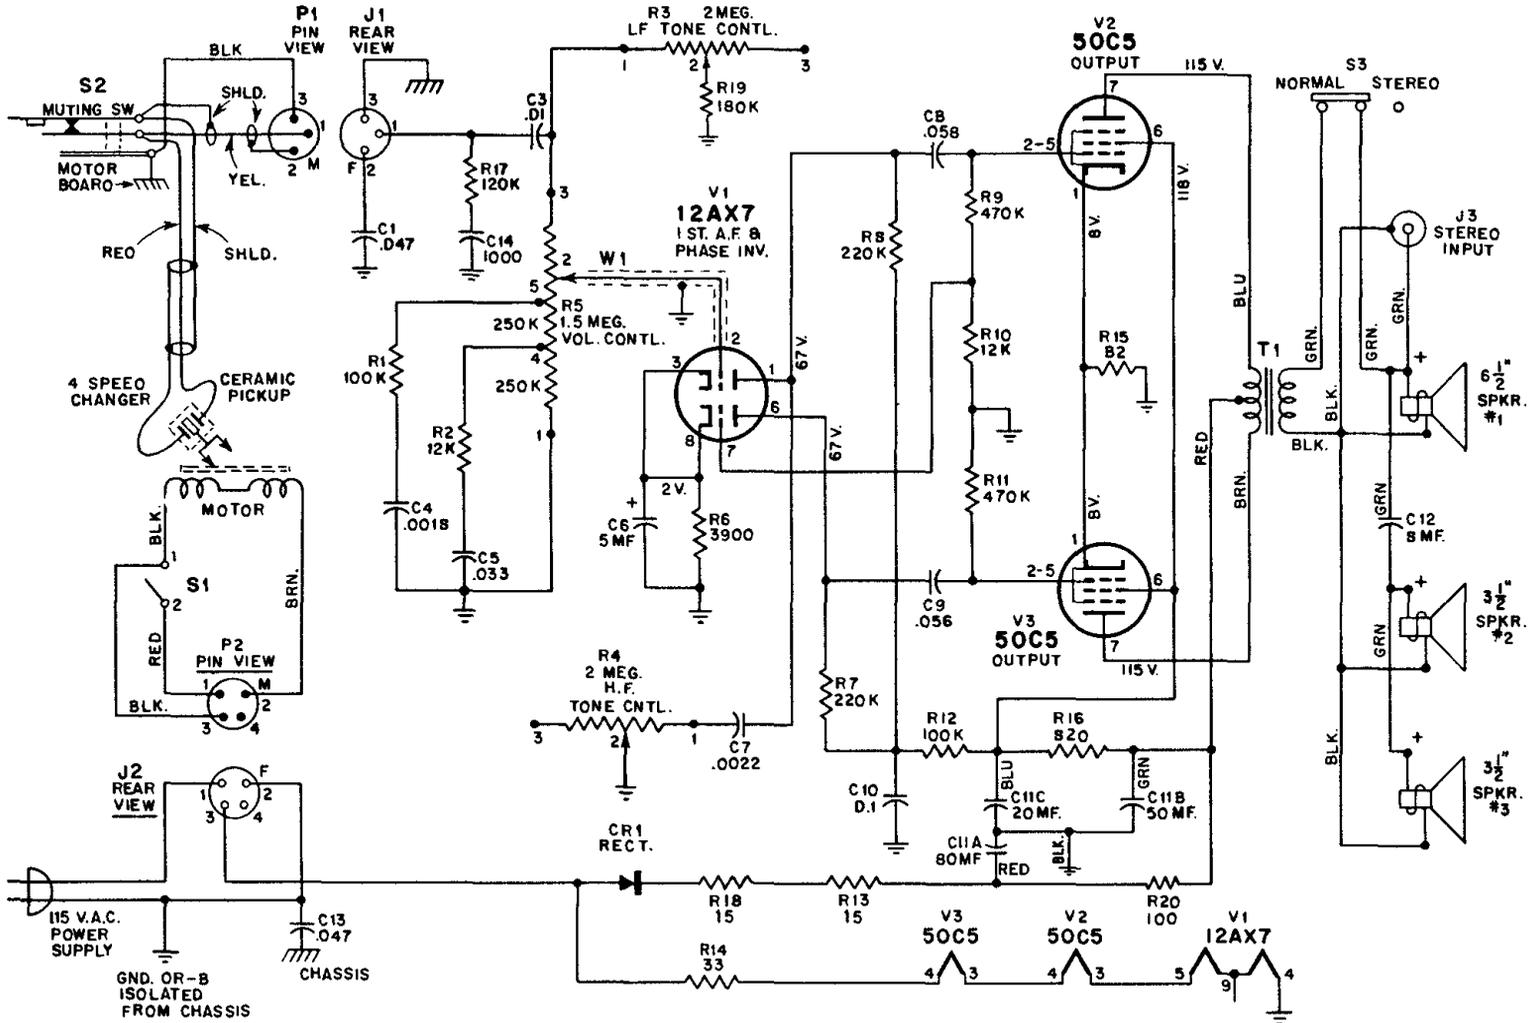

K=1000

ALL RESISTANCE VALUES IN OHMS. ALL CAPACITANCE VALUES LESS THAN 1.0 IN MF AND 1.0 & ABOVE IN MMF EXCEPT AS INDICATED.

CRITICAL LEAD DRESS

1. Dress all heater leads and power cord close to chassis and away from 12AX7 tube socket and phono input jack to maintain low hum level
2. Keep shielded lead W1, including shield connections, as short as possible.
3. Dress record changer power cable and pickup cable as far apart as possible to minimize hum pickup.

NOTE—The "ON-OFF" switch is not part of the volume control. The record changer must be "ON" for power to be applied to the amplifier.

The "NORMAL-STEREO" switch should be placed in the STEREO position when using the speakers of this instrument for stereophonic sound reproduction from another source.

CATHODE CURRENTS

V1	12AX7	0.25 MA
V2	50C5	51.4 MA
V3	50C5	51.4 MA

STYLUS REPLACEMENT

The dual stylus is held in position by a spring clamp. To remove stylus, simply hold pickup sideways and pull spring clamp away from stylus and allow it to drop out. When inserting stylus, be certain that the small diameter rod holding the styli rests in the notch of the drive arm connecting to the cartridge element.

