


MODELS 8-EY-4DJ, 8-EY-4FK

Chassis No. RS-160

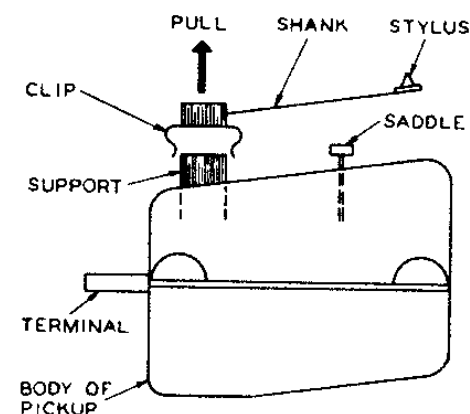

To remove stylus, grip with tweezers at back end and pull away from the pickup. The shank of the stylus holder is imbedded in a rubber block which is set in a "U" shaped spring clip. This spring clip holds the stylus assembly to a plastic support. The shank of the stylus rests in a metal saddle. When replacing stylus, make certain that shank rests firmly in saddle.

CATHODE CURRENTS

12AX7	-----	0.22 MA
35C5	-----	59. MA
35C5	-----	59. MA
35W4	-----	7B.5 MA