 




2. **PICK-UP ARM HEIGHT ADJUSTMENT**—The Pick-up Arm height can be changed by the Height Adjustment Screw located near the rear of Pick-up Arm (see illustration). To raise the height of the Pick-up Arm, turn this screw counter-clockwise. To lower the Pick-up Arm, turn clockwise. The Pick-up Arm height should be adjusted so that with a 1½" stack of records on the turntable, the Pick-up Arm lifts ¼" straight up as the change cycle starts.

1. Never try to force the Control Knob to remain in the "REJ." position.
2. Never use force to stop and start the Turntable or Pick-up Arm. If the radio "On-Off Switch" (or the Record Changer Control Knob) is turned off while record changer is going thru its change cycle, the Pick-up Arm may stop in a suspended position. Where this occurs, merely turn switch on again and start the Turntable by rotating it



3. Never leave Pick-up Arm and needle resting on a record when radio is turned off.
4. Do not leave record on the supports for an extended period of time as they may warp.
5. Exercise care not to bend the Center Post.