





# MODELS

**H-56ACS2** Charcoal Gray

**H-56ACS1** *Saddle Tan*

## CHASSIS V-2507-2

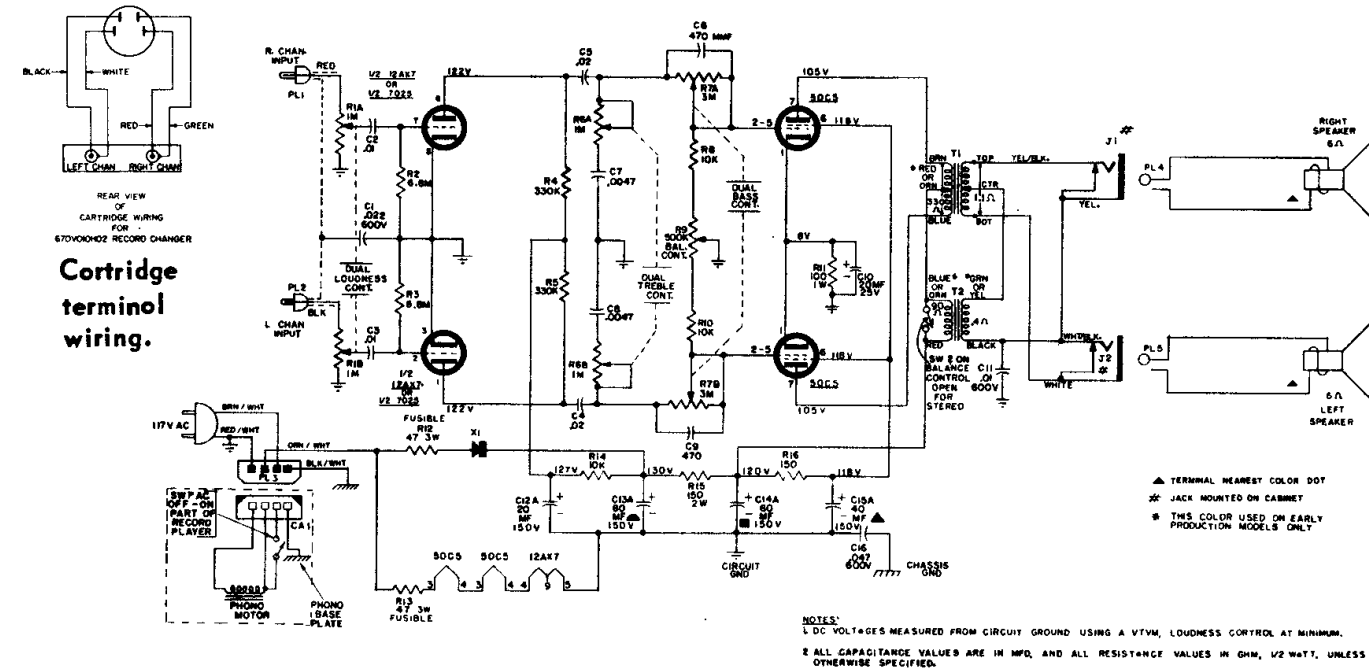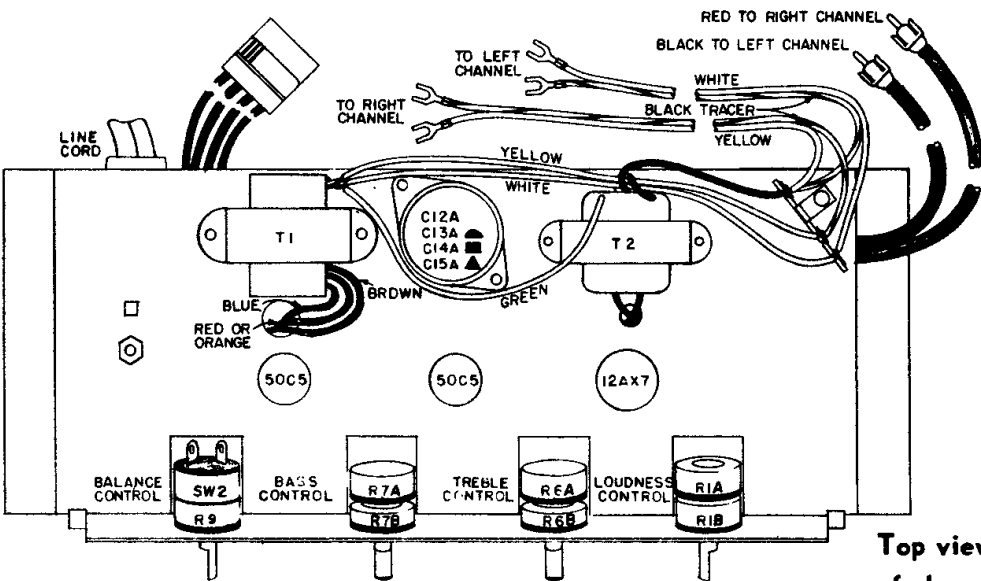

## CHASSIS REMOVAL

1. Remove control knobs. Remove the perforated tube-service cover which is attached to the cabinet by 2 phillips screws.
2. Remove the 4 phillips screws holding the motorboard. Lift the motorboard.
3. Note the color and location of the two coax cables connecting to the record changer. Disconnect the amp-lok plug and the two coax cable plugs from the record changer.
4. Remove the 4 speed nuts holding the chassis to the cabinet front. Remove screws holding the two External Speaker sockets.

## PHASING

Each speaker is coded with a dot on one terminal. The striped speaker leads must go to the speaker terminals marked with a color dot.

