


V-2508-02



1. Remove 4 phillips screws holding the motorboard. Lift the motorboard.
2. Disconnect the speaker leads.
3. Remove the chassis cover (2 screws) and unsolder the 2 leads from the pickup cartridge and 2 leads from the phono motor.
4. Remove the 2 speed nuts holding the chassis to the motorboard.

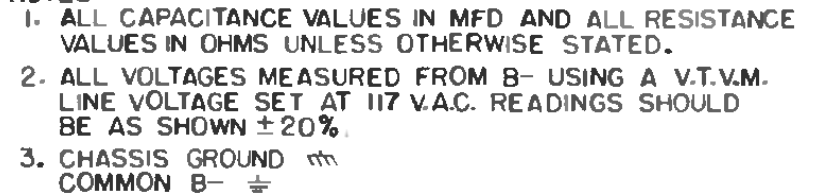