

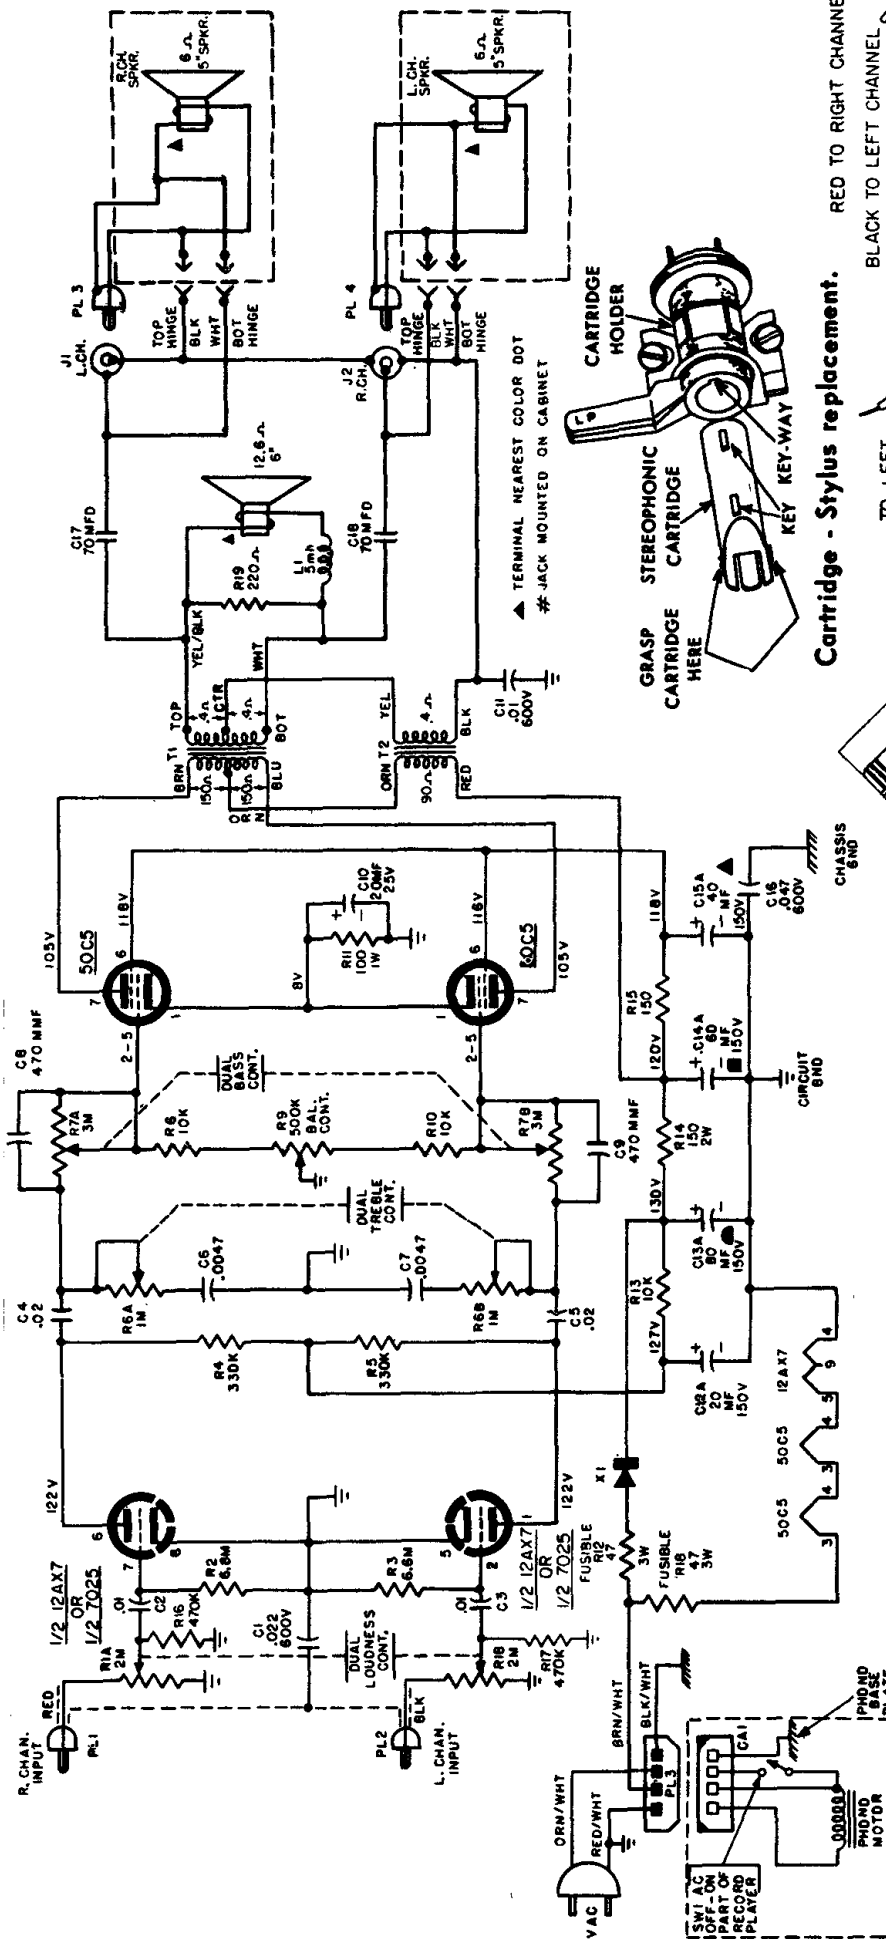


WESTINGHOUSE Chassis V-2507-5 Models H-67ACS1, H-67ACS2

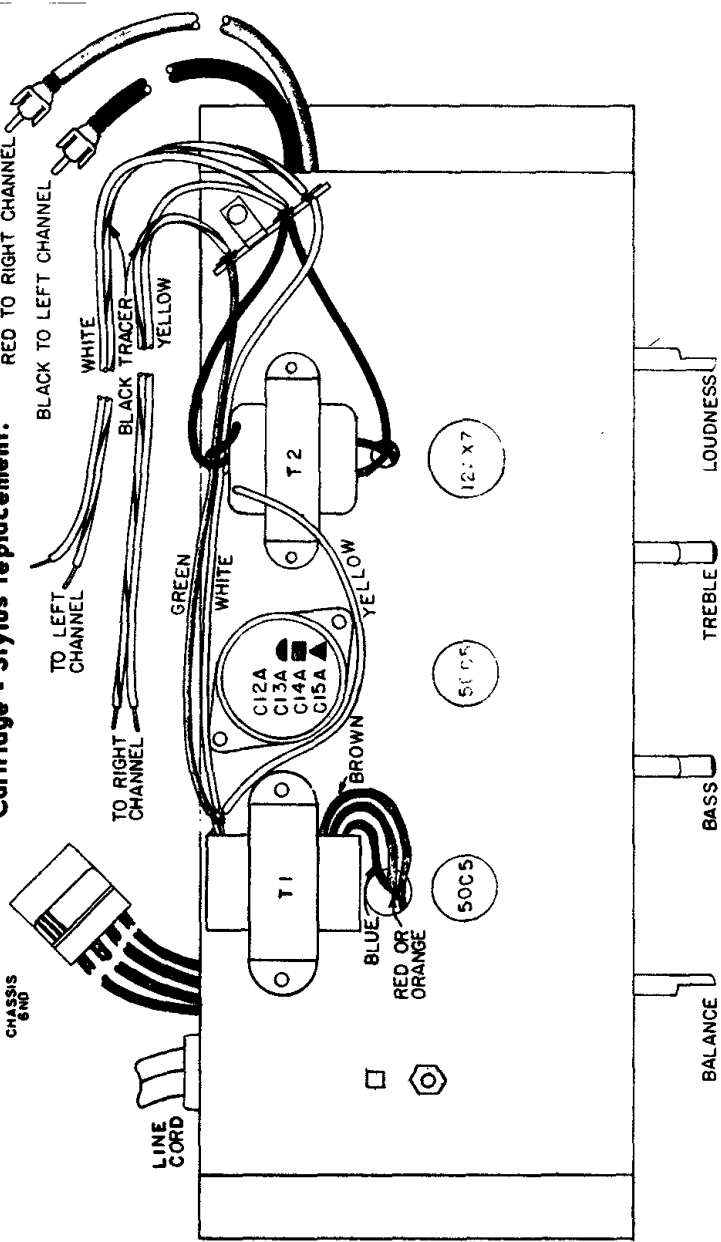

Cartridge - Stylus replacement.

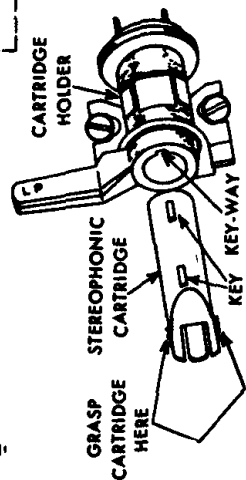

- NOTES:
1. DC VOLTAGES MEASURED FROM CIRCUIT GROUND USING A VTVM, LOUDNESS CONTROL AT MINIMUM.
 2. ALL CAPACITANCE VALUES ARE IN MFD, AND ALL RESISTANCE VALUES IN OHM, 1/2 WATT, UNLESS OTHERWISE SPECIFIED.

CHASSIS REMOVAL

1. Remove control knobs. Remove the escutcheon mounting board attached to the cabinet by 4 Phillips screws. Remove the perforated tube service cover which is attached to the cabinet by 3 Phillips screws.
2. Remove the 4 Phillips screws holding the motorboard. Lift the motorboard.
3. Note the color and location of the two coax cables connecting to the record changer. Disconnect the amp-lok plug and the two coax cable plugs from the record changer. Remove the record changer.
4. Remove the 2 nuts holding the speaker to the cabinet front and remove the speaker. Note the connections of the speaker leads to the terminal board and unsolder them from the terminals.
5. Remove the 4 nuts holding the chassis and remove the chassis.