


**Models H-557P4, H-558P4, H-559P4, H-598P4,  
and H-599P4, using Chassis V-2271-1**

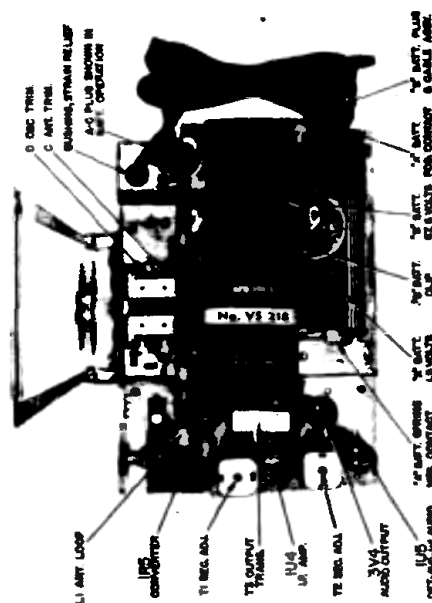

Step	Connect Signal Generator to	Signal Generator Frequency	Set Tuning Gang to	With VTVM Across The Voice Coil Adjust for Maximum Output
1	Stator of R-F tuning capacitor (A), through a .01 mfd. capacitor with low side to B-.	455 kc.	Minimum capacity	Top and bottom slugs in 2nd and 1st I-F trans. in order given
2	Radiated Signal	1625 kc.	Minimum capacity	Osc. trimmer (D)
3	Radiated Signal	1400 kc.	1400 kc.	Ant. trimmer (C)