


Westinghouse

Chassis Assembly V-2259-1, used in
Models H-541T5, H-542T5, H-543T5,
H-544T5, H-545T5, H-546T5.

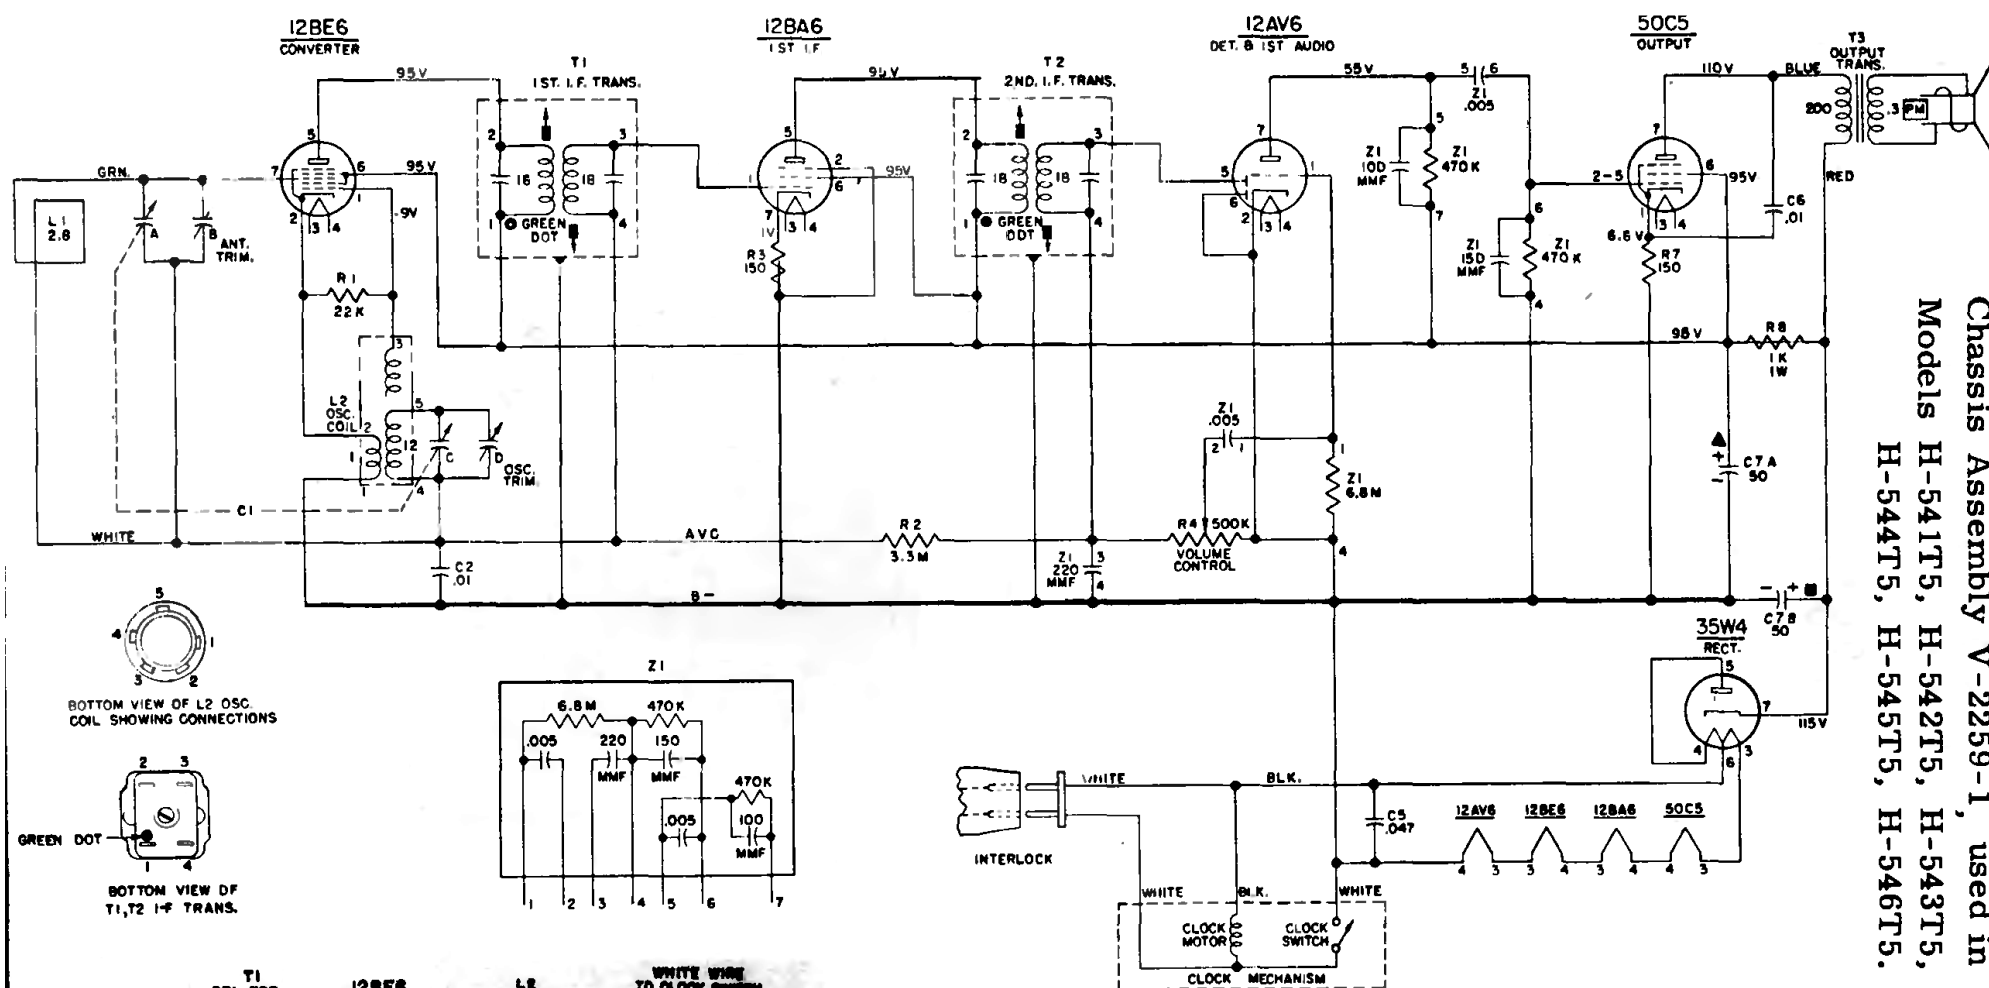

NOTES:

- ALL VOLTAGES MEASURED FROM COMMON NEGATIVE USING A V.T.V.M. AND NO SIGNAL INPUT. LINE VOLTAGE SET AT 117V A.C. READINGS SHOULD BE AS SHOWN ± 20 PER CENT.
- ALL CAPACITANCE VALUES IN MFD. AND ALL RESISTANCE VALUES IN OHMS UNLESS OTHERWISE SPECIFIED.

ALIGNMENT

While making the following adjustments, keep the volume control set for maximum output and the signal gen output attenuated to avoid AVC action.

Step	Connect Signal Generator to -	Signal Generator Frequency	Radio Dial	Connect V.T.V.M. Across Voice Coil and Adjust for Maximum Output -
1.	Stator of ant. tuning capacitor (A) through a 200 mmf capacitor	455 kc.	Minimum capacity	Top and bottom slugs of T2 and T1 in order given
2.	Same as step 1	1625 kc.	Minimum capacity	Oscillator trimmer (D)
3.	Radiated signal	1400 kc.	1400 kc.	Antenna trimmer (B)