



## PARTS LIST

CODE	PART NO	DESCRIPTION	CODE	PART NO	DESCRIPTION	CODE	PART NO	DESCRIPTION
C1	A16 156	01 MFD 400 volt condenser	R2	A60 664	15 megohm 1/2 watt resistor		A71 22	Cover for volume control
C2	A15 192	400 MMF mica condenser	R3	A60 663	10 megohm 1/2 watt resistor		A75 52	Dial drive shaft
C3A, C3B	B19 180	Variable condenser	R4	A60 662	470K ohm 1/2 watt resistor		A24 164	Volume control and switch
C4	A15 175	50 MMF mica condenser	R5	A60 658	120 ohm 1/2 watt resistor		B79-340	5" P M speaker with output transformer
C5	A16 154	2 MFD 400 volt condenser	R6	A60 698	10K ohm 1 watt resistor			
C6	A16 151	02 MFD 600 volt condenser	R7	A60 698	1000 ohm 1/2 watt resistor			
C7	A16 152	05 MFD 200 volt condenser	R8	A60 698	220K ohm 1/2 watt resistor		D83-452	Cabinet back
C8, C12	A15 176	250 MMF mica condenser	R9	A60 660	47K ohm 1/2 watt resistor		D42 376	Cabinet Mahogany
C9, C11	A16 153	005 MFD 600 volt condenser	R10	A60 685	1 megohm 1/2 watt resistor		A42-398	Cabinet, Ivory
C10	A16 150	02 MFD 400 volt condenser	R11	A60 668	68 ohm 1/2 watt resistor		B67 504	Dial scale
C13	A18 280	40 MFD 150 volt electrolytic condenser	R12	A60 733	1st I F transformer		A52 181	Knobs Mahogany
C14	A18 272	20 MFD 150 volt electrolytic condenser	T1	B10 453	2nd I F transformer		A52 189	Knobs Ivory
C15A		B C antenna trimmer (on variable condenser)	T2	B10 454	Output transformer (part of speaker)		A52-223	Knobs Band switch
C15B		B C oscillator trimmer (on variable condenser)	T3	A10 483	S W antenna coil		A58-46	Dial pointer
C16	A20 143	S W antenna trimmer condenser	L1	A10 485	B C antenna coil		A83 279	Dial scale retainer, left
C17	A20 143	S W oscillator trimmer condenser	L2	A10 485	B C oscillator coil		A83-280	Dial scale retainer, right
R1	A68-659	22K ohm 1/2 watt resistor	L3	A10 494	B C oscillator coil		A69 177	Band switch