


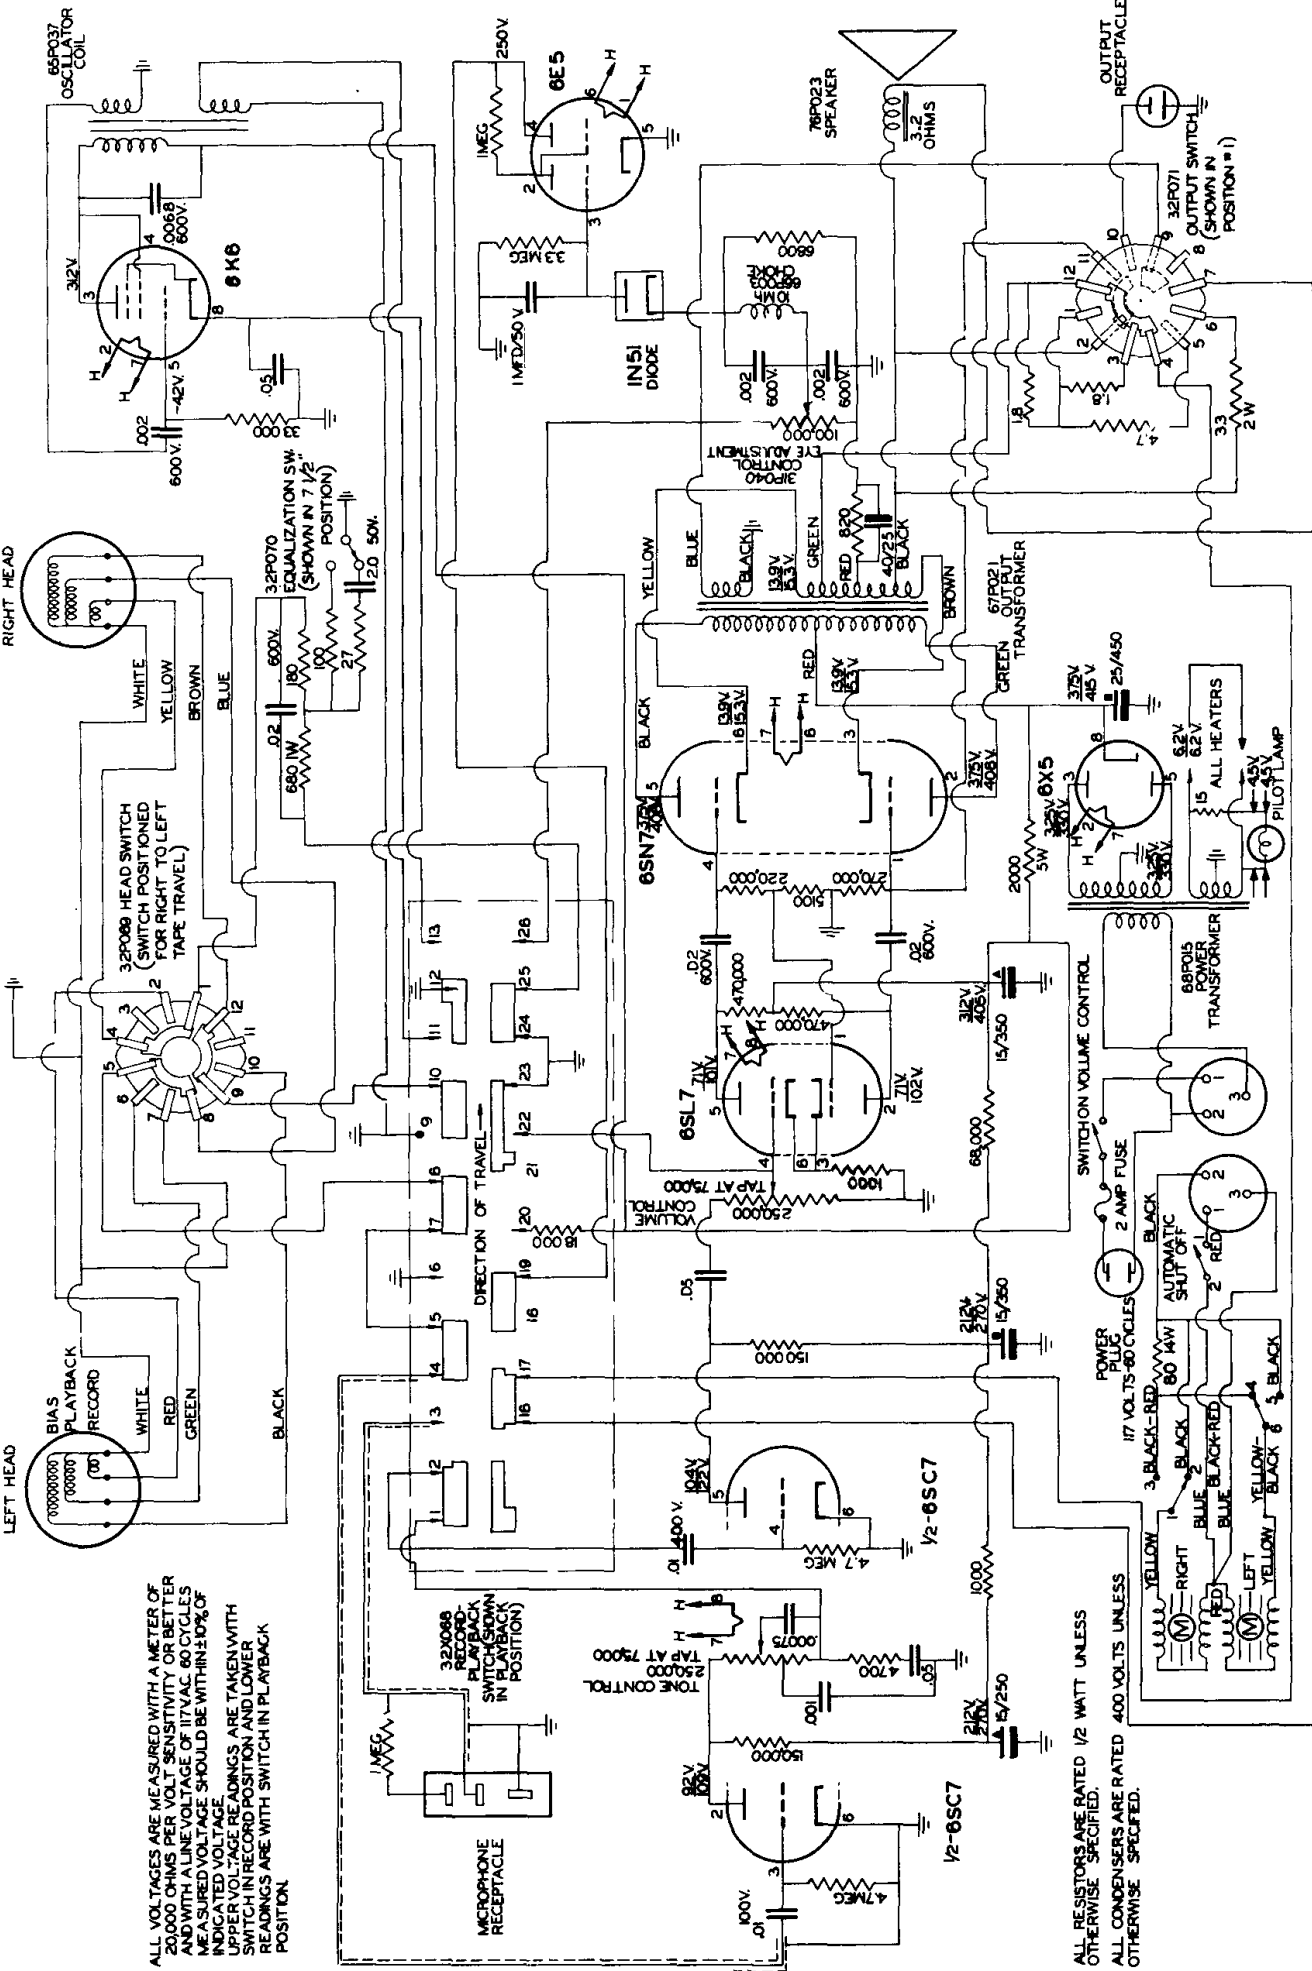

WEBSTER-CHICAGO  
MODEL 210



the output selector switch to position 2. Adjust the output of the oscillator and the volume control of the recorder so a 10.5 volt signal is indicated on the VTVM. Adjust the potentiometer, so the shadow of the magic eye tube just closes

TO ADJUST THE MAGIC EYE VOLUME LEVEL INDICATOR:  
Apply a 1 volt signal from an audio oscillator to the phono input of the recorder. Connect a vacuum tube voltmeter to the output jack, and turn