


110 VOLT A.C.-BATTERY PACK ILA6
I.F. FREQUENCY 455 KC. CONVERTER

5 TUBE SUPERHETERODYNE
CHASSIS NO. 5B05 & 5B06

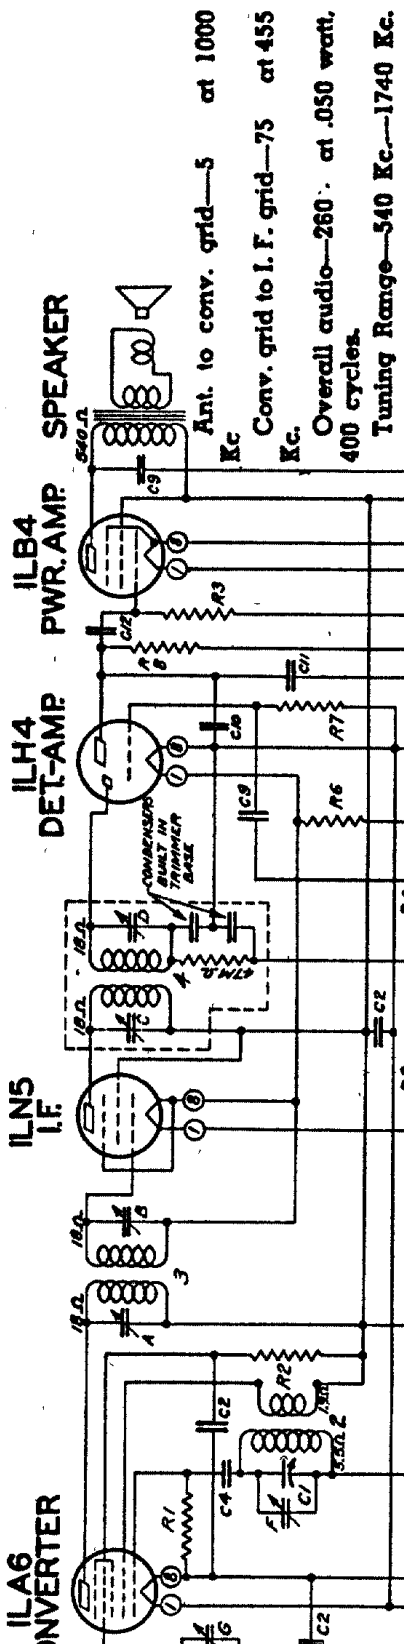

Chassis 5B05
Attached Speaker
Chassis 5B06
Remote Speaker

ZENITH RADIO CORP.


MODELS 5G617, 5G2617,
Ch. 5B05; 5G636, Ch. 5B06

8-29-41 (OR 22-1206) (OR 22-1206) ADDED

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
R1	63-654 100 M OHM	C1	22-1215 TWO GANG VARIABLE 5B05
R2	63-646 33 M OHM	C2	22-1216 TWO GANG VARIABLE 5B06
R3	63-660 2.2 MEG OHM	C3	22-829 .05 MFD.
R4	63-1236 2.2 MEG OHM	C4	22-827 .1 MFD.
R5	63-1241 VOLUME CONTROL 5B05	C5	22-1221 .0001 MFD.
R6	63-594 68 M OHM	C6	22-1222 .001 MFD.
R7	63-627 4700 OHM	C7	22-1223 .001 MFD.
R8	63-976 15 MEG OHM	C8	22-1224 .001 MFD.
R9	63-271 1 MEG OHM	C9	22-1225 .001 MFD.
R10	63-1097 870 OHM WIREWOUND	C10	22-1226 .001 MFD.
R11	63-1239 3 SECTION CHD OHM	C11	22-1227 .00025 MFD.
R12	63-439 2700 OHM	C12	22-1228 .01 MFD.
R13	63-627 180 OHM	C13	22-1229 40 MFD. ELECTROLYTIC
		C14	22-1230 .01 MFD.
		C15	22-1231 .001 MFD.

CHANGE OVER SWITCH
SHOWN IN POSITION FOR
A.C. OPERATION

CONVERTER ILA6
PWR. AMP ILB4
RECT. I1726G
I.F. ILN5

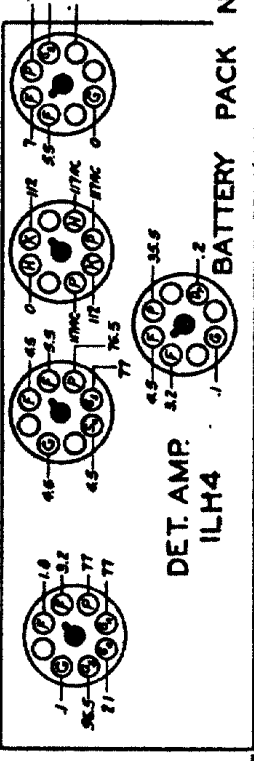


Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Transmitters	Purpose
1	Converter Grid	.5 mmfd.	455	—	600	A B C D	I F. Alignment
2	Ant.—Grid.	200 mmfd.	1400	—	1400	F	Set Osc. to Scale
3	"	200 mmfd.	1400	—	1400	G	Alignment of Antenna

BATTERY PACK NO. Z-682

CHASSIS MODEL SPEAKER
5B05 49-454 5"
5B06 49-455 6"

ANTENNA BLUE
GROUND BLACK

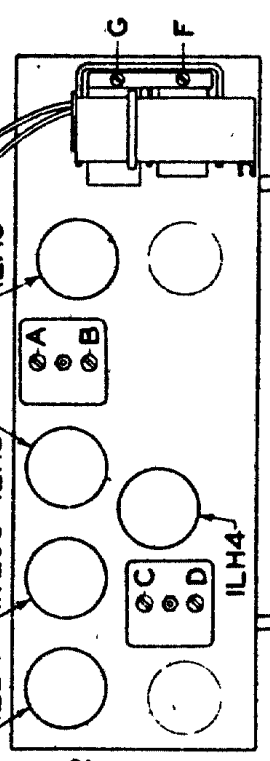

Power consumption—117 v.—20 watts.
ON-OFF SW & VOLUME
Power consumption. battery—1.02 watts.

*Grid. of test osc. connected to No. 8 pin of ILA6 socket.