

## Alignment Procedure

OPERATION	CONNECT OSC. TO	DUMMY ANTENNA	INPUT SIG. FREQUENCY	SET DIAL AT	TRIMMERS	PURPOSE
1	Converter Grid	.5 Mfd.	455 Kc.	600 Kc.	L4, 5, 6, 7	For I.F. Alignment
2	Single Turn Loosely Coupled to Wave-Magnet	.....	1600 Kc.	1600 Kc.	C1C	Set Osc. to Dial Scale
3		.....	1400 Kc.	1400 Kc.	C1A	Antenna Alignment

