

WESTINGHOUSE

Models H-76ACS1, H-76ACS2

Chassis V-2508-11

CHASSIS REMOVAL

1. Remove the perforated tube-service cover which is attached by 2 phillips screws.
2. Remove the 4 phillips screws holding the motor board. Lift the motor board.
3. Disengage the amp-lok from the changer and unsolder the leads to the changer terminal board.
4. Remove Volume control knobs.
5. Remove the 2 speed nuts holding the chassis to the cabinet front.
6. Disconnect the speaker leads.

