



# WESTINGHOUSE Chassis V-2507-4 Models H-66ACS1, H-66ACS2

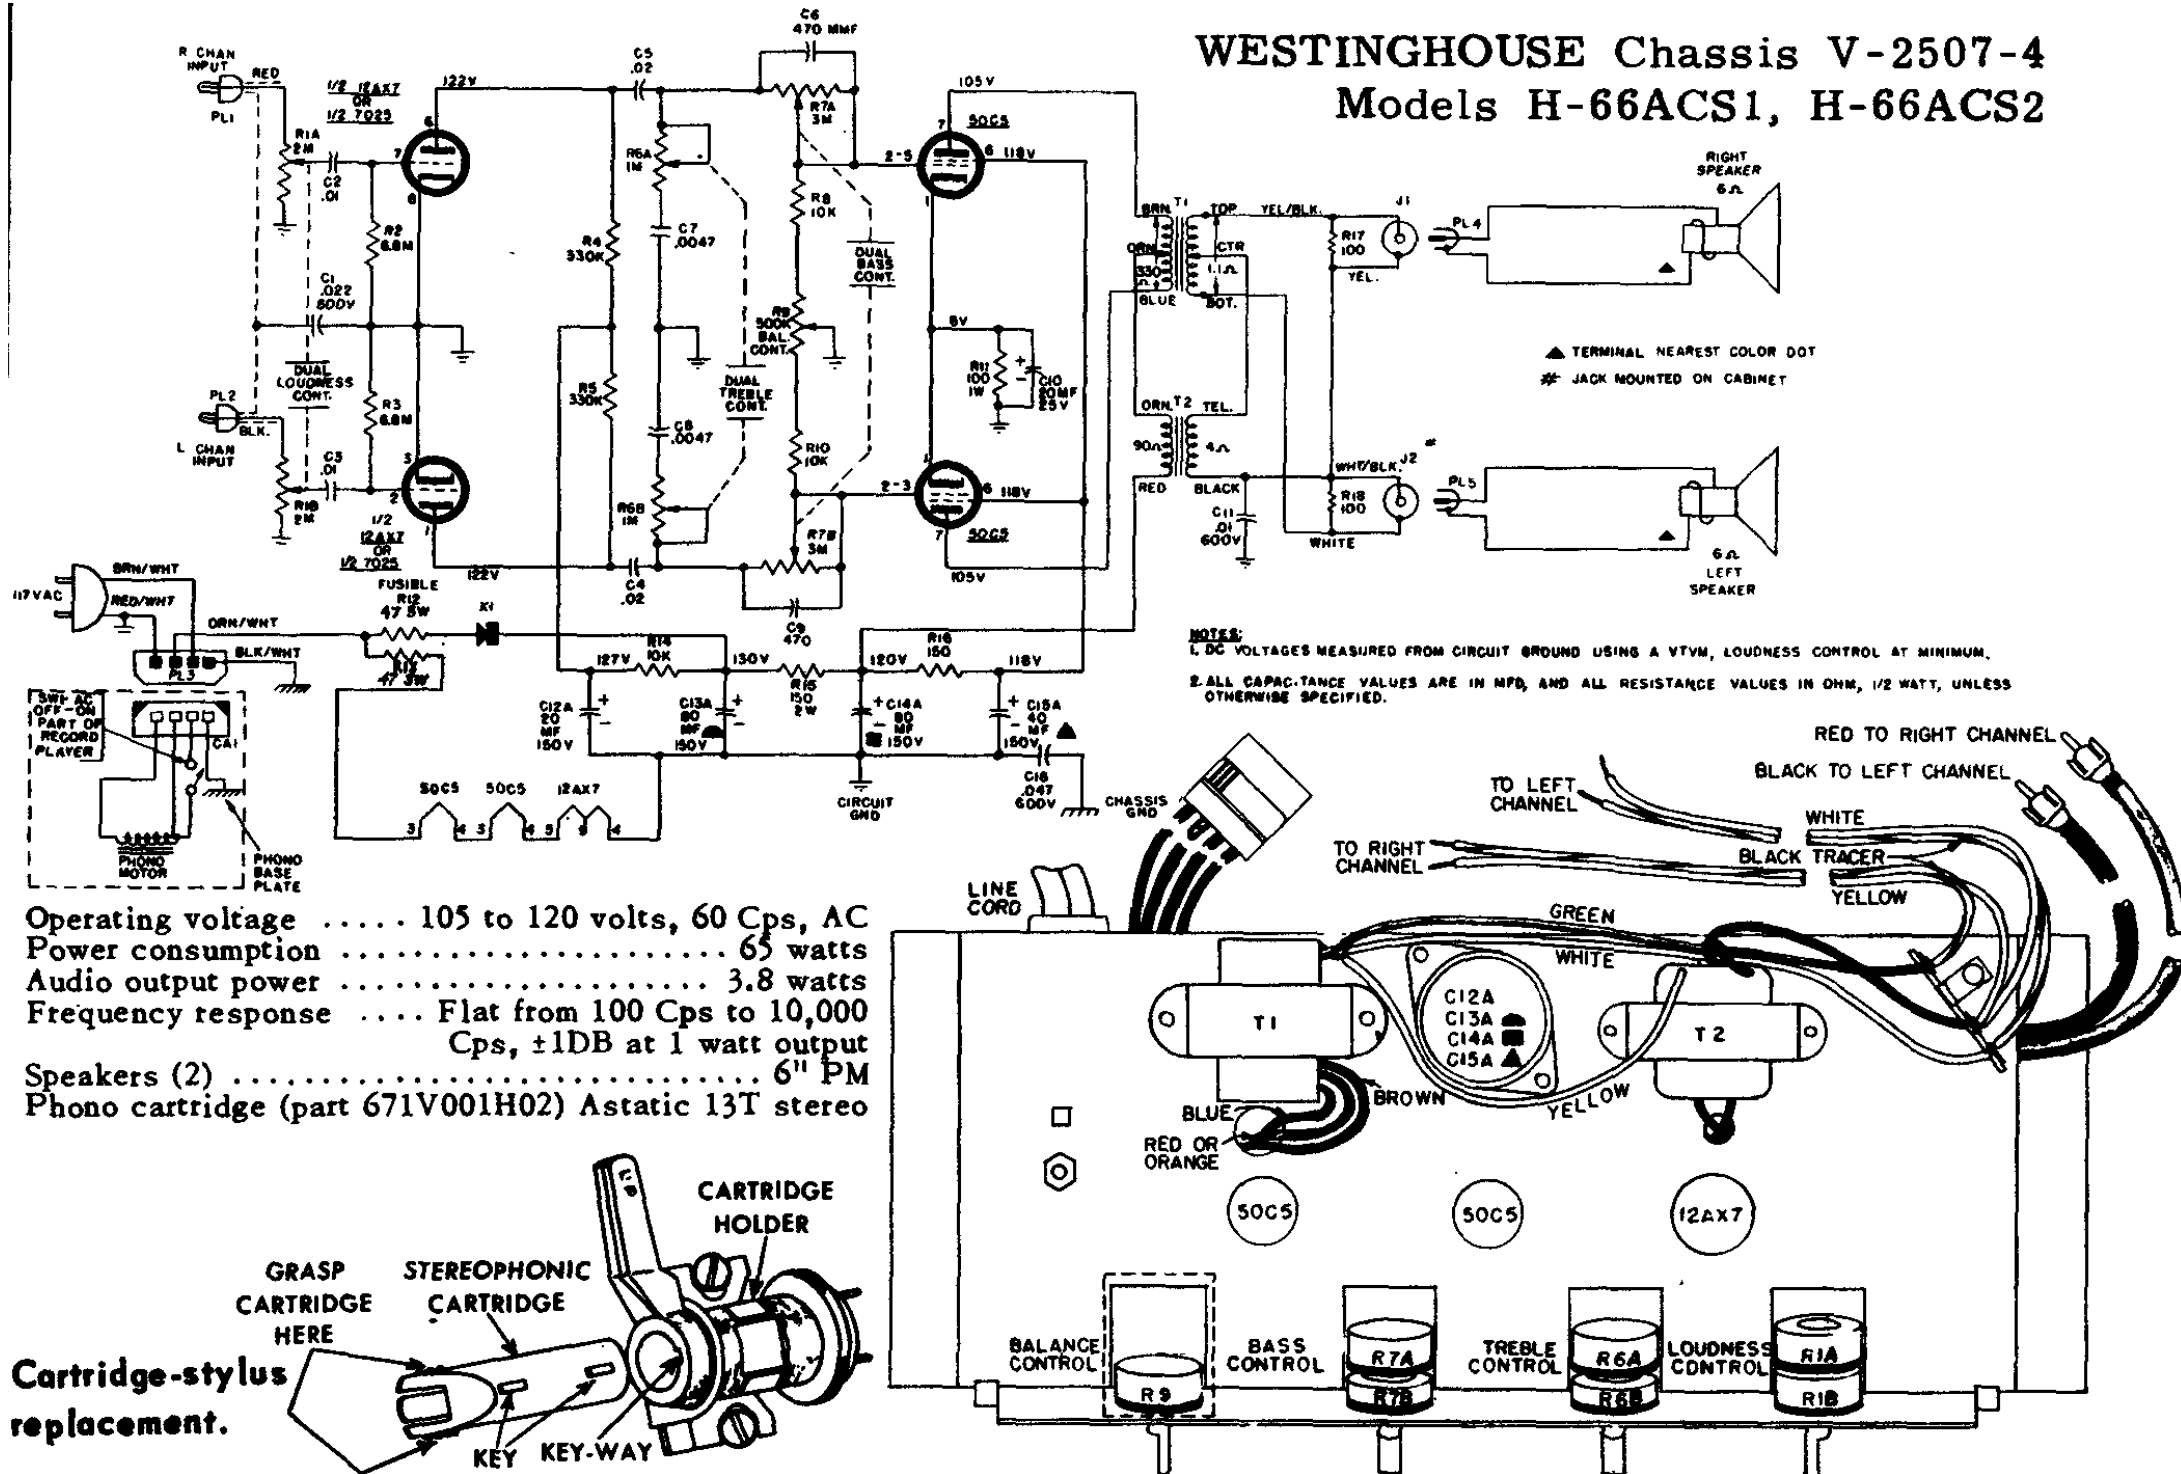


# WESTINGHOUSE Chassis V-2507-8, Models H-70ACS1, H-70ACS3, H-70ACS4

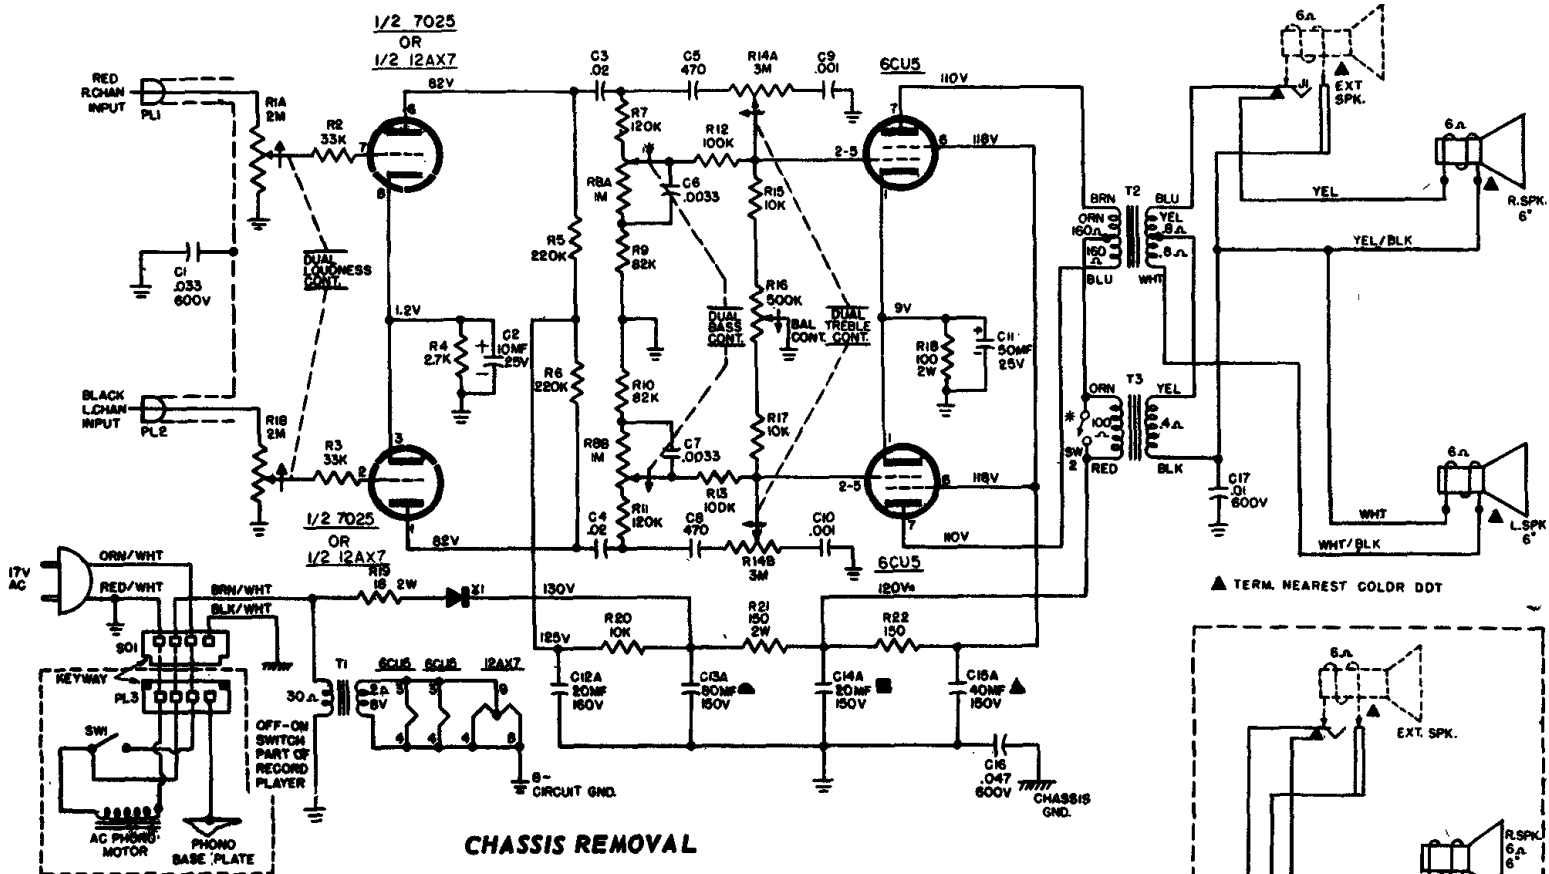


## NOTES:


1. ALL CAPACITANCE VALUES LESS THAN 1 ARE IN MFD, AND VALUES GREATER THAN 1 ARE IN MMFD, WHILE ALL RESISTANCE VALUES ARE IN OHMS 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
2. D.C. VOLTAGES MEASURED FROM 8-USING VTVM, LINE VOLT. SET AT 117 V AC. READINGS SHOULD BE WITHIN 10%.
3. AMPLOK CONNECTORS VIEWED FROM CONTACT END.
4. REAR SECTIONS OF ALL CONTROLS ARE RIGHT CHANNEL.
5. ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END)
6. SW2 USED IN EARLY PRODUCTION ONLY. THIS SWITCH IS OPEN IN STEREO POSITION.

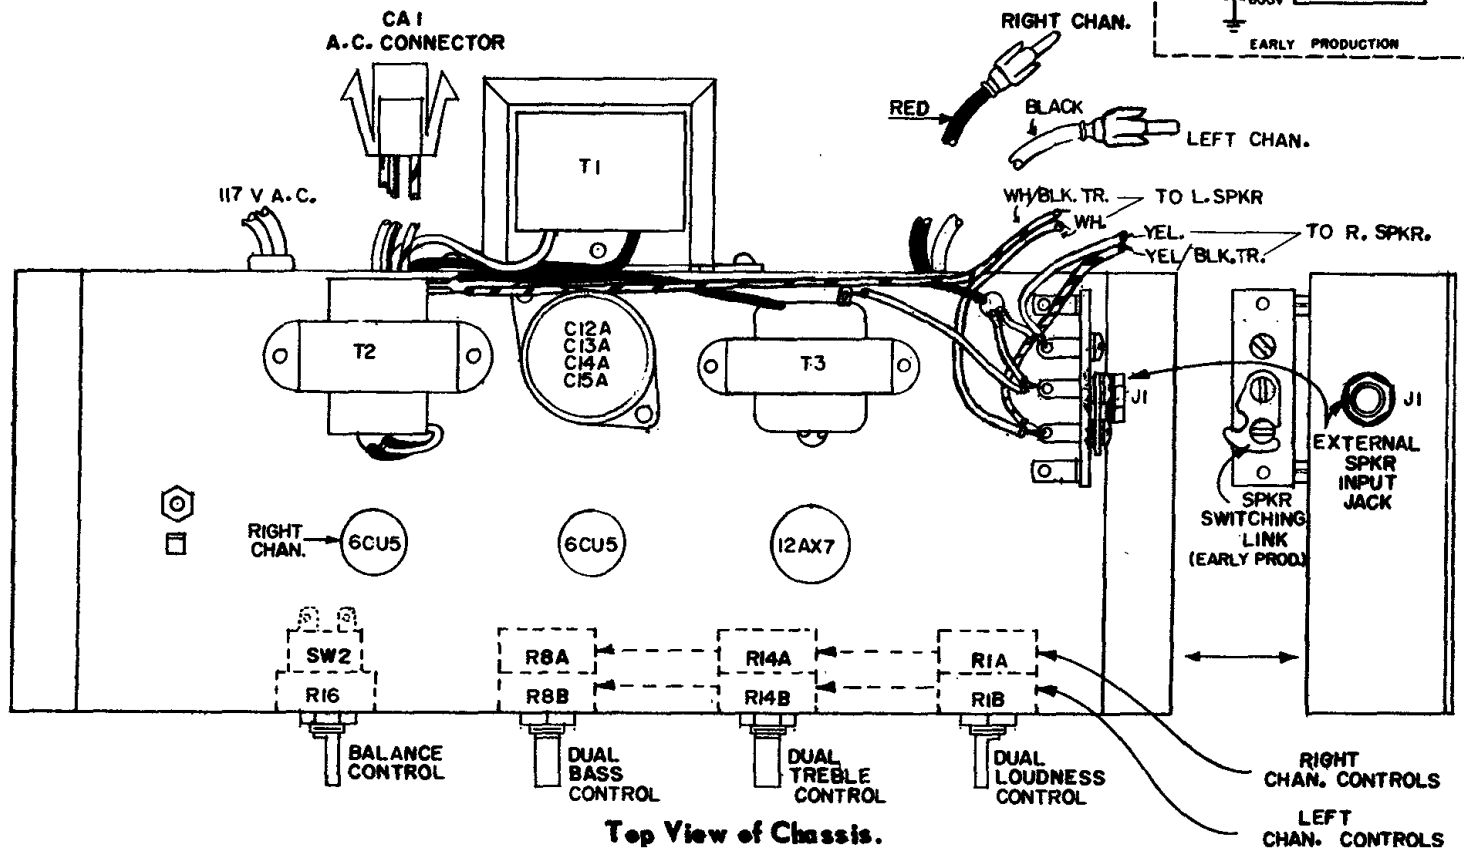

# WESTINGHOUSE Chassis V-2507-6 Models H-68ACS1 and H-68ACS2

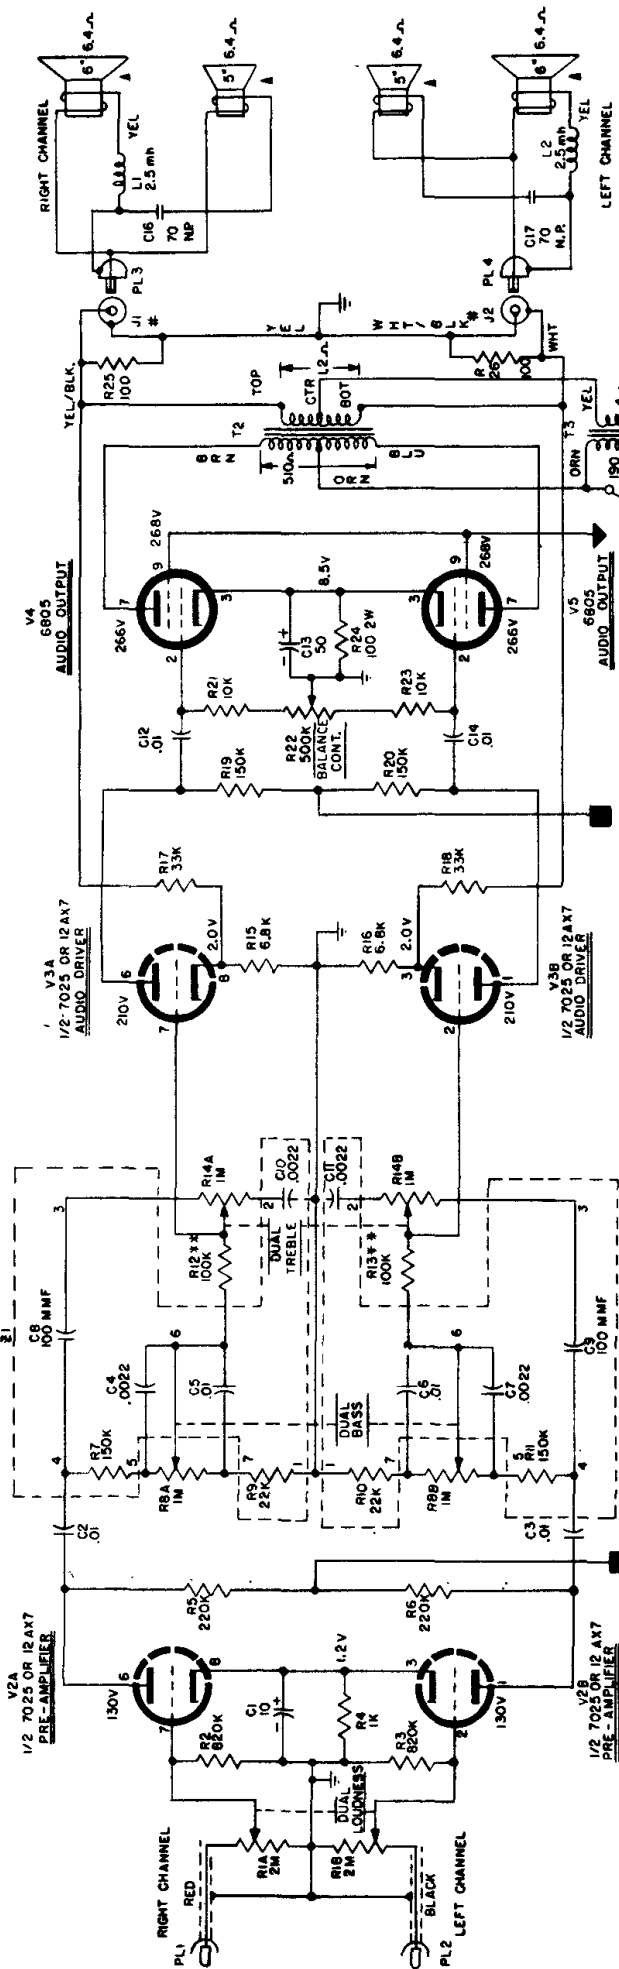

▲ TERMINAL NEAREST COLOR DOT  
# JACKS MOUNTED ON CABINET

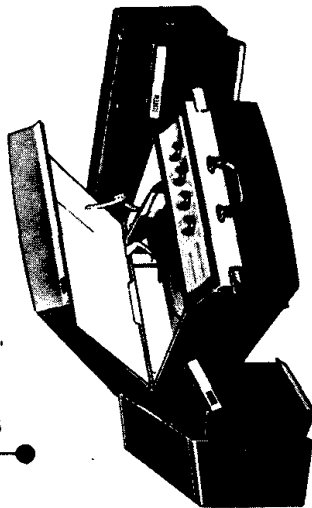


STYLUS REPLACEMENT (See Figure 1)

To remove stylus (item #1), move lever handle (#2) until it is pointing down. Gently pull spring clip (#3) slightly open with finger. Grasp stylus by lever handle and slip it out from under clip. To replace stylus, slip heel of stylus under clip. Gently pull clip slightly open with finger. Slip stylus under clip making certain that stylus shaft rests in center of coupler (#4).

## CARTRIDGE REPLACEMENT

Write down the sequence of colored wires connecting to the four terminals at rear of cartridge. Remove the mounting screws securing the cartridge in the tone arm. Remove the push-on connectors from the cartridge terminals. Push the connectors onto the terminals of the replacement cartridge with the wire-colors in the sequence previously noted for the original cartridge.

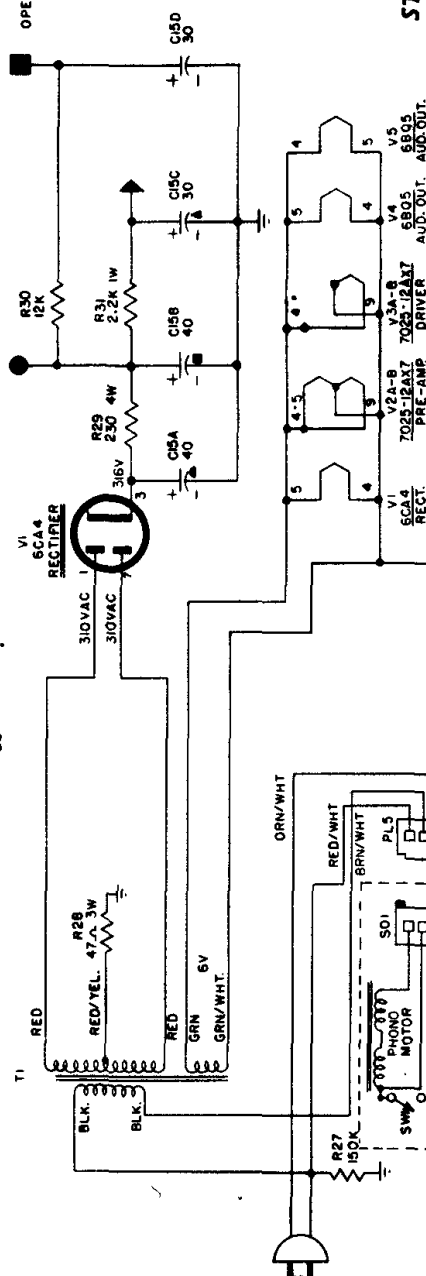

- NOTES:
1. ALL CAPACITANCE VALUES ARE IN MFD, ALL RESISTANCE VALUES ARE IN OHMS 1/2 WATT UNLESS OTHERWISE SPECIFIED.
  2. D.C. VOLTAGES MEASURED FROM POINTS INDICATED BY DASHES TO CHASSIS GROUND - NO SIGNAL APPLIED, USING A V.T.V.M. LINE VOLTAGE SET AT 117 VAC.
  3. REAR SECTIONS OF ALL CONTROLS ARE THE RIGHT CHANNEL.
  4. ALL AMPLOK CONNECTORS VIEWED FROM CONTACT END.
  5. #12 & #13 ARE NOT INCLUDED IN #1 OR #2.
  6. N.R. - NON POLARIZED.


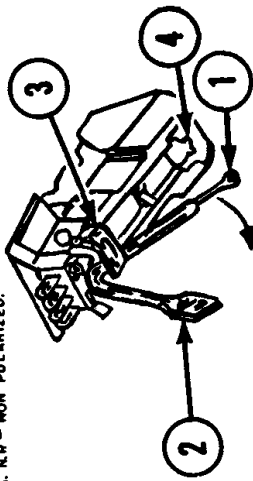


Figure 1  
Stylus removal  
and replacement.

Figure 2 - Cartridge terminal wiring.

# WESTINGHOUSE Chassis V-2507-5 Models H-67ACS1, H-67ACS2

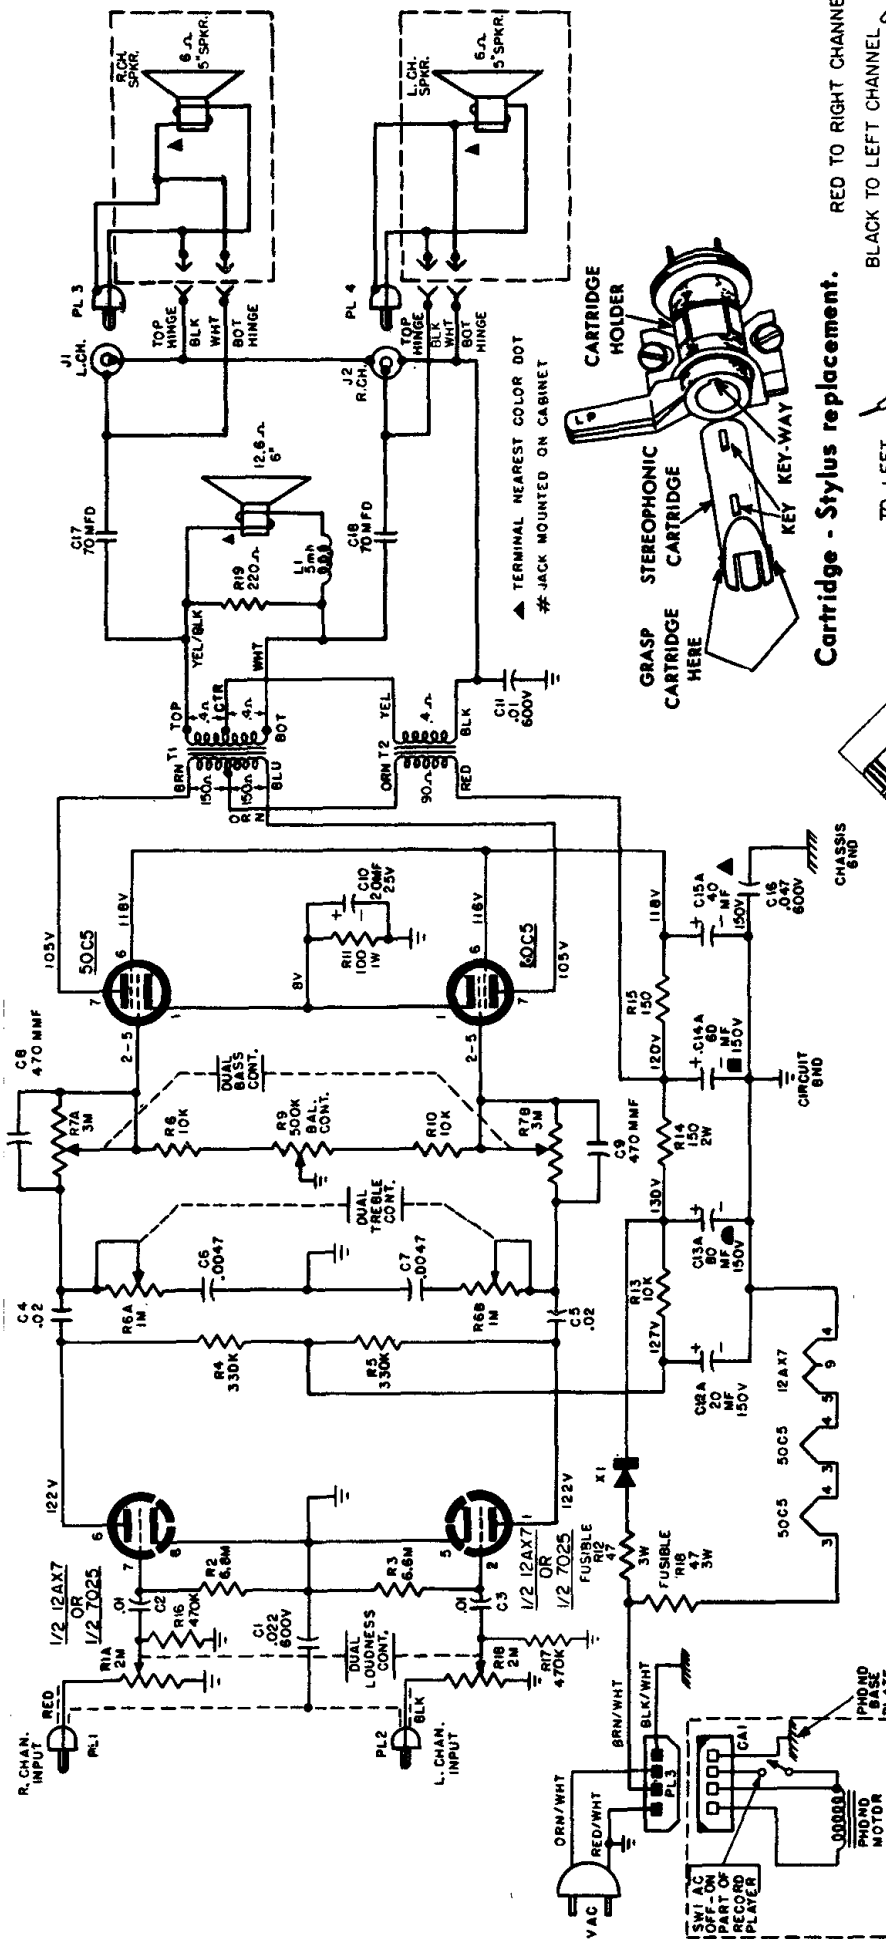

NOTES:  
1. DC VOLTAGES MEASURED FROM CIRCUIT GROUND USING A VTVM, LOUDNESS CONTROL AT MINIMUM.  
2. ALL CAPACITANCE VALUES ARE IN MFD, AND ALL RESISTANCE VALUES IN OHM, 1/2 WATT, UNLESS OTHERWISE SPECIFIED.

## CHASSIS REMOVAL

1. Remove control knobs. Remove the escutcheon mounting board attached to the cabinet by 4 Phillips screws. Remove the perforated tube service cover which is attached to the cabinet by 3 Phillips screws.
2. Remove the 4 Phillips screws holding the motorboard. Lift the motorboard.
3. Note the color and location of the two coax cables connecting to the record changer. Disconnect the amp-lok plug and the two coax cable plugs from the record changer. Remove the record changer.
4. Remove the 2 nuts holding the speaker to the cabinet front and remove the speaker. Note the connections of the speaker leads to the terminal board and unsolder them from the terminals.
5. Remove the 4 nuts holding the chassis and remove the chassis.

