


WESTINGHOUSE
Models H-78ACS1, -ACS2
Chassis V-2506-6

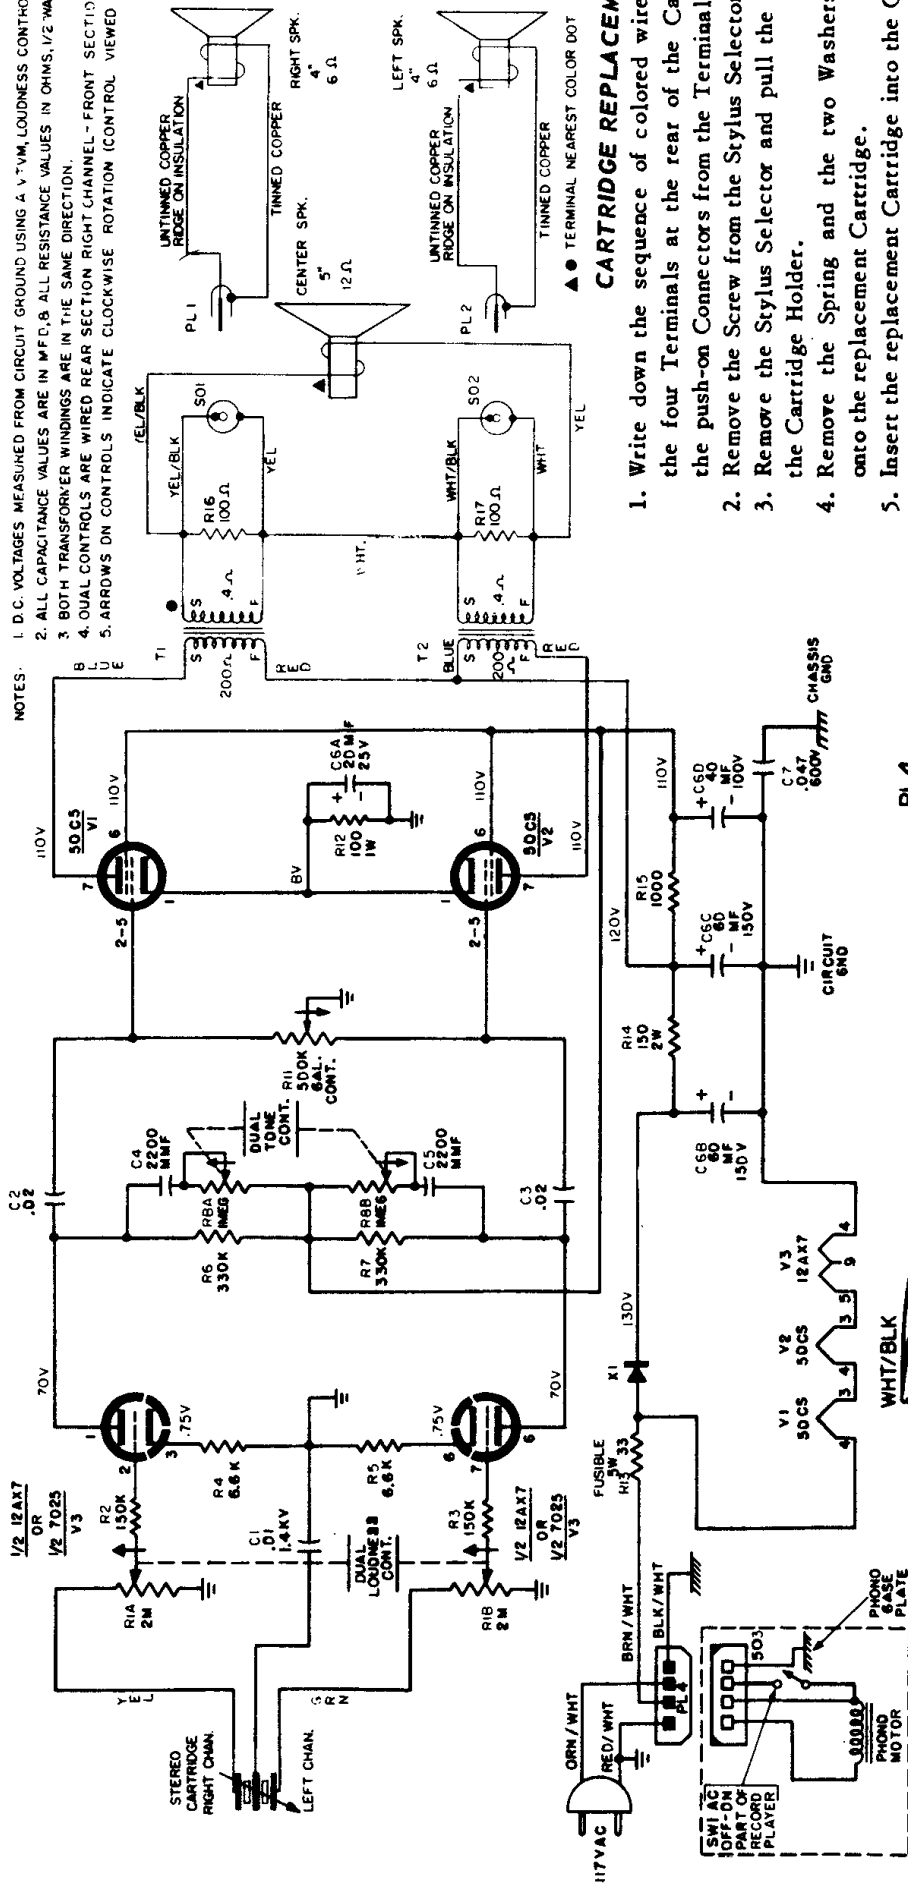

CARTRIDGE REPLACEMENT

1. Write down the sequence of colored wires connecting to the four Terminals at the rear of the Cartridge. Remove the push-on Connectors from the Terminals.
2. Remove the Screw from the Stylus Selector.
3. Remove the Stylus Selector and pull the Cartridge out of the Cartridge Holder.
4. Remove the Spring and the two Washers and put them onto the replacement Cartridge.
5. Insert the replacement Cartridge into the Cartridge holder; push it as far in toward the front of the Tone Arm as it will go and hold it there.

