
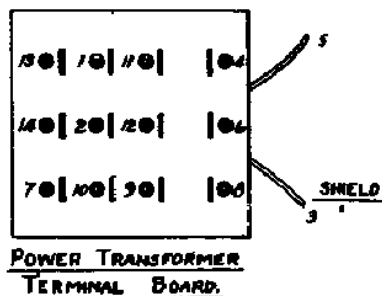


WARE INC CORP

MODEL 44d

DOTTED LINES SHOW CONNECTIONS FOR
PIPING JACK AND SWITCH INSTALLATION

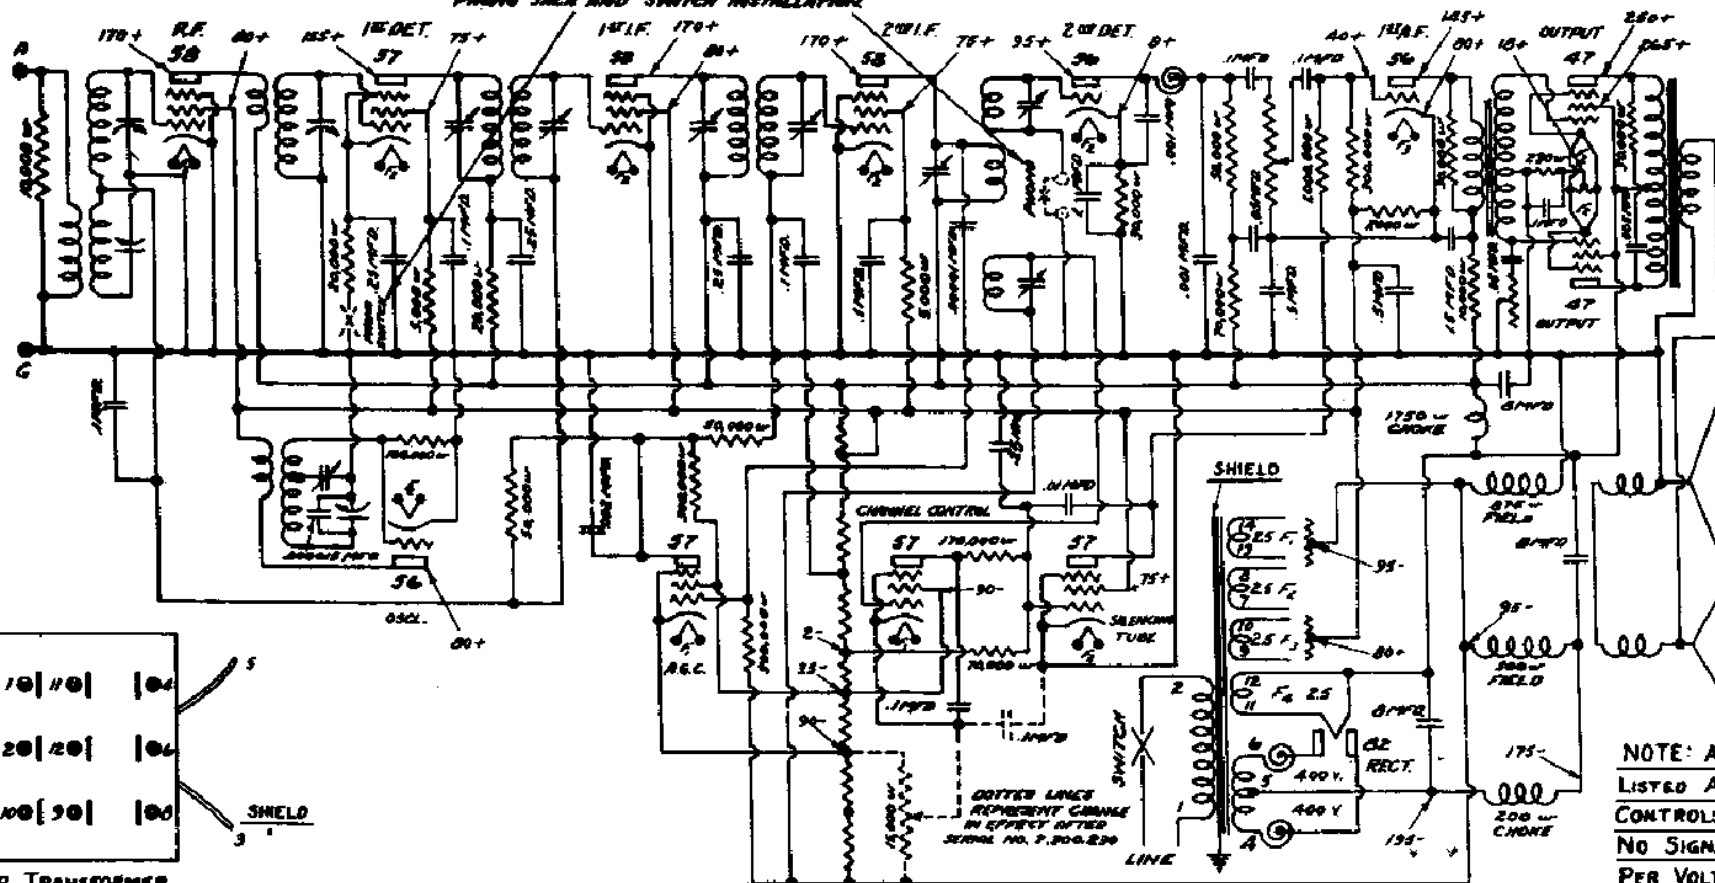

NOTE: ALL VOLTAGE READINGS
LISTED ARE TAKEN WITH ALL
CONTROLS TURNED ON FULL AND
NO SIGNAL - USE 1000 OHMS
PER VOLT VOLTMETER. PLUS -
ABOVE GROUND. MINUS - BELOW
GROUND.

