

SONY

8FC-69W

(Continued on next page.)

X101 2SC629



X102 2SC629

X201 2SC403A

X202 2SC403A

D101 IT26 D102 IT240

D201 IT26

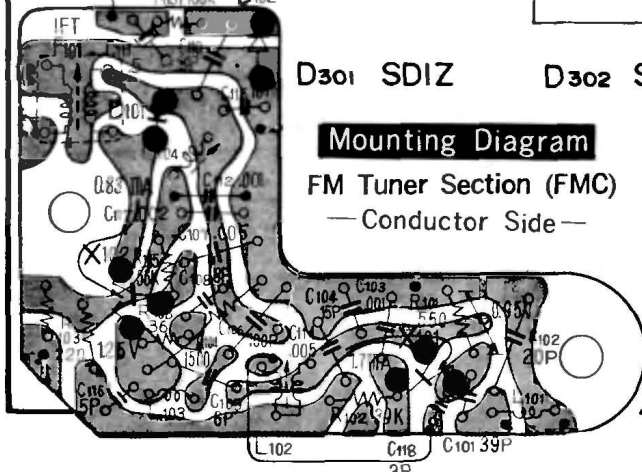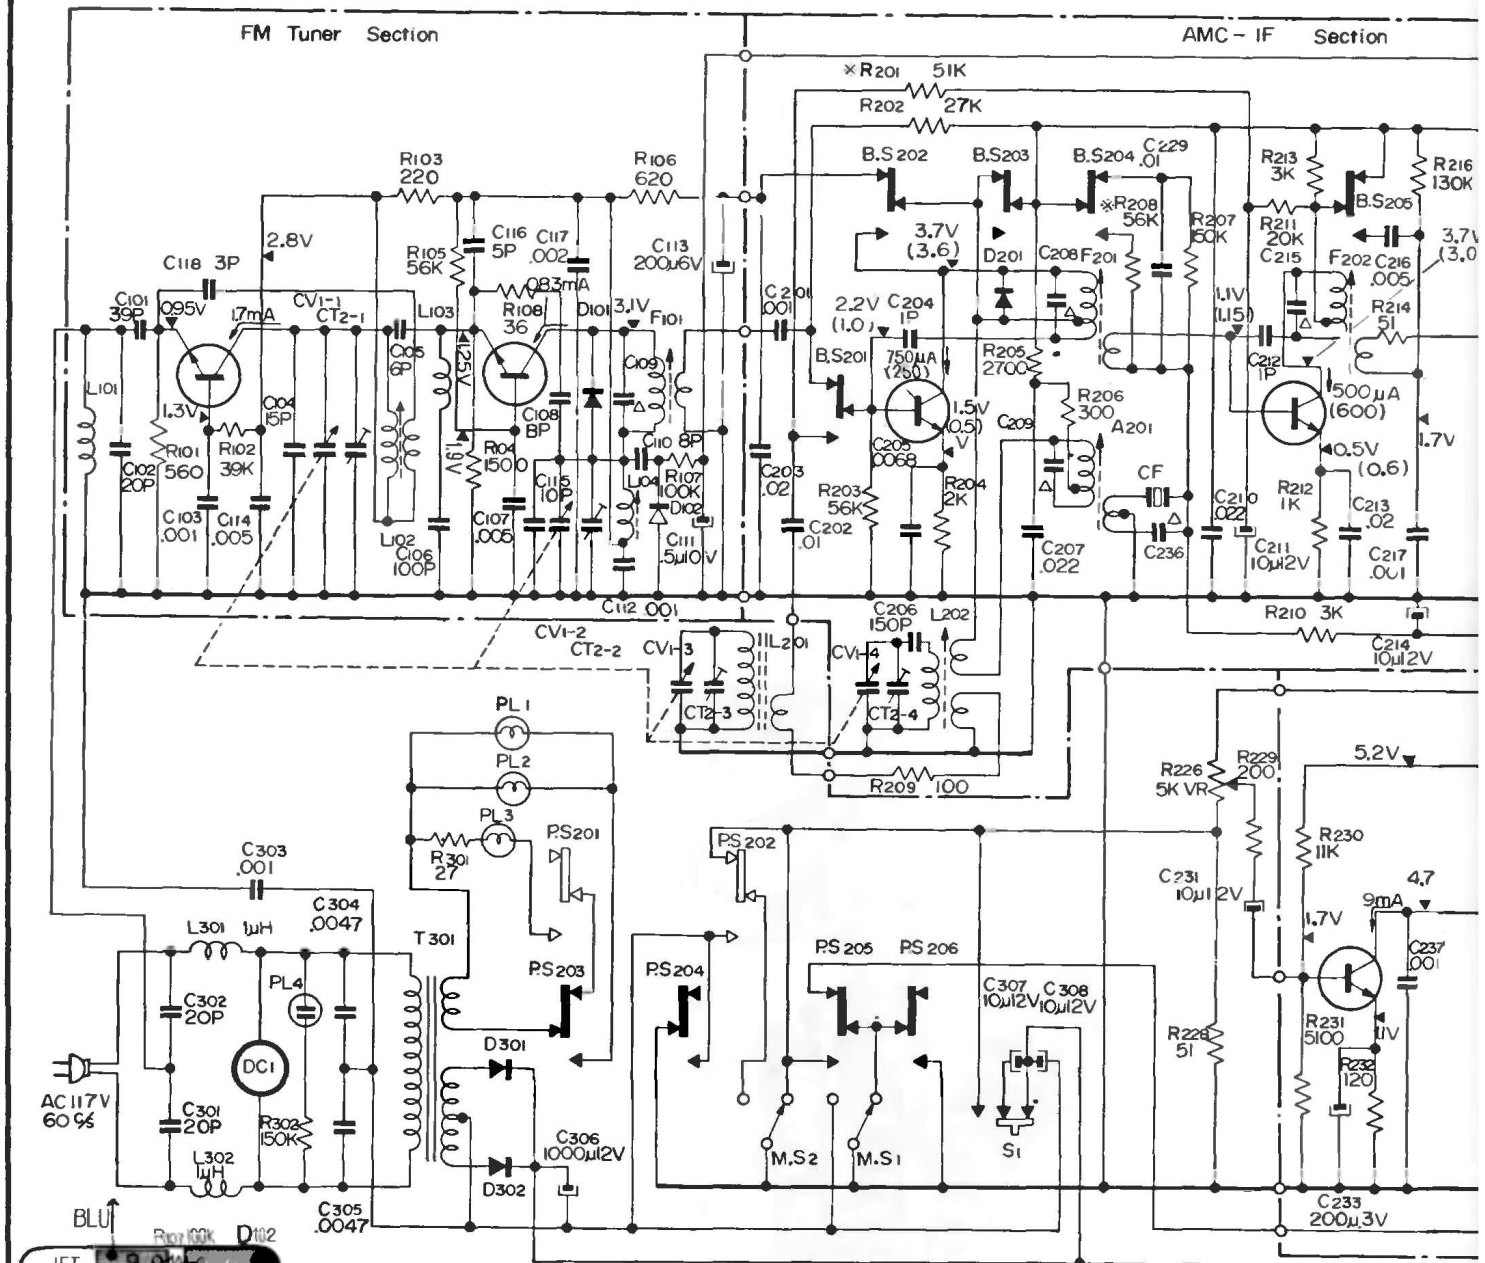

D301 SD1Z

D302 SD1Z

Mounting Diagram

FM Tuner Section (FMC)



— Conductor Side —

X101 2SC629

X102 2SC629

D102 IT-240

X204 2SC633

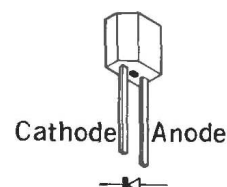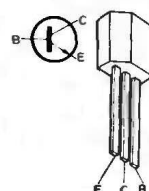


SONY

8FC-69W

(Continued from preceding page.)

X203 2SC403A

D204 1T23 D202,203 1T26


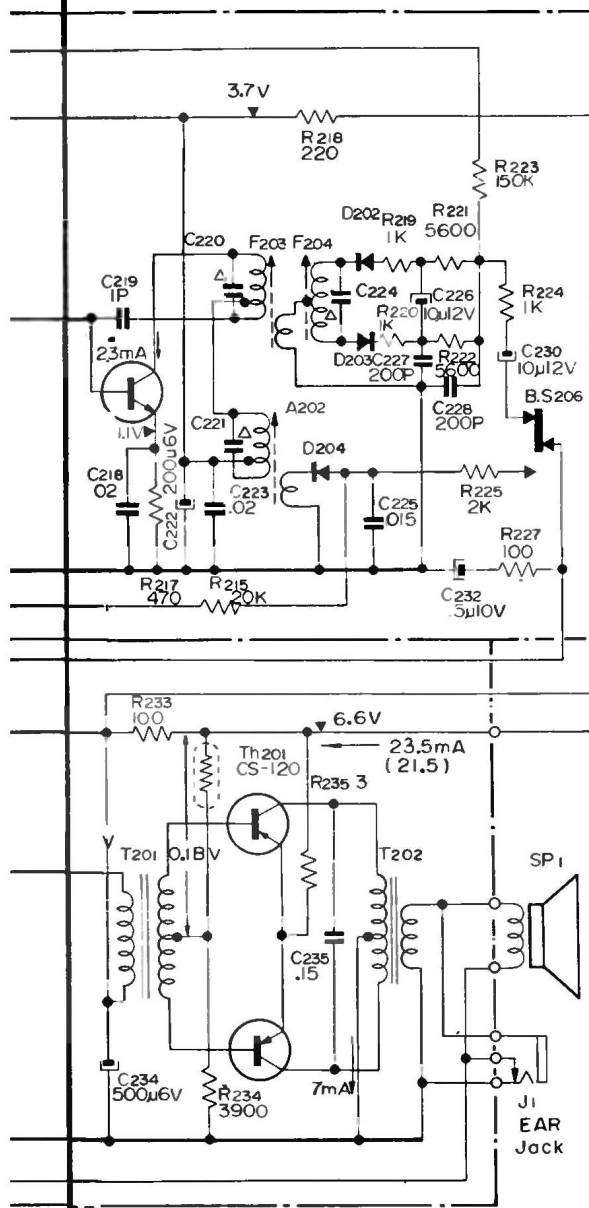


AF Section

X205, 206 2SB383

X201 2SC403
X202 2SC403
X203 2SC403
X204 2SC633


X205 2SB383
X206 2SB383

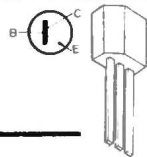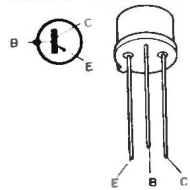

E C B

Mounting Diagram

AMC-IF-AF Section

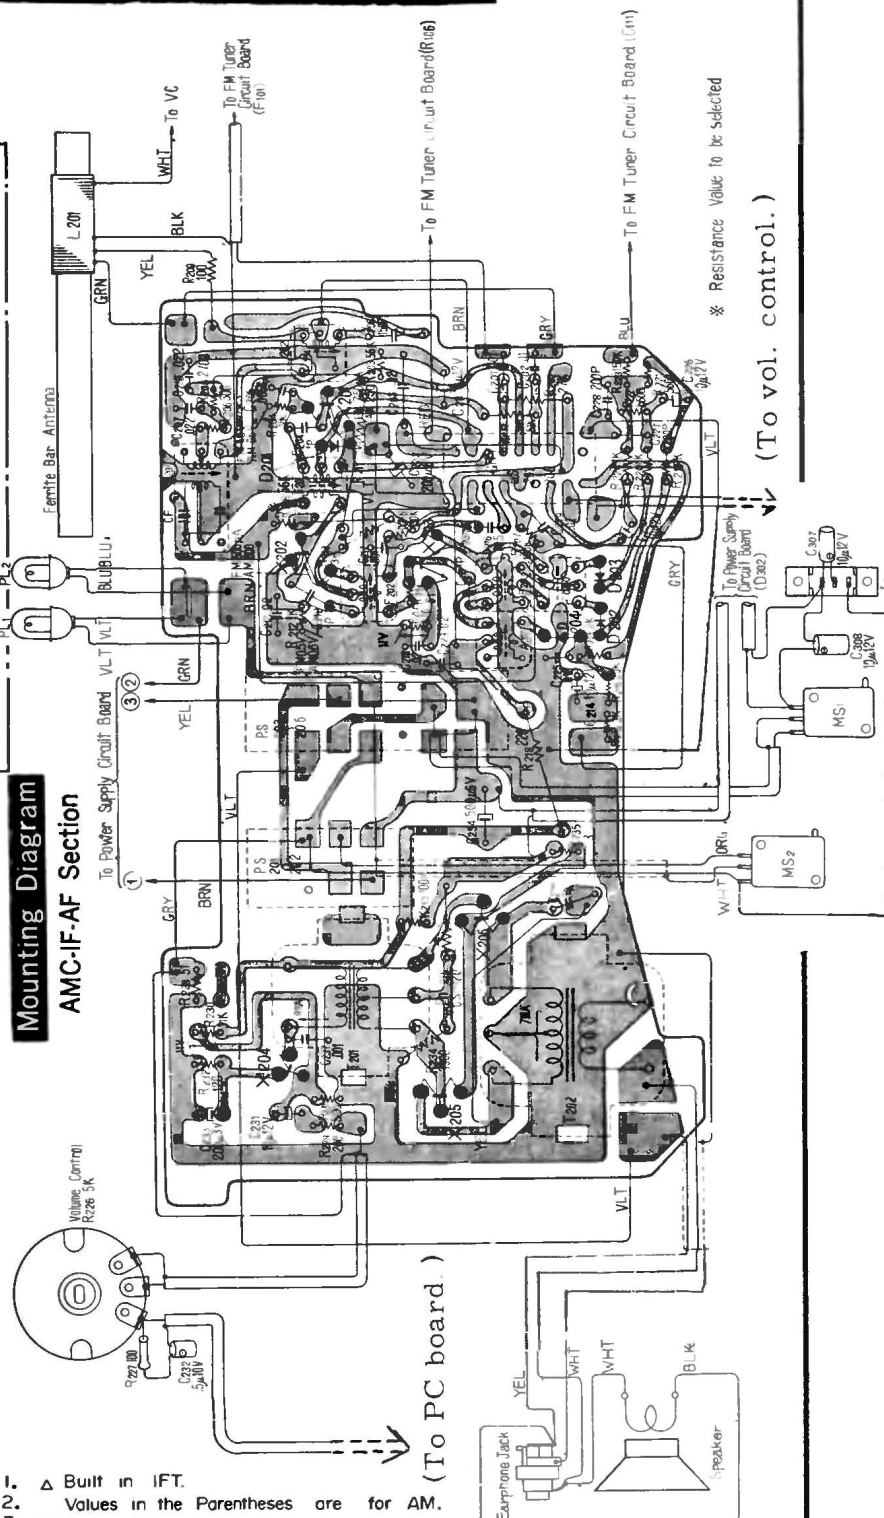

1. Δ Built in IFT.
2. Values in the Parentheses are for AM.
3. \times : Resistance Value to be selected.
4. B.S201-206: Band Setting Switch.
5. FM Band Setting Switch shown is set to FM position.

AM

6. P.S201-202: Automatic Switch.
7. P.S203-206: Manual Switch.

Intermediate Frequency: FM 10.7 Mc AM 455 Kc

* Resistance Value to be selected

(To vol. control.)