
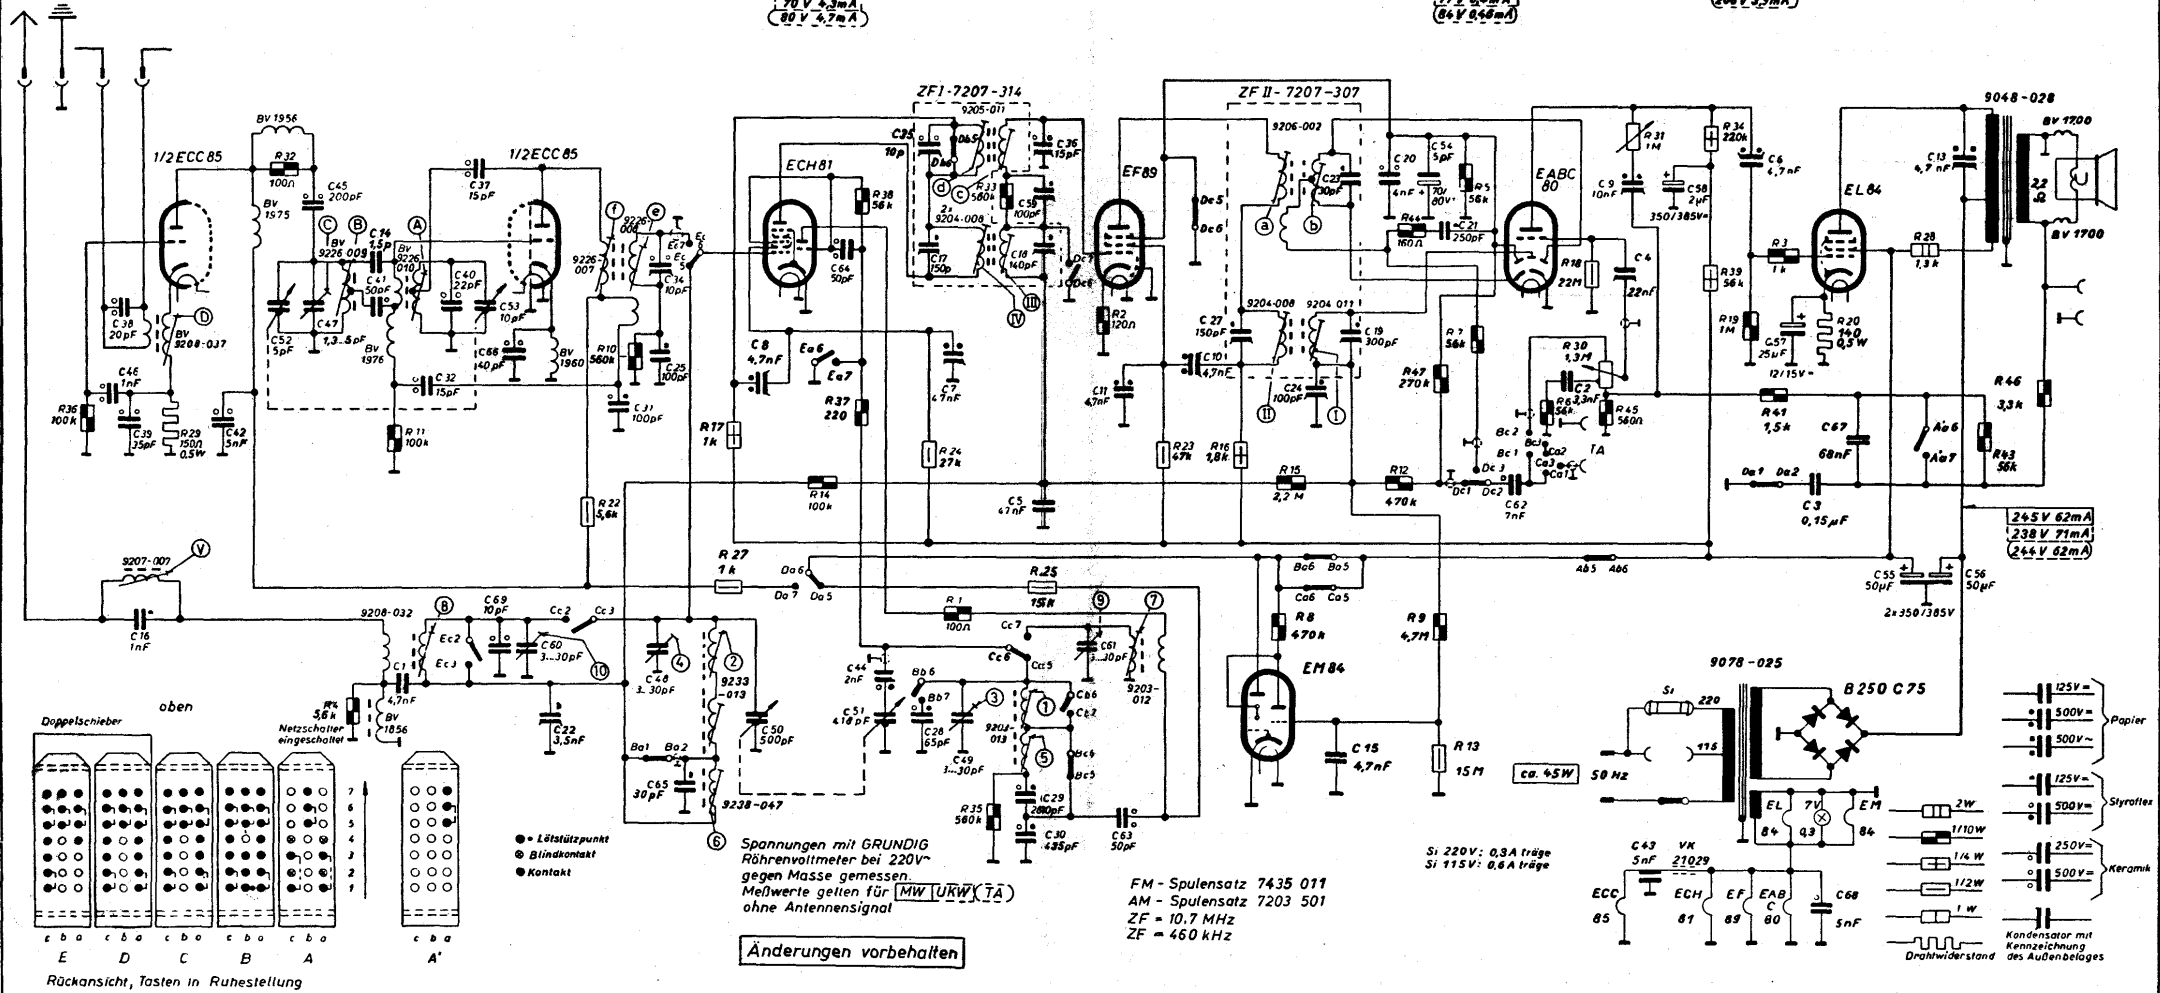


Musikgerät 97

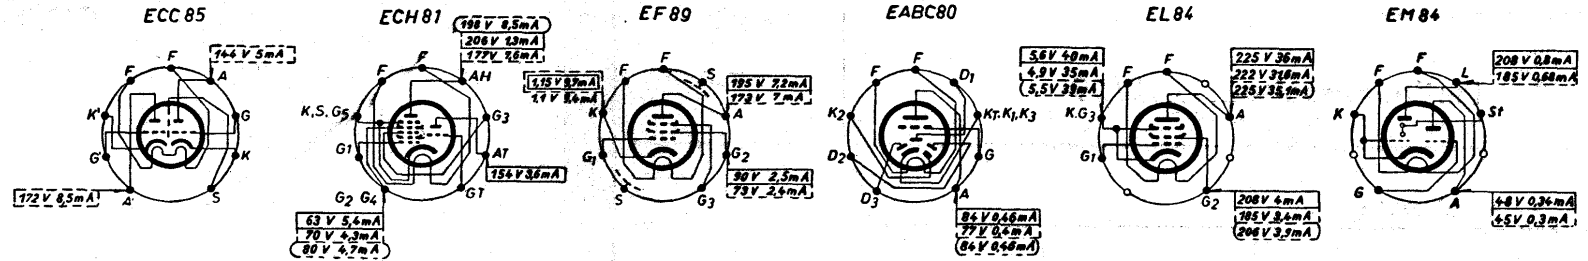

C:	16.	46.	38.39.	42.	52.	45.	47.	41.	1.14	32.40.	37.53.66.	60.22.	31.	48.34.	25.	50.8	64.51.44.	28.35.17.49.	7.	36.58.	18.5.	30.61.11.63.	10.	27.	43.	24.15.23.19.	20.	21.54.26.	62.	2.	4.	9.	43.50.	6.	57.3.67.68.	55.	56.	13.
R:	36.	29.		32.	4.	11.				22.	10.	27,17.	14.	37.38.	24.	1.	33.35.	25.	2.	23.	16.	8.15.	44.12.47.	13.9.5.	7.	6.	18.	30.45.21.42.	31.	34.	39.	19.41.3.	20.	28.	43.46.			