



Telefunken **T 777 WK** Tosca

Schalter	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Kurz 1															
Kurz 2															
Mitten															
LA															

