


# Emerson Radio

MODEL CHASSIS  
31L15 120797  
31L17 120798  
31T15 120795  
31T17 120796

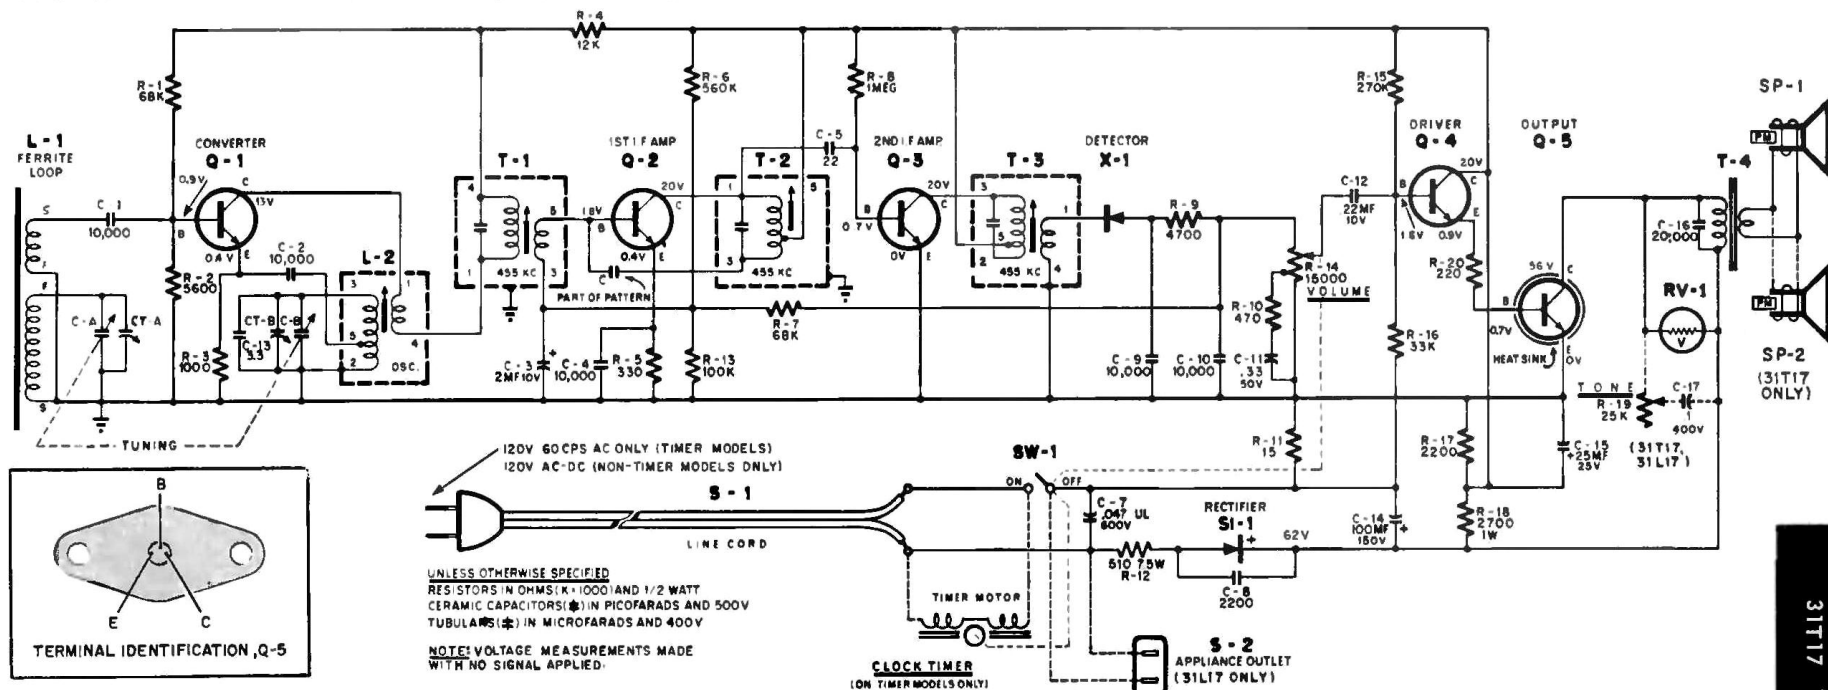

CH.120795,796,797,798

## ALIGNMENT INSTRUCTIONS

STEP	SIGNAL GENERATOR		RADIO DIAL SETTING	OUT PUT METER	ADJUST.
	COUPLING	FREQUENCY			
1	Form loop of several turns and radiate signal into receiver.	455 KC	Variable condenser fully open.	Across voice coil.	T-3 T-2 T-1
2	As above	600 KC	600 KC	As above	L-2
3	As above	1638 KC	Variable condenser fully open.	As above	Trimmer CT-B (Osc.)
4	As above	1420 KC	Tune for maximum output.	As above	Trimmer CT-A (Ant.)

