


1966


# Emerson Radio

MODELS: 31T12, 31T13,  
31L12 31L13, 31L14  
CHASSIS: 120818, 120819

(For schematic diagram  
see page at right)

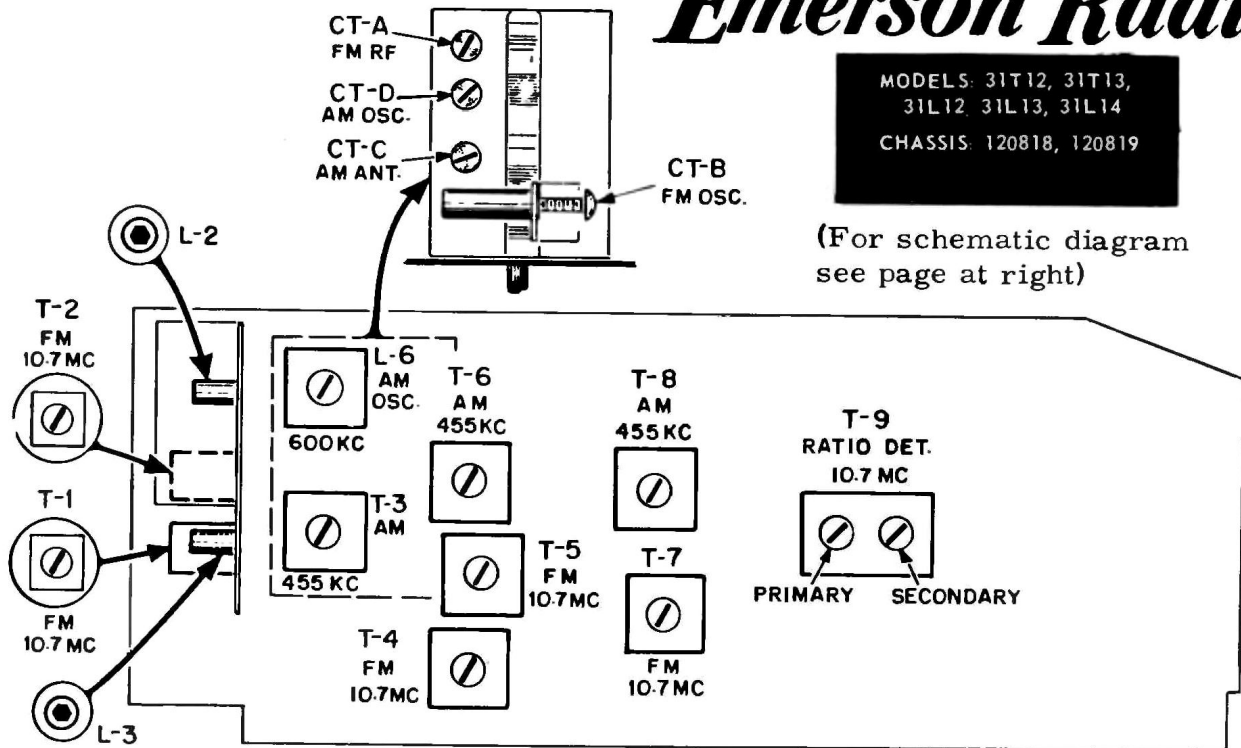


ALIGNMENT POINTS

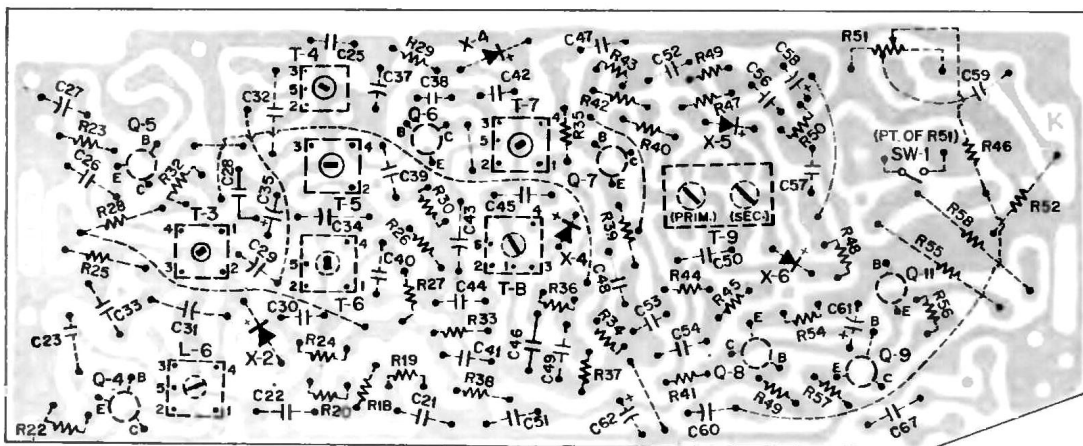


ETCHED CIRCUIT  
BOARD - MAIN  
CHASSIS SECTION  
(BOTTOM VIEW)

DIAL-CORD STRINGING VIEWED FROM FRONT

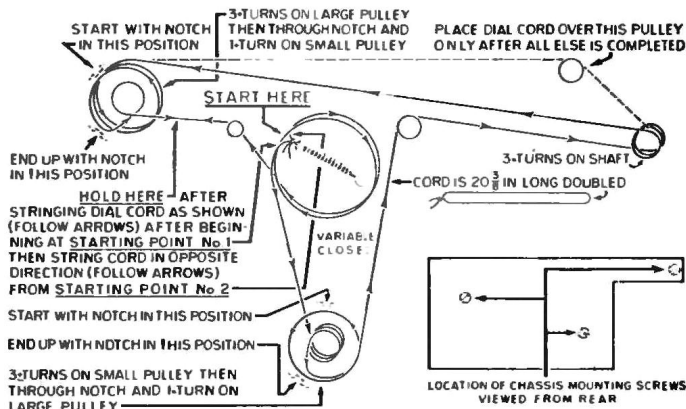

**NOTE** WHEN REMOVING OR REPLACING CHASSIS, IT IS RECOMMENDED THAT LEAD DRESSING AND CAPTIVATION BE MAINTAINED.

DIAL STRINGING

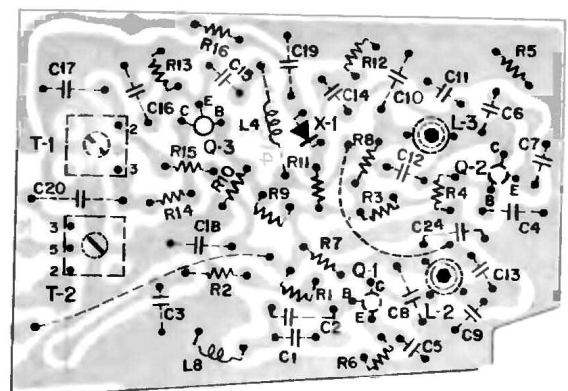

ETCHED CIRCUIT  
BOARD - TUNING  
SECTION  
(BOTTOM VIEW)

