



S: 13,12,16,23,23a,17,1a,1b,1c, 2a,2b,3,60,61, 14,26,36,27,37,15,28, 40,41, 42,63, 46, 48, 50,51, 52,53, 56.
 C: 69, 23, 70,19,36,6, 67,71,72, 1, 28,29, 7, 2,30, 34,31, 35,32,33,37, 52,55, 57, 53, 59,54,58,60, 62, 61, 64,63,68,
 R: 5, 7, 8,9, 1, 10, 21,26,11,14,12,13,15, 16, 27,18,19,29, 29,24,25,22,23.

PL. ANTENA
 Conmutador de ondas 4 posiciones: Fono, OC-2, OC-3, ON,
 Conmutador de ondas en pos. Fono

Conmutador radio-fono acoplado con el conmut. de ondas,
 2 posiciones: Fono-Radi

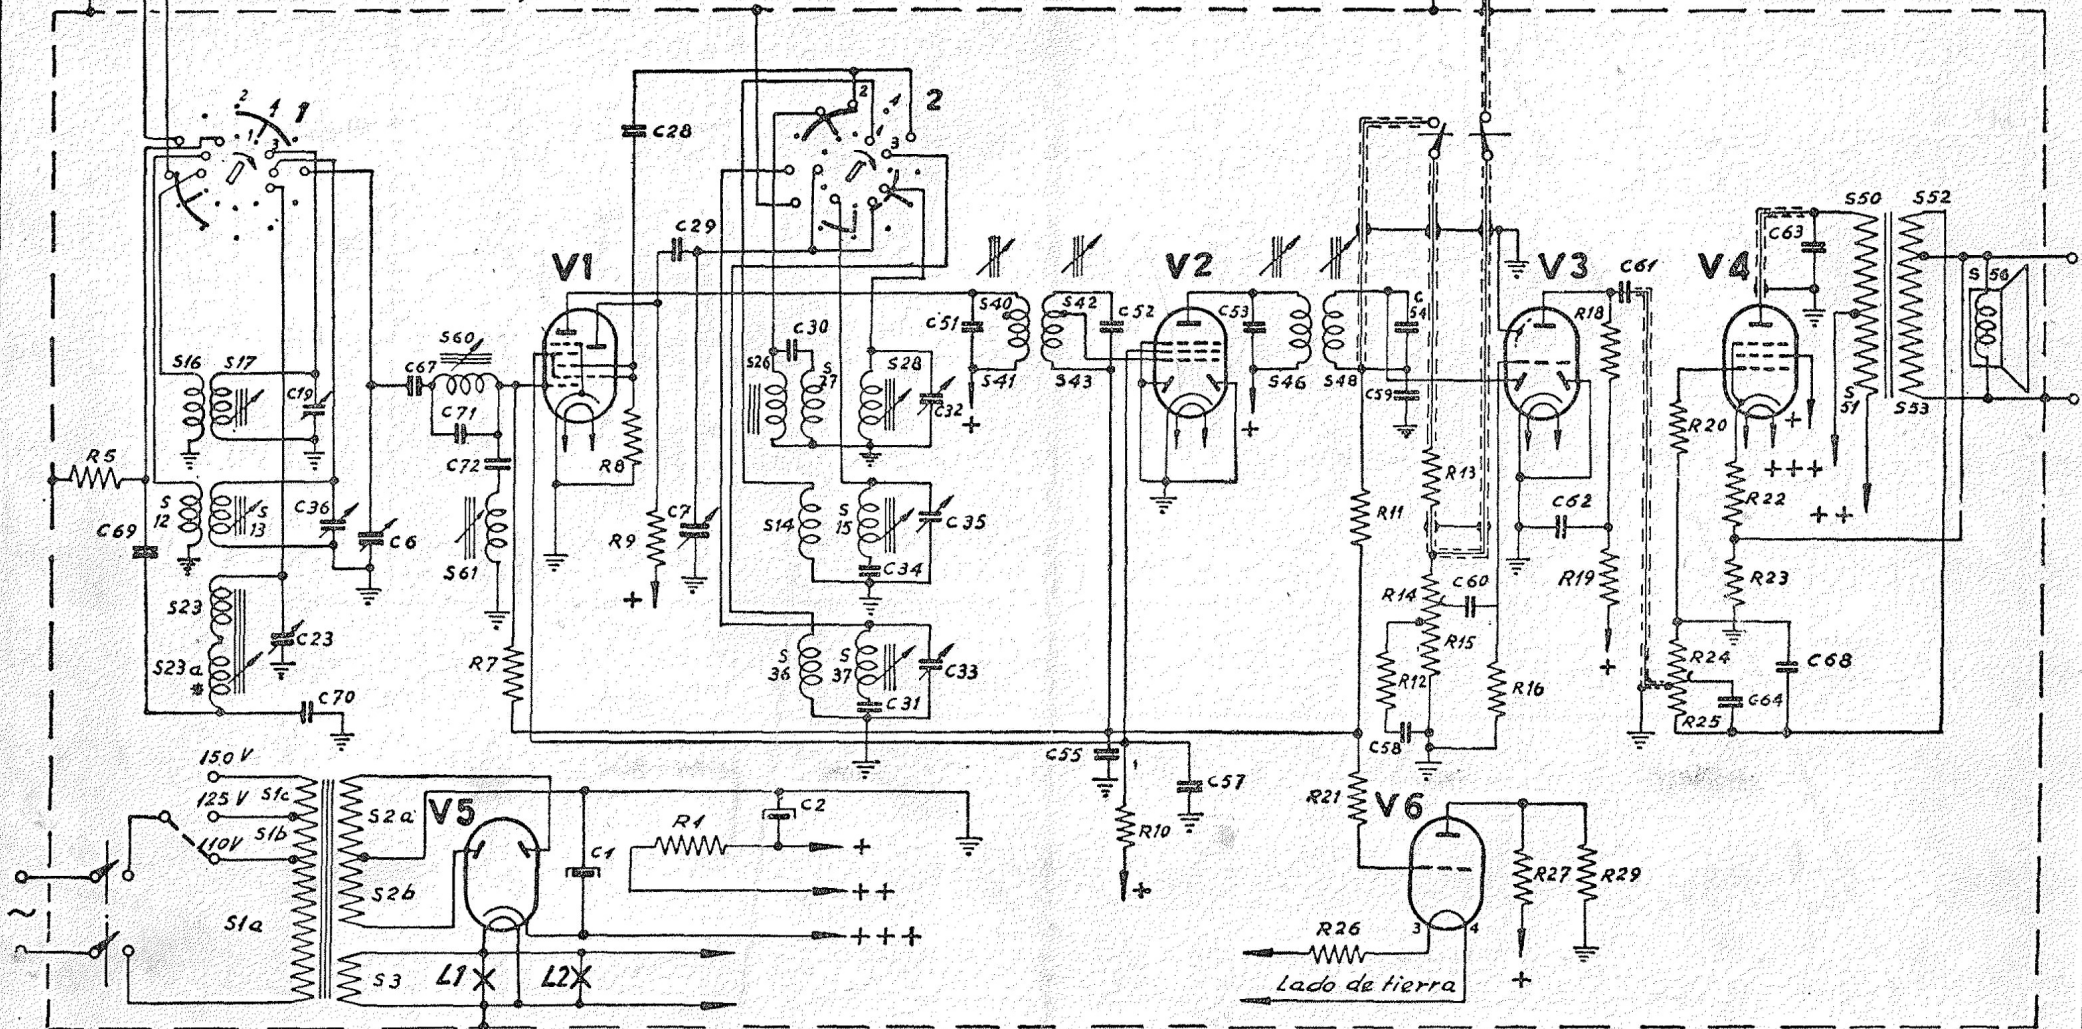

* Bobina O.N. sobre barra de ferrocubo

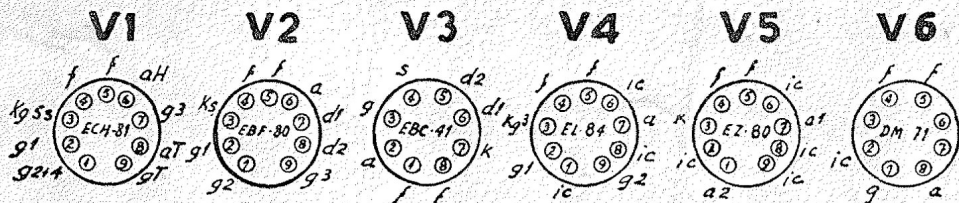

Receptor "ASKAR" 454-A