



Marconi 502

Part No.	Description.	Part No.
ELECTRICAL COMPONENTS OF UNIT—continued.		
7632	Insulating bush	7632
776	Insulating washer	776
1527-C	H.F. choke	1527-C
4087	Screw securing CK 1	4087
4750-C	L.F. choke	4750-C
1518	Shorting link for CK 2	1518
4087	Screw securing shorting link	4087
4518-F	Interval transformer	4518-F
2462	Screws securing T 1 & CK 2	2462
3166	Shakeproof washer	3166
7571-A	Mains transformer with pillars	7571-A
2458	Voltage adjusting screw	2458
7637	Nut securing T 2 to chassis	7637
6000-B	Volume control, 10,000 ohm	6000-B
4400	Large nut securing VR 1 and VR 2	4400
90201-C	Hum adjustment potentiometer	90201-C
7974-A	Fixed condenser, 5,000 mmfd. (.0005)	7974-A
4774-A	" " 300 mmfd. (.0003)	4774-A
7607-A	" " 50 mmfd. (.00003)	7607-A
1872-A	" " 2,000 mmfd. (.002)	1872-A
4774-A	" " 300 mmfd. (.0003)	4774-A
4087	Screw securing condenser block	4087
5612	Nut for above screw	5612
3165	Shakeproof washer	3165
1872-A	Fixed condenser, 2,000 mmfd. (.002)	1872-A
5662-A	Fixed condenser, 8.0 mid. electro-lytic	5662-A
5662-A	" " 8.0 mid. electro-lytic	5662-A
2701	Screw securing C 15, C 16, C 19	2701
5603	Nut for above screw	5603
7581-A	Fixed Condenser, 1.0 mid.	7581-A
5662-A	" " 1.0	5662-A
5787-F	" " 1.0	5787-F
5787-J	" " 1.0	5787-J
5787-A	" " 1.0	5787-A
5787-I	" " 1.0	5787-I
5786-C	" " 1.0	5786-C
8763-A	" " 1.0	8763-A
5787-Q	" " 1.0	5787-Q
5786-F	" " 1.0	5786-F
5787-K	" " 1.0	5787-K
5787-F	" " 1.0	5787-F
5787-P	" " 1.0	5787-P
5786-P	" " 1.0	5786-P
5786-E	" " 1.0	5786-E
5786-E	" " 1.0	5786-E
10167-A	" " 1.0	10167-A
5787-M	" " 1.0	5787-M
740-B	" " 1.0	740-B
759-B	" " 1.0	759-B
4277	Local distant switch (for Com-ponents, see under Mechanical Components)	4277
4863	Change over switch (for Com-ponents, see under Mechanical Components)	4863
PLUGS, SOCKETS, BUSHES, ETC., ON RADIO UNIT—		
	Mains plug pin	
	Insulating block pin	