



The push button switch is shown with MW button pressed.

Each button is in effect a two-position switch; the two positions are shown by solid and open bars. All switches, with the exception of MW (Button No. 11), are shown in the "off" position; the contacts closed when the button is pressed are shown by open bars as explained above.

The lay-out of the contacts is a physical representation of the actual switch, and will be helpful in tracing the circuit.