

Trinitron Color TV

Operating Instructions _____

GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

FD Trinitron
WEGA









KV-XR34


KV-XR29

KV-XR25


WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 220 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

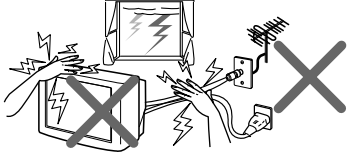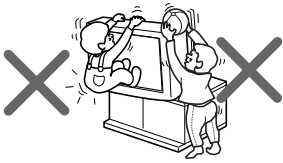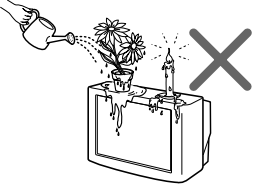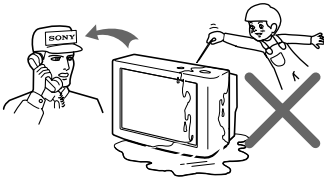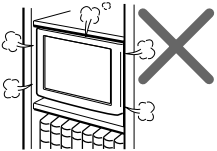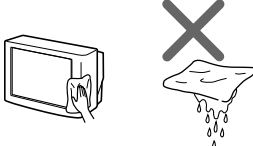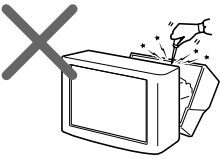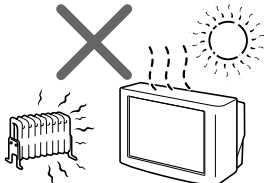
| | |
|--|---|
|  <p>For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.</p> |  <p>For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.</p> |
|  <p>Do not place any objects on the TV. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.</p> |  <p>Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.</p> |
|  <p>Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.</p> |  <p>Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.</p> |
|  <p>Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.</p> |  <p>Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.</p> |

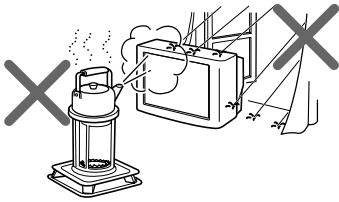


To prevent fire or shock hazard, do not expose the TV to rain or moisture.

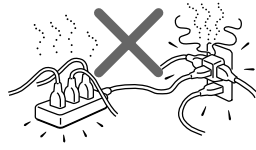

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

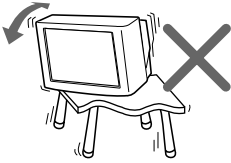


Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.




screws



clamps




band

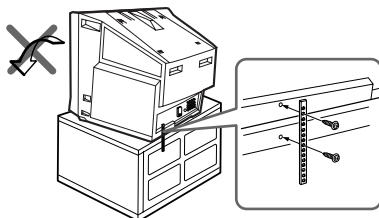

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

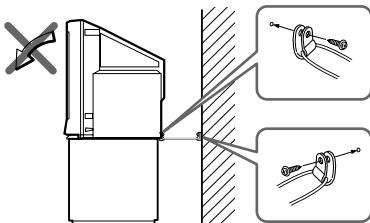

- (1) Put a cord or chain through the clamps.
- (2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

| | |
|---|---|
| Getting Started | 6 |
| Setting up your TV ("Initial Setup") | 7 |

Overview of Controls

| | |
|---|---|
| TV front and rear panels | 8 |
| Using the remote control and basic functions | 9 |

Advanced Operations

| | |
|--|----|
| Selecting the picture and sound modes | 11 |
| Enjoying stereo or bilingual programs | 12 |
| Viewing Teletext | 13 |

Menu Adjustment


| | |
|---|----|
| Introducing the menu system | 14 |
| Changing the "Picture" setting | 17 |
| Changing the "Sound" setting | 18 |
| Changing the "Timer" setting | 20 |
| Changing the "Channel Setup" setting | 21 |
| Changing the "Setup" setting | 23 |

Additional Information

| | |
|------------------------------------|------------|
| Connecting optional components ... | 24 |
| Troubleshooting | 26 |
| Specifications | Back cover |

GB

■ Getting Started

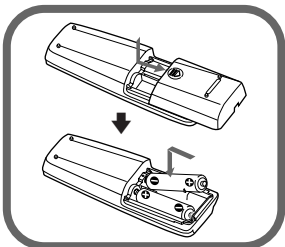


Step 1


Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

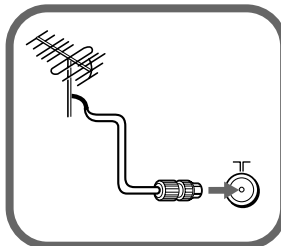


Step 2


Connect the antenna cable (not supplied) to  (antenna input) at the rear of the TV.

Tip


- You can also connect your TV to other optional components (see page 24).

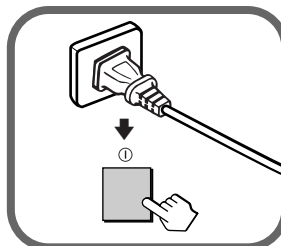


Step 3

Plug in the power cord, then press  on the TV to turn it on.

Note

- The  (standby) indicator flashes green for a few seconds when turning on the TV. This does not indicate a malfunction.

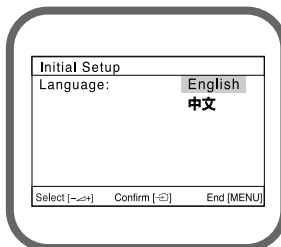

Step 4



Set up the TV by following the instructions of the "Initial Setup" menu (see page 7).

■ Setting up your TV ("Initial Setup")


When you turn on your TV for the first time, the "Initial Setup" menu will appear. You may change the menu language, preset the TV channels automatically and adjust the picture position using the buttons on the TV front panel.



Tip

- The MENU,  and  buttons on the remote control can also be used for the operations below.


- 1 Press  +/- to select the desired menu language, then press .


The selected menu language appears.

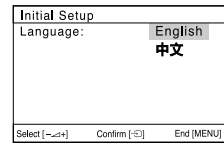




- 2 Press  +/- to select "Yes", then press  to preset the channels automatically or select "No" to skip automatic channel presetting.


Once you select "Yes", your TV will start searching for all the available channels.

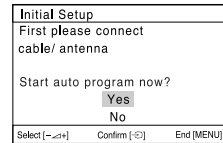


If the message "No channel found. Please connect cable/antenna." appears, check your TV connections, then press .




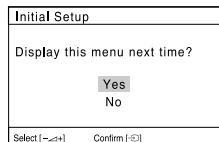
- 3 Press  +/- to adjust the bars on the top and bottom of the menu if they are slanted, then press .

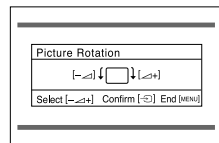If no adjustment is necessary, then press .



- 4 Press  +/- to select "No", then press . This menu will not appear again the next time you turn on the TV by pressing .


To allow this menu to appear again, select "Yes", then press .



Tips


- You can immediately go to the end of the "Initial Setup" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 14).
- You can also preset the channels automatically by pressing MENU (AUTO PROG) button on the TV front panel for about five seconds.

TV front and rear panels

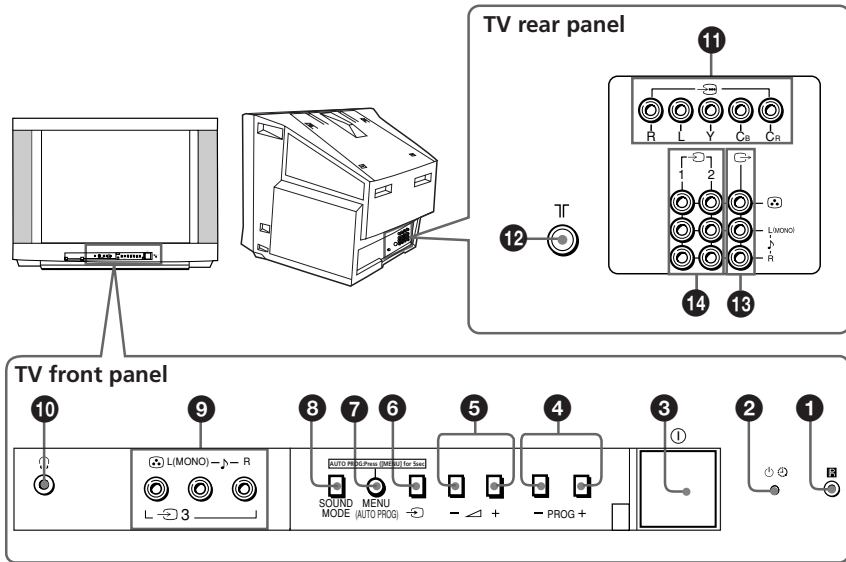

| Button/Terminal | Function | Page |
|------------------------|---|------|
| 1 | Remote control sensor. | - |
| 2 | Standby indicator. | 6 |
| 2 | Wake Up indicator. | 20 |
| 3 | Turn off or turn on the TV. | 6 |
| 4 PROG +/- | Select program number. | - |
| 5 | Adjust volume. | - |
| 6 | Select TV or video input. | 24 |
| Menu operations | | |
| 5 | Select and adjust items. | - |
| 6 | Confirm selected items. | - |
| 7 MENU | Display or cancel the menu. | - |
| 7 (AUTO PROG) | Preset channels automatically. | 7 |
| 8 SOUND MODE | Select sound mode options. 5-Band Graphic Equalizer display will appear. | 11 |
| 9 | Video input terminal 3. | 24 |
| 10 | Headphone jack. | - |
| 11 | Component video input terminal. | 25 |
| 12 | Antenna input terminal. | 24 |
| 13 | Monitor output terminal. | 24 |
| 14 | Video input terminal 1, 2. | 24 |



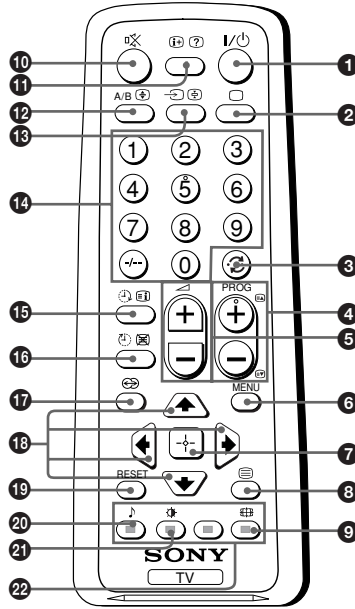










Using the remote control and basic functions



| Button | Description | Page |
|---------------|---|------|
| 1 I/⏻ | Turn off temporarily or turn on the TV. | – |
| 2 □ | Display the TV program. | – |
| 3 ↺ | Jump to last program number that has been watched for at least five seconds. | – |
| 4 PROG +/- | Select program number. | – |
| 5 ∟ +/- | Adjust volume. | – |
| 9 📺 | Change the picture size: "On" (16:9 wide-mode), "Off". | – |
| 10 🔇 | Mute the sound. | – |
| 11 ⓘ | Display on-screen information. | – |
| 13 ↶ | Select TV or video input. | 24 |
| 14 0 – 9, -/- | Input numbers. | – |
| 17 🔄 | Select surround mode options: "On" (surround), "Simulated" (stereo-like monaural sound), "Off". | – |
| 19 RESET | Set TV to factory setting. | 26 |


continue

continued

| Button | Description | Page |
|--|---|------|
| 20  | Select sound mode options. 5-Band Graphic Equalizer display will appear. | 11 |
| 21  | Select picture mode options. | 11 |
| Menu operations | | |
| 6 MENU | Display or cancel the menu. | 16 |
| 7  | Confirm selected items. | 16 |
| 18  | Select and adjust items. | 16 |
| Timer operations | | |
| 15  | Set TV to turn on automatically. | - |
| 16  | Set TV to turn off automatically. | - |
| Teletext operations (green label) | | |
| 4  | Display the next or previous page. | 13 |
| 8  | Display Teletext broadcast. | 13 |
| 11  | Reveal concealed information. | 13 |
| 12  | Enlarge the Teletext display. | 13 |
| 13  | Stop Teletext display from scrolling. | 13 |
| 15  | Display Teletext service contents. | 13 |
| 16  | Show TV screen while waiting for Teletext page. | 13 |
| 22 ■ (red, green, yellow, blue) | Access a FASTEXT menu. | 13 |
| Stereo/bilingual operations | | |
| 12 A/B | Select stereo/bilingual mode | 12 |

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “Personal” option.

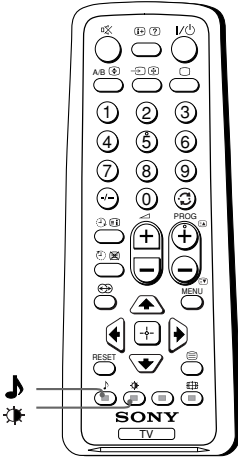





Selecting the picture mode

Press to select the desired picture mode.

| Select | To view |
|------------|---|
| “Dynamic” | high contrast pictures. |
| “Standard” | normal pictures. |
| “Soft” | mild pictures. |
| “Personal” | the last adjusted picture setting from the “Picture Adjustment” option in the menu (see page 17). |


Selecting the sound mode

Press (or SOUND MODE on the front panel) to select the desired sound mode. 5-Band Graphic Equalizer display will appear.

| Select | To listen to |
|--|---|
| “Dynamic”  | dynamic and clear sound that emphasizes both the low and high tones. |
| “Drama”  | sound that emphasizes voice and high tones. |
| “Soft”  | soft, natural and relaxing sounds. |
| “Personal”  | the last adjusted sound setting from the “Sound Adjustment” option in the menu (see page 19). |

■ Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

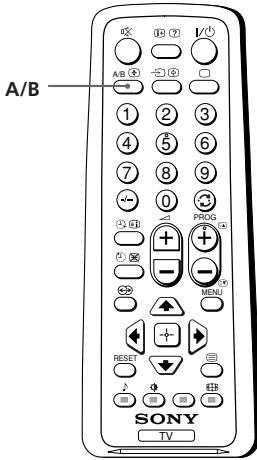

When receiving a NICAM program

| Broadcasting | On-screen display (Selected sound) |
|-----------------|--|
| NICAM stereo | NICAM (Stereo sound) → Mono (Regular sound) |
| NICAM bilingual | NICAM Main (Main sound) → NICAM Sub (Sub sound) → Mono (Regular sound) |
| NICAM monaural | NICAM Main (Main sound) → Mono (Regular sound) |

When receiving an A2 program


| Broadcasting | On-screen display (Selected sound) |
|--------------|--|
| A2 stereo | Stereo (Stereo sound) → Mono (Regular sound) |
| A2 bilingual | Main (Main sound) → Sub (Sub sound) |



Note




- If the stereo sound is noisy when receiving a stereo program, select “Mono”. The sound becomes monaural but the noise is reduced.

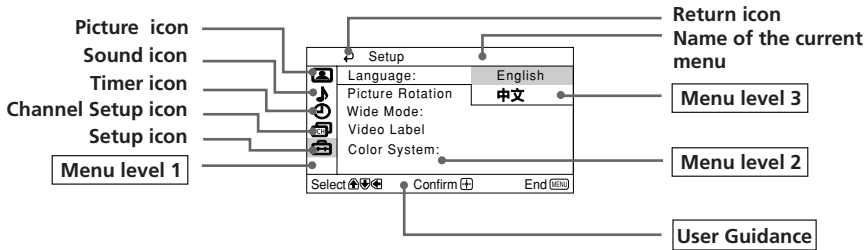Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.




| Level 1 | Level 2 | Level 3/Function | Page |
|--|-----------------------|---|------|
| "Picture"  | "Mode" | Select the picture mode: "Dynamic" → "Standard" → "Soft" → "Personal" | 17 |
| | "Picture Adjustment" | Adjust the "Personal" option: "Picture" → "Brightness" → "Color" → "Hue" → "Sharpness" → "Reset" | |
| | "Color Temperature" | Adjust white color tint: "Cool" → "Neutral" → "Warm" | |
| | "VM" | Sharpen the edges of each object: "High" → "Low" → "Off" | |
| | "Intelligent Picture" | Optimize picture quality: "On" → "Off" | |
| "Sound"  | "Mode" | Select the sound mode: "Dynamic" → "Drama" → "Soft" → "Personal" | 18 |
| | "Sound Adjustment" | Adjust sound frequency settings of "Personal" option: "Adjust" → "Reset" | |
| | "Balance" | Select to emphasize the left and right speakers. | |
| | "Intelligent Volume" | Adjust volume automatically: "On" → "Off" | |
| | "Surround" | Select the surround mode: "On" → "Simulated" → "Off" | |

| Level 1 | Level 2 | Level 3/Function | Page |
|--|--------------------|--|------|
| "Timer"  | "Sleep Timer" | Set TV to turn off automatically. | 20 |
| | "Wake Up Timer" | Set TV to turn on automatically. | |
| "Channel Setup"  | "Auto Program" | Preset channels automatically. | 21 |
| | "Manual Program" | Preset channels manually. | |
| | "TV System" | Select the TV system: "B/G" → "I" → "D/K" → "M" | |
| | "Program Label" | Label the program number. | |
| | "Program Block" | Block unwanted programs. | |
| "Setup"  | "Language" | Change the menu language: "English" → "中文" (Chinese) | 23 |
| | "Picture Rotation" | Adjust the picture position. | |
| | "Wide Mode" | Change the picture size: "On" (16:9 wide-mode) → "Off" | |
| | "Video Label" | Label the connected equipment. | |
| | "Color System" | Select the color system: "Auto" → "PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43" | |


continue

continued


How to use the menu

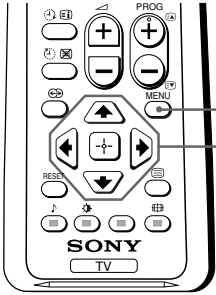


Press MENU to display the menu.



Press \uparrow or \downarrow to select the desired item.



Press \rightarrow (or \leftarrow) to confirm your selection and go to the next level.



The menu screens shown are:

- Picture Menu:** Mode: Dynamic, Picture Adjustment, Color Temperature: Cool, VM: High, Intelligent Picture: On. Buttons: Select, Confirm, End.
- Channel Setup Menu:** Auto Program, Manual Program, TV System: B/G, Program Label, Program Block. Buttons: Select, Confirm, End.
- Channel Setup Menu (next level):** Auto Program, Manual Program, TV System: B/G, Program Label, Program Block. Buttons: Select, Confirm, End.

Other menu operations

| To | Press |
|--------------------------------------|---|
| Adjust the setting value | \uparrow , \downarrow , \leftarrow or \rightarrow . |
| Move to the next/previous menu level | \leftarrow or \rightarrow . |
| Cancel the menu | MENU. |


Tips

- If you want to exit from Menu level 2 to Menu level 1, press \uparrow or \downarrow until the return icon (\curvearrowright) is highlighted, then press \rightarrow .
- The MENU, \curvearrowright and \triangle +/- buttons on the TV front panel can also be used for the operations above (see page 8).

■ Changing the “Picture” setting

The “Picture” menu allows you to adjust the picture settings.

- 1 Press MENU.
- 2 Make sure the “Picture” icon (🖼️) is selected, then press (⏏).

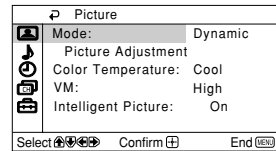

- 3 Press ↑ or ↓ to select the desired item (e.g., “Mode”), then press (⏏).

| Select | To |
|-------------------------------|---|
| “Mode” | choose either “Dynamic”, “Standard”, “Soft” or “Personal”* (see page 11). |
| “Color Temperature” | adjust white color tint. Choose either “Cool” (blue tint), “Neutral” (neutral tint) or “Warm” (red tint). |
| “VM” (Velocity Modulation) | sharpen the edges of each object. Choose either “High”, “Low” or “Off”. |
| “Intelligent Picture” | optimize picture quality. Press ↑ or ↓ to select “On”, then press (⏏). To cancel, select “Off”, then press (⏏). |

* You can adjust the setting to your personal preference in the “Picture Adjustment”, “Color Temperature” and “VM” options only when the “Personal” mode is selected.

Adjusting the “Picture Adjustment” items under “Personal” mode

- 1 Press ↑ or ↓ to select either “Picture” (contrast), “Brightness”, “Color”, “Hue” (color tones) or “Sharpness”, then press (⏏).
Selecting “Reset” will set your TV to the factory setting.
- 2 Press ↑, ↓, ← or → to adjust the setting of your selected item, then press (⏏).
- 3 Repeat the above steps to adjust other items.
The adjusted settings will be received when you select “Personal”.



Notes


- “Hue” can be adjusted for the NTSC color system only.
- Reducing “Sharpness” can also reduce picture noise.


■ Changing the “Sound” setting



The “Sound” menu allows you to adjust the sound settings.

1 Press MENU.

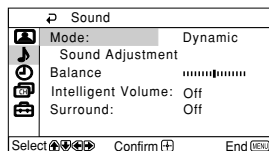2 Press **↑** or **↓** to select the “Sound” icon (), then press .




3 Press **↑** or **↓** to select the desired item (e.g., “Mode”), then press .

| Select | To |
|----------------------|--|
| “Mode” | choose either “Dynamic”, “Drama”, “Soft” or “Personal”* (see page 11). |
| “Balance” | Press ↓ or ← to emphasize the left speaker. Press ↑ or → to emphasize the right speaker. |
| “Intelligent Volume” | adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “On”, then press  .To cancel, select “Off”, then press  . |
| “Surround” | choose either “On”, “Simulated” or “Off” (see page 9). |


* You can adjust the setting to your personal preference in the “Sound Adjustment” option only when the “Personal” mode is selected (see page 19).






Adjusting the “Sound Adjustment” item under “Personal” mode

The 5-Band Graphic Equalizer feature allows you to adjust sound frequency settings of “Personal” mode in the menu.

- 1 Make sure that “Adjust” is selected, then press .

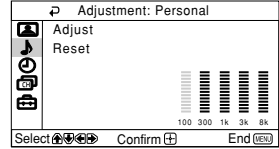
Selecting “Reset” will set your TV to the factory setting.



- 2 Press  or  to select the desired sound frequency, then press  or  to adjust the setting and press .

The adjusted settings will be received when you select “Personal”.

Notes


- Adjusting higher frequency will affect higher pitched sound and adjusting lower frequency will affect lower pitched sound.
- You may display the settings directly using the SOUND MODE button on the TV front panel (see page 8) or  button on the remote control (see page 10).

■ Changing the “Timer” setting

The “Timer” menu allows you to set TV to turn off and turn on automatically.

1 Press MENU.

2 Press **▲** or **▼** to select the “Timer” icon (⌚), then press **⏏**.

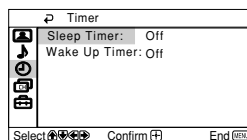

3 Press **▲** or **▼** to select the desired item (e.g., “Sleep Timer”), then press **⏏**.

| Select | To |
|-----------------|---|
| “Sleep Timer” | set TV to turn off automatically. Press ▲ or ▼ to select the desired period of time (max. of 1 hour and 30 minutes), then press ⏏ . |
| “Wake Up Timer” | set TV to turn on automatically. Press ▲ or ▼ to select the desired period of time (max. of 12 hours), then press ⏏ . After the selected length of time, the TV switches on automatically and “Wake Up Timer” will appear on the screen. The ⌚ indicator on the TV lights up amber once you set the “Wake Up Timer”. |

Notes


- You can also cancel “Sleep Timer” and “Wake Up Timer” by turning off the TV’s main power.
- If no buttons or controls are pressed for more than one hour after the TV is turned on using the “Wake Up Timer”, the TV automatically goes into standby mode.

■ Changing the “Channel Setup” setting

The “Channel Setup” menu allows you to preset channels automatically, manually preset channels, select the TV system, label the program number and block unwanted programs.

1 Press MENU.

2 Press **▲** or **▼** to select the “Channel Setup” icon (☰), then press (↵).

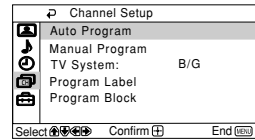

3 Press **▲** or **▼** to select the desired item (e.g., “Auto Program”), then press (↵).

| Select | To |
|------------------|--|
| “Auto Program” | preset channels automatically. |
| “Manual Program” | manually preset desired channels and channels that cannot be preset automatically (see Presetting channels manually on page 22). |
| “TV System” | select the TV system. Press ▲ or ▼ to select either “B/G”, “I”, “D/K” or “M”, then press (↵). |
| “Program Label” | label the program number. (1) Select “Program” and press (↵). Press ▲ or ▼ to select the program number, then press (↵). (2) Select “Label” and press (↵). Press ▲ or ▼ to select alphanumeric characters for the label, then press (↵). |
| “Program Block” | block unwanted programs. (1) Select “Program” and press (↵). Press ▲ or ▼ to select the program number, then press (↵). (2) Select “Block” and press (↵), then press ▲ or ▼ to choose either “On” or “Off”. If you preset a blocked program number, that program number will be unblocked automatically. |

Note





- During automatic channel presetting, your TV screen will indicate “Auto” for the “TV System”.


continue

continued

Presetting channels manually

1 After selecting “Manual Program”, select the program number to which you want to preset a channel.





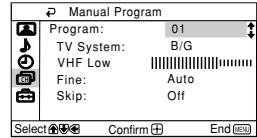

- (1) Make sure “Program” is selected, then press .
- (2) Press  or  until the program number you want to preset appears on the menu, then press .














2 Select the desired channel.

- (1) Make sure either “VHF Low”, “VHF High” or “UHF” is selected, then press .
- (2) Press  or  until the desired channel’s broadcast appears on the TV screen, then press .








3 If the sound of the desired channel is abnormal, select the appropriate TV system.

- (1) Press  or  to select “TV System”, then press .
- (2) Press  or  until the sound becomes normal, then press .

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the “Fine” tuning feature.

- (1) Press  or  to select “Fine”, then press .
 - (2) Press  or  to select “Manual”, then press .
 - (3) Press , ,  or  until the picture and sound quality are optimal, then press .
- The + or – icon on the menu flashes while tuning.

5 If you want to skip this program number when using PROG +/- , you can select the “Skip” feature.


- (1) Press  or  to select “Skip”, then press .
 - (2) Press  or  to select “On”, then press .
- To cancel, select “Off”, then press .

■ Changing the “Setup” setting

The “Setup” menu allows you to change the menu language, adjust the picture position, change the picture size, label the connected equipment and select the color system.

1 Press MENU.

2 Press **▲** or **▼** to select the “Setup” icon (⚙️), then press **⏏**.

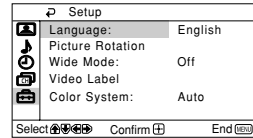


3 Press **▲** or **▼** to select the desired item (e.g., “Language”), then press **⏏**.

| Select | To |
|--------------------|---|
| “Language” | change the menu language. Press ▲ or ▼ to select either “English” or “中文” (Chinese), then press ⏏ . |
| “Picture Rotation” | adjust the picture position when it is not aligned with the TV screen. Press ◀ or ▶ to adjust the picture position, then press ⏏ . |
| “Wide Mode” | choose either “On” or “Off” (see page 9). |
| “Video Label” | label the connected equipment. (1) Select “Video Input” and press ⏏ . Press ▲ or ▼ to select the input you want to label, then press ⏏ . (2) Select “Label” and press ⏏ , then press ▲ or ▼ to select the label options: “Video 1/Video 2/Video 3/DVD”, “VCR”, “SAT”, “Game” or “Edit”*. * You may edit the video label. Press ▲ or ▼ to select alphanumeric characters for the label, then press ⏏ . |
| “Color System” | select the color system. Press ▲ or ▼ to select either “Auto”, “PAL”, “SECAM”, “NTSC3.58” or “NTSC4.43”, then press ⏏ . Normally, set this to “Auto”. |

■ Connecting optional components


Connecting to the video input terminal (→)

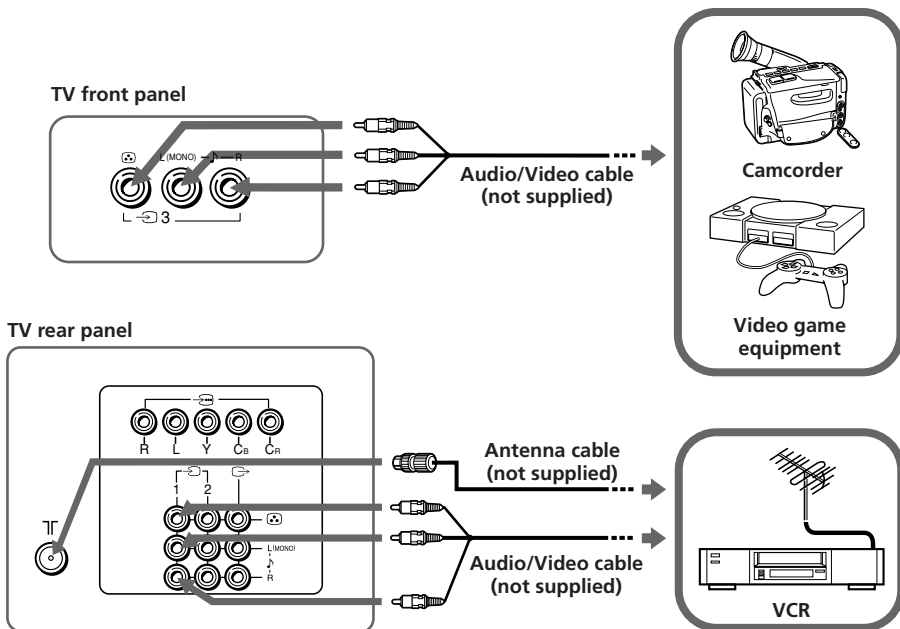

Notes


- If you connect a VCR to T (antenna input), preset the signal output from the VCR to the program number 0 on the TV (see page 22).

Connecting to the monitor output terminal (⇨)

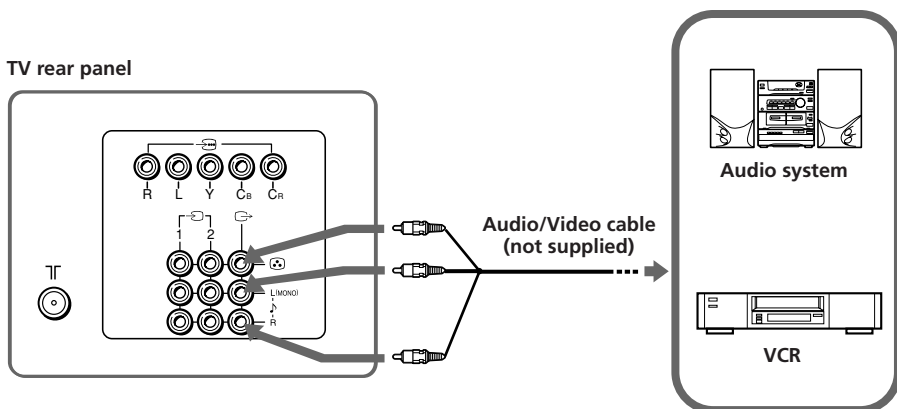

Connecting to the component video input terminal ()

TV rear panel

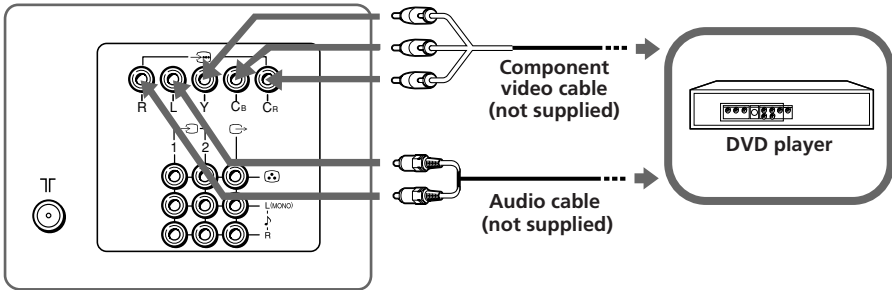

Notes


- If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to () (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

| Connect | To (on the DVD player) |
|-----------------------|---|
| Y (green) | Y |
| C _B (blue) | C _B , P _B , C _b or B-Y |
| C _R (red) | C _R , P _R , C _r or R-Y |

- If you select "DVD" on your TV screen, the signal from the () (monitor output) jacks will not be output properly. This does not indicate a malfunction.

Troubleshooting

If you find any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

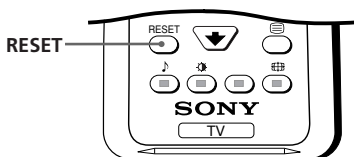














Reset function

Press the RESET button on your remote control. Your TV will go blank for a few seconds then the “Initial Setup” menu will appear.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.



Troubleshooting guide

| Symptom | Possible cause | Solutions | Page |
|--|---|--|---------|
| Snowy picture  | <ul style="list-style-type: none"> The connection is loose or the cable is damaged. The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and at the wall. Check the antenna setup. Contact a Sony dealer for advice. | 24 – |
| Noisy sound  | <ul style="list-style-type: none"> Channel presetting is inappropriate or incomplete. Signal transmission is low. | <ul style="list-style-type: none"> Display the “Channel Setup” menu and select “Manual Program” to preset the channel again. Try using a booster. | 22 – |
| Distorted picture  | <ul style="list-style-type: none"> Broadcast signals are too strong. | <ul style="list-style-type: none"> Turn off or disconnect the booster if it is in use. | – |
| Noisy sound  | | | |
| Good picture  | <ul style="list-style-type: none"> The TV system setting is inappropriate. | <ul style="list-style-type: none"> Display the “Channel Setup” menu and select the appropriate “TV System”. | 22 |
| Noisy sound  | | | |

| Symptom | Possible cause | Solutions | Page |
|---|--|--|---------|
| No picture  | <ul style="list-style-type: none"> The power cord, antenna or VCR is not connected. | <ul style="list-style-type: none"> Check the power cord, antenna and VCR connections. | 24 |
| No sound  | <ul style="list-style-type: none"> The TV is not turned on. | <ul style="list-style-type: none"> Press I/⏻ (power). Press Ⓛ (main power) on the TV to turn off the TV for about five seconds, then turn it on again. | 9 8 |
| Good picture  | <ul style="list-style-type: none"> The volume level is too low. | <ul style="list-style-type: none"> Press ▲ + to increase the volume level. | 9 |
| No sound  | <ul style="list-style-type: none"> The sound is muted. | <ul style="list-style-type: none"> Press 🔇 to cancel the muting. | 9 |
| Dotted lines or stripes  | <ul style="list-style-type: none"> There is local interference from cars, neon signs, hair dryers, power generators, etc. | <ul style="list-style-type: none"> Do not use a hair dryer or other equipment near the TV. Check the antenna setup. Contact a Sony dealer for advice. | – – |
| Double images or "ghosts"  | <ul style="list-style-type: none"> Broadcast signals are reflected by nearby mountains or buildings. | <ul style="list-style-type: none"> Use a highly directional antenna. Use the fine tuning ("Fine") function. | – 22 |
| | <ul style="list-style-type: none"> The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. | – |
| | <ul style="list-style-type: none"> Use of a booster is inappropriate. | <ul style="list-style-type: none"> Turn off or disconnect the booster if it is in use. | – |
| No color  | <ul style="list-style-type: none"> The color level setting is too low. | <ul style="list-style-type: none"> Display the "Picture" menu and select "Personal" of "Mode", then adjust the "Color" level in "Picture Adjustment". | 17 |
| | <ul style="list-style-type: none"> The color system setting is inappropriate. | <ul style="list-style-type: none"> Display the "Setup" menu and check the "Color System" setting (usually set this to "Auto"). | 23 |
| | <ul style="list-style-type: none"> The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. | – |

continue

continued

| Symptom | Possible cause | Solutions | Page |
|---|---|--|---------------------------------------|
| Picture slant  | <ul style="list-style-type: none"> The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV. | <ul style="list-style-type: none"> Keep external speakers or other electrical equipment away from the TV. Display the "Setup" menu and adjust "Picture Rotation" so that the picture position is optimal. | <p>–</p> <p>23</p> |
| Abnormal color patches  | <ul style="list-style-type: none"> The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV. | <ul style="list-style-type: none"> Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press Ⓚ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV. | <p>–</p> |
| TV cannot receive stereo broadcast sound. or Stereo broadcast sound switches on and off or is distorted. | <ul style="list-style-type: none"> The connection is loose or the cable is damaged. The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and at the wall. Check the antenna setup. Contact a Sony dealer for advice. | <p>24</p> <p>–</p> |
| "100" appears at the top of the screen and there is no Teletext display. | <ul style="list-style-type: none"> The channel carries no Teletext broadcast. | <p>—</p> | <p>13</p> |
| Teletext display is incomplete (snowy picture or double images). | <ul style="list-style-type: none"> Connection is loose or the cable is damaged. The antenna setup is inappropriate. Signal transmission is too low. | <ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR, and at the wall. Check the antenna setup. Contact a Sony dealer for advice. Try using a booster. Use the fine tuning ("Fine") function. | <p>24</p> <p>–</p> <p>–</p> <p>22</p> |

| Symptom | Possible cause | Solutions | Page |
|--|--|--|------|
| The $\text{\textcircled{P}}$ (standby) indicator on your TV flashes red several times after every three seconds. | <ul style="list-style-type: none"> Your TV's self-diagnosis function indicates the possible problems. | <ul style="list-style-type: none"> Count the number of times the $\text{\textcircled{P}}$ (standby) indicator flashes. Press $\text{\textcircled{P}}$ (main power) to turn off your TV. Contact your nearest Sony service center. | - |
| TV cabinet creaks. | <ul style="list-style-type: none"> Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction. | — | - |
| A small "boom" sound is heard when the TV is turned on. | <ul style="list-style-type: none"> The TV's demagnetizing function is working. This does not indicate a malfunction. | — | - |

Specifications

| | KV-XR34M31 | KV-XR29M31 | KV-XR25M31 | Note |
|---------------------------------|--|-----------------|------------------------------|---------------------|
| Power requirements | 220-240 V AC, 50/60 Hz | | | |
| Power consumption (W) | Indicated on the rear of the TV | | | |
| Television system | B/G, I, D/K, M | | | |
| Color system | PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43 | | | |
| Stereo/Bilingual system | NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G | | | |
| Teletext Language | English, French | | | |
| Channel coverage B/G | VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41 | | | |
| | VHF : 0 to 12, 5A, 19A UHF : 28 to 69 CATV : S01 to S03, S1 to S41 | | | Australia only |
| | VHF : 1 to 11 UHF : 21 to 69 CATV : S01 to S03, S1 to S41 | | | New Zealand only |
| I | UHF : B21 to B68 CATV : S01 to S03, S1 to S41 | | | |
| D/K | VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39 | | | |
| M | VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84 | | | |
| ⌚ (Antenna) | 75-ohm external terminal | | | |
| Audio output (Speaker) | 5 W + 5 W | | | |
| Number of terminal | | | | |
| 📺 (Video) | Input: 3 | Output: 1 | Phono jacks; 1 Vp-p, 75 ohms | |
| 🔊 (Audio) | Input: 3 | Output: 1 | Phono jacks; 500 mVrms | |
| 📺 (Component Video) | Input: 1 Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative C _B : 0.7 Vp-p, 75 ohms C _R : 0.7 Vp-p, 75 ohms Audio: 500 mVrms | | | |
| 🎧 (Headphone) | Output: 1 Stereo minijack | | | |
| Picture tube | 34 in. | 29 in. | 25 in. | |
| Tube size (cm) | 86 | 72 | 64 | Measured diagonally |
| Screen size (cm) | 80 | 68 | 60 | Measured diagonally |
| Dimensions (w/h/d, mm) | 895 × 674 × 590 | 772 × 576 × 516 | 696 × 513 × 499 | |
| Mass (kg) | 78 | 49 | 38 | |

Design and specifications are subject to change without notice.

<http://www.sony.net/>

Sony Corporation