


DIVISION OF GENERAL MOTORS CORPORATION

MODEL 980899

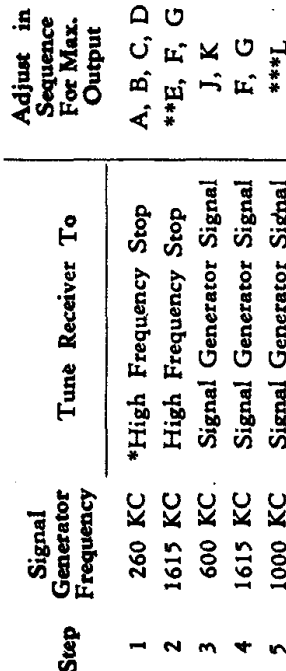

***“L” is the pointer adjustment screw on the end of the core guide bar—adjust so pointer reads 1000 KC.

In step 1, connect Generator thru 0.1 mfd. to pin B of 6SA7. in steps 2 to 5 use 62k mfd. to Ant. Con.