


# WARDS *Airline* RADIO

84GCB-1062A

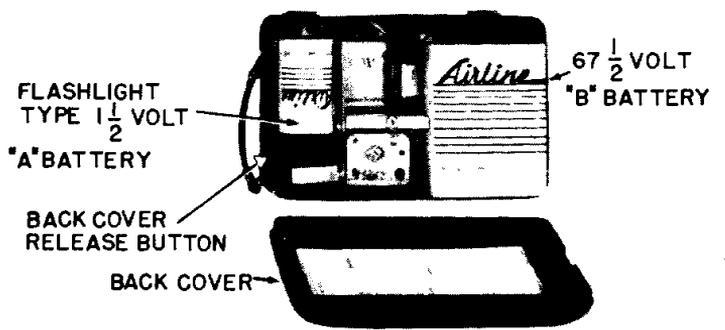

## ALIGNMENT PROCEDURE AND RECEIVER STAGE SENSITIVITIES

The signal source must be an accurately calibrated signal generator capable of supplying R.F. signals modulated 30% with a 400-cycle audio signal. A 400-cycle source is necessary for the audio measurements.

In order to make the adjustments listed in the table below, it is necessary to first remove the front panel in order to remove the chassis from the cabinet. The loop leads must also be disconnected (unsolder) and extended by means of short leads. The table below

lists the sensitivity at various points. All measurements are based on an output of 50 milliwatts. This may be measured by disconnecting the speaker voice coil and substituting a 3.2 ohm, 5 watt resistor across the secondary winding of the output transformer. A reading of .4 volts AC across this resistor will be equivalent to a 50-milliwatt output with the speaker connected. Variations of plus or minus 25% are usually permissible. Volume control at maximum for all adjustments.

SIGNAL GENERATOR				DIAL SETTING	ADJUST FOR MAXIMUM OUTPUT	INPUT FOR 50-MILLIWATT OUTPUT
Frequency	Coupling	Connection to Radio	Ground Connection			
455 KC	.1 mfd condenser	Stator lug Var. Capacitor (front section)	Chassis	Variable Condenser fully open	Trimmers 1st and 2nd I.F. transformer	100 microvolts
1650 KC	Coupling loop see note 1	None	None	Variable Condenser fully open	Oscillator Trimmer (Rear section)	-----
1500 KC	Coupling loop see note 2	None	None	1500 KC	Ant. trimmer (front section)	-----
400 cycles	.1 mfd condenser	High side of volume control	Chassis	-----	-----	.045 volts

Note 1 - Connect signal generator leads to a three turn radiating loop approximately 4" in diameter placed about 8" from the loop of the receiver.

Note 2 - After chassis is installed in cabinet and re-connected to its loop re-adjust the antenna trimmer by ear, with low signal input.

