


1549

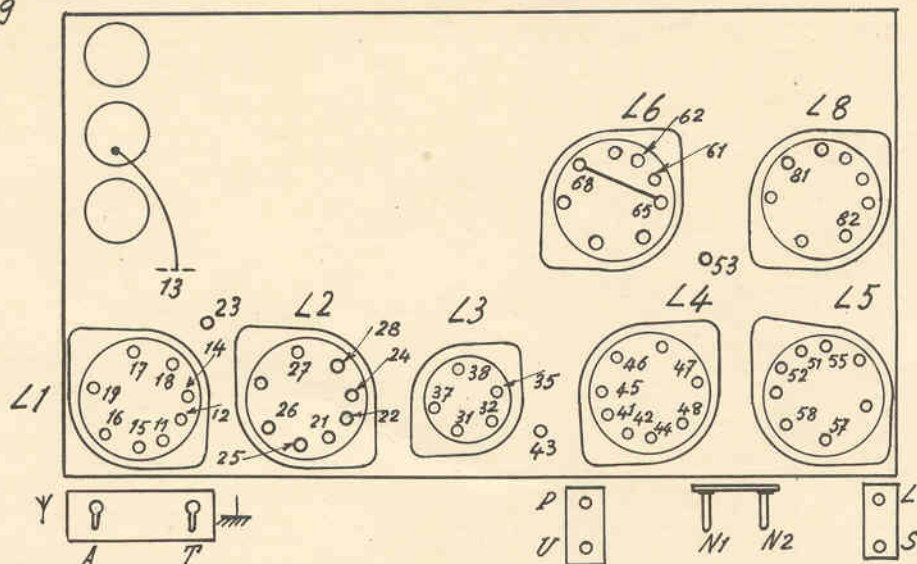

Circuits des Résistances

9	13	38	43	48	53	AxT	65	23											
	90	210	135	330	110	330	320	95											
10	19	17	27	45	47	28	16	18											
	130	320	320	415	320	415	315	420											
11	15	25	55	58	57														
	280	380	275	320	400														
12	35	14	24	44	37	68	N ₁ N ₂ x12	11x31	32x41	42x22	21x52	51x4	N ₁ N ₂ x62						
	5	5	5	5	5	165	110	5	5	5	5	5	290						

Circuits des Capacités

9	45	55	65																
	465	460	470																
10	16	58	17	28															
	225	430	225	260															
11	13	23	V	L	S														
	225	260	120	385	380														
12	T	A	43	48x53	P														
	200	170	180	90	205														

Placer le commutateur de A sur G.O.

" le volume contrôle sur le maximum

" le condensateur variable sur le maximum

Court-circuiter N₁ N₂ - faire les mesures par rapport au châssis

(Toutes les mesures ci-dessus ont été relevées pour une adaptation de 110/119V)