


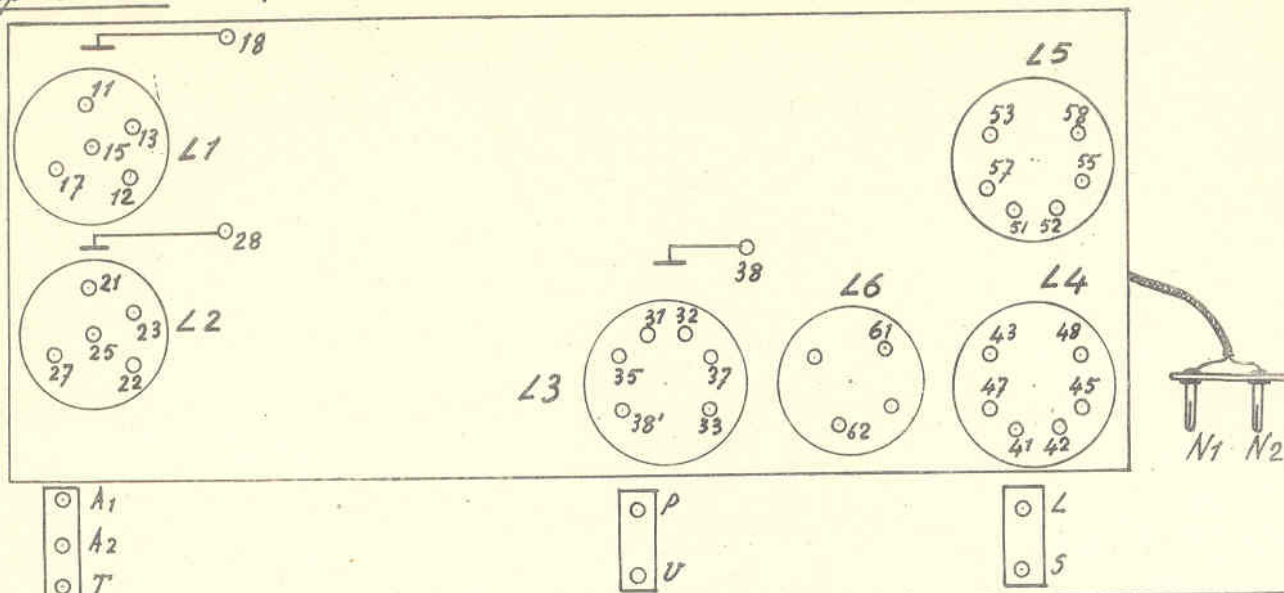

Circuits des Résistances

9	13	61	23	33	37	38'	38	43	53										
	35	365	100	75	360	50	260	105	105										
10	35	17	27																
	355	210	215																
11	45	47	55	57	18	28	48	58	62	N1N2									
	310	345	310	345	135	135	385	385	205	200									
12	15	25	32x11	12x21	22x51	57x42	41x62												
	10	10	10	10	10	10	10												

Circuits des Capacités

9	62																		
	130																		
10	17	27	35	37	57	58													
	300	330	150	120	330	270													
11	18x28	L	S																
	400	340	340																
12	11	12	13	32	33	61	31	35x38											
	415	400	37	400	90	310	380	195											

Placer le commutateur de longueurs d'ondes sur G.O.

" le volume contrôle au maximum

Les mesures seront faites par rapport au châssis.

Court-circuiter N1 N2

Tourner le condensateur variable vers le maximum.