


WALGREEN CO.

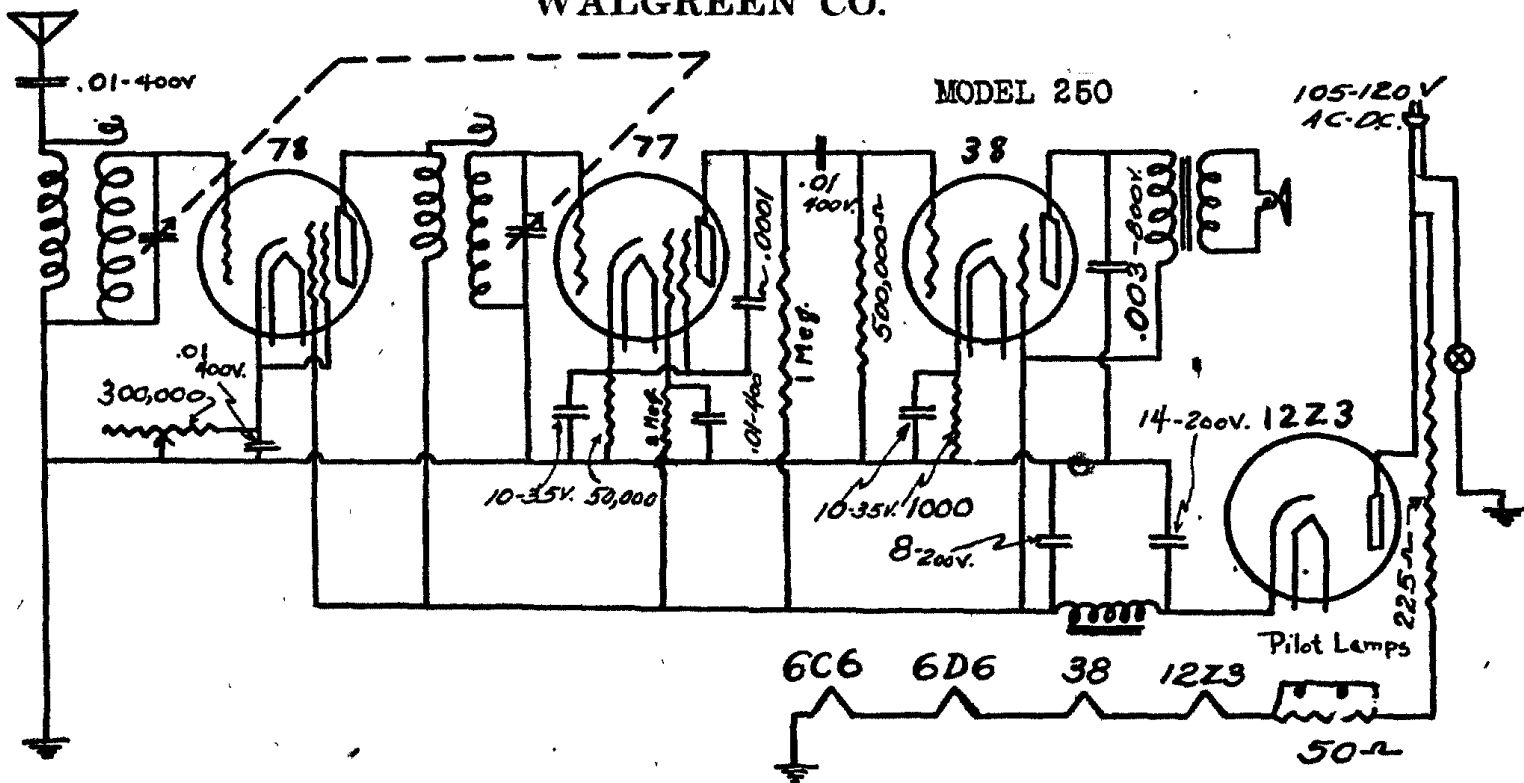

To balance set, remove chassis from cabinet then turn the condenser all the way up and adjust detector stage trimmer condenser to about 1720 kp and align RF stage for maximum gain.

Cordohm No. W55

